


Package number S24/0

ELBURG 2,5x2,5x2,5
Manual

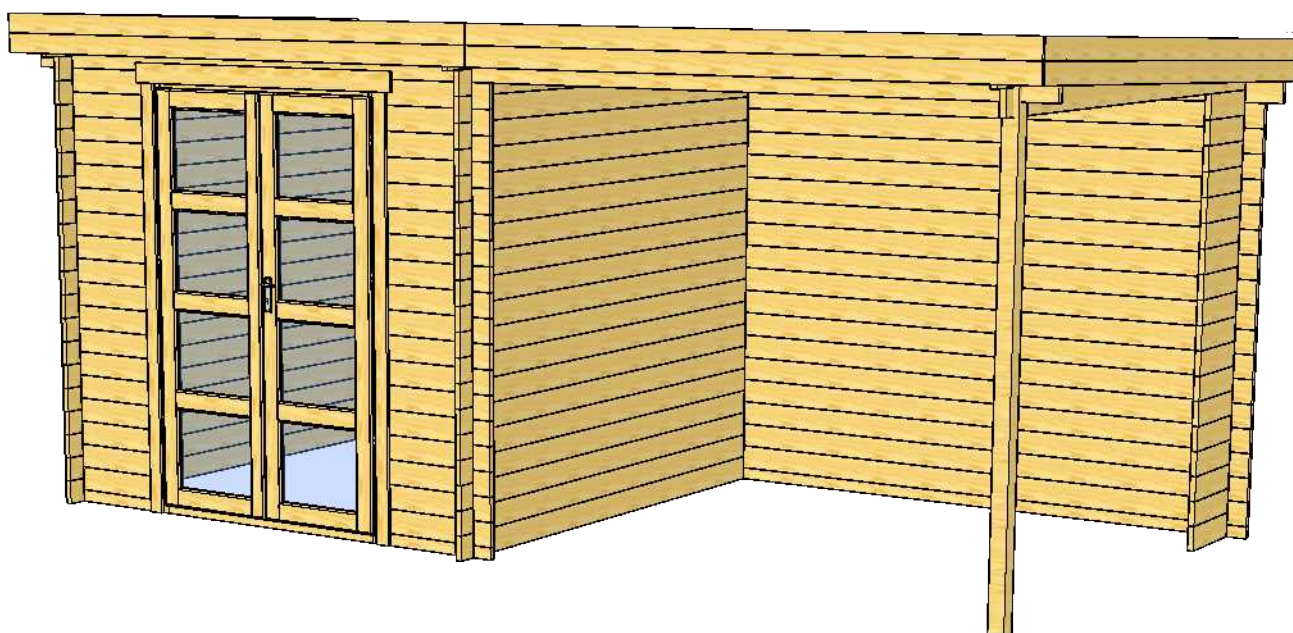

QC checked

ELBURG 2,5x2,5x2,5 LIST 28mm







Pos	Size, mm h x b x l			Quantity		Destination
3	28	55	4980	1		Wall B
3a	28	55	585	2		Wall A
4	28	110	4980	17		Wall B
5	28	110	5140	4+1		Wall A, B
5a	28	110	585	36		Wall A
6	28	110	2480	36		Wall C, D
7	28	110	500	18		Wall E
8	28	330	2560	3		Vault
9	34	140	5140	3		Rafter
10	16	90	2563	59		Roof board
11	16	90	2586	3+3		Wind board
11a	16	90	2579	2+2		Wind board
12	70	70	2450	1		Pillar
13				1		Pillar support (metal)
16	16	65	2042	4		
16a	16	90	1440	2		
19				1		2xDoor


Recommendations.








It is recommended to install a ventilation system in the house.



Assembly of the house requires at least minimum knowledge in the field of assembly of wood products. Otherwise, we recommend hiring a specialist.

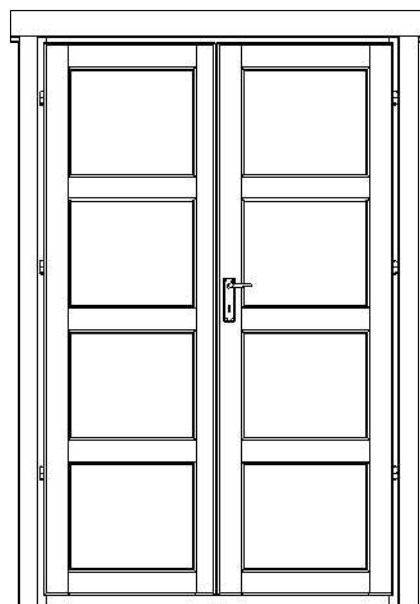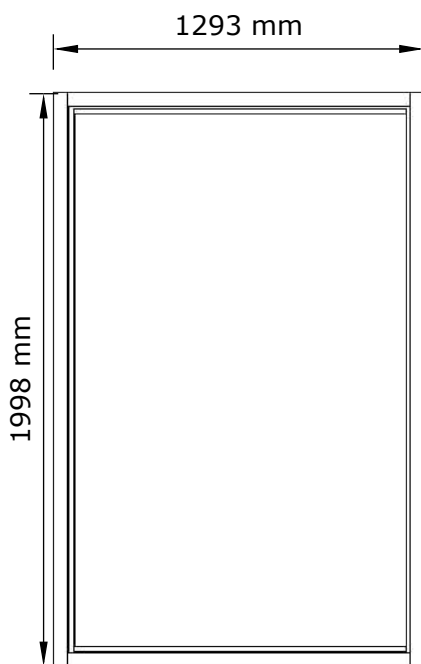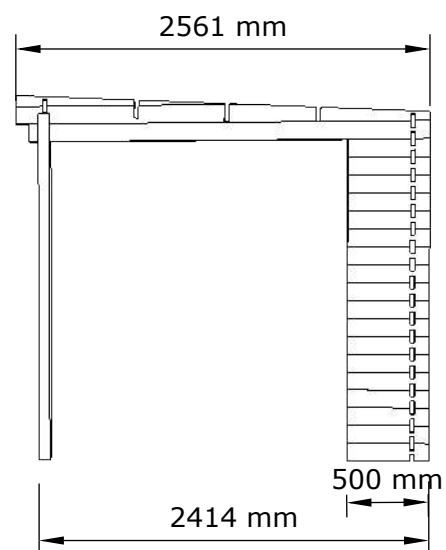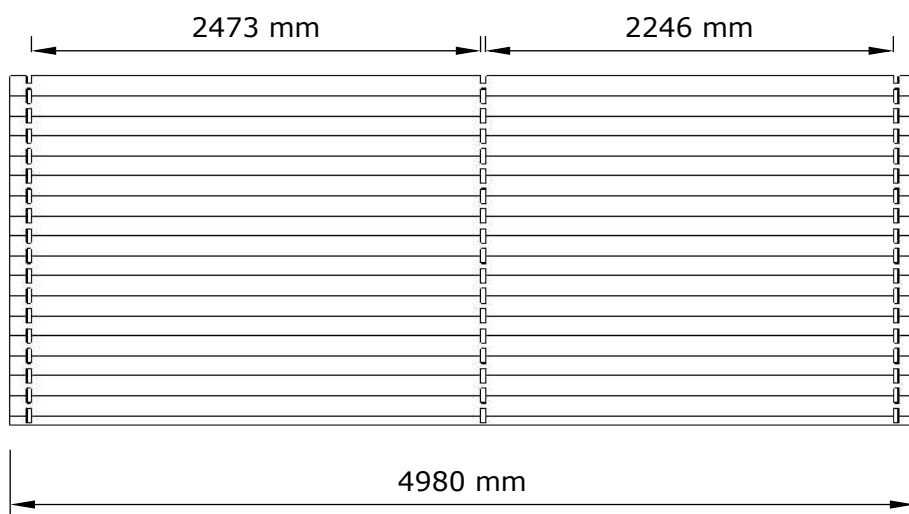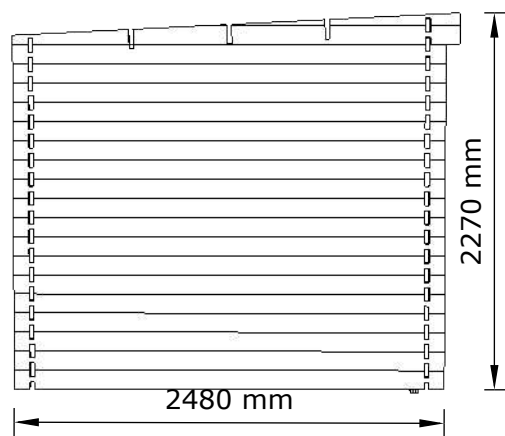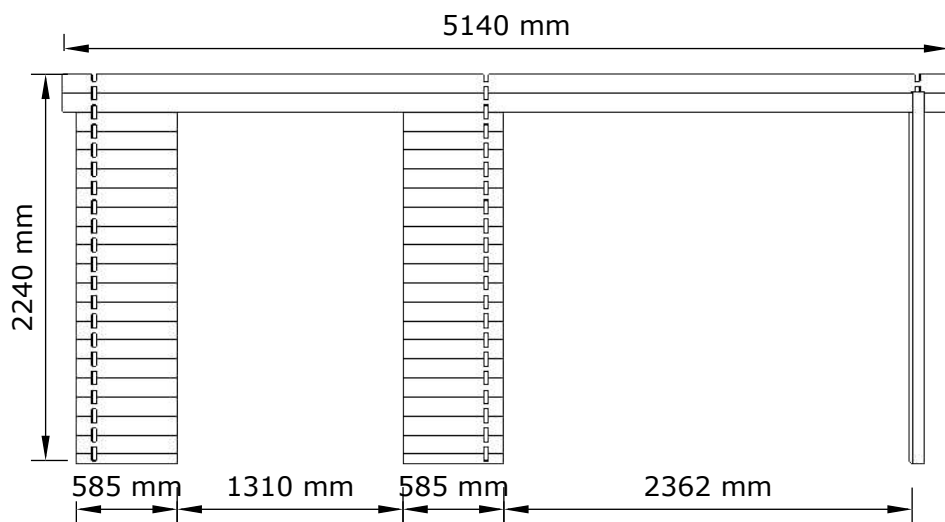


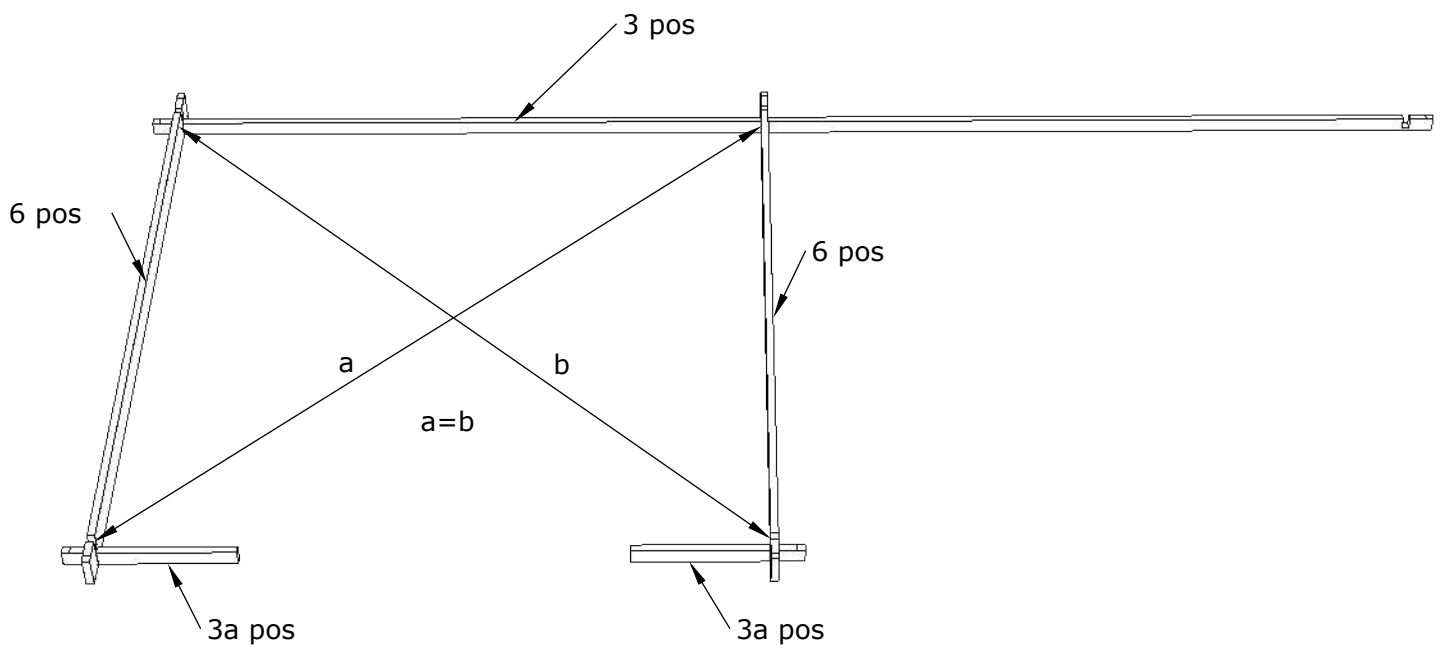

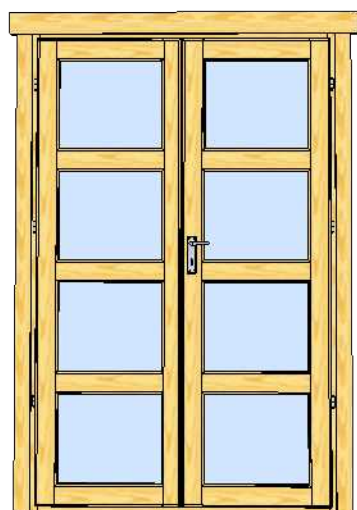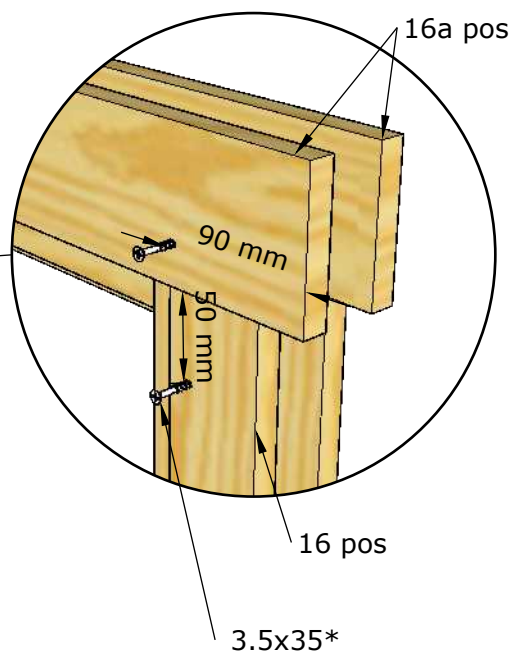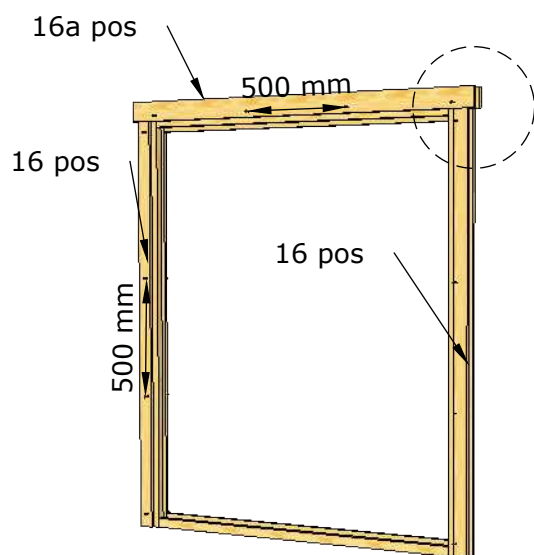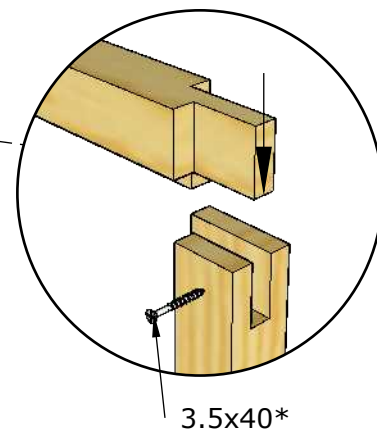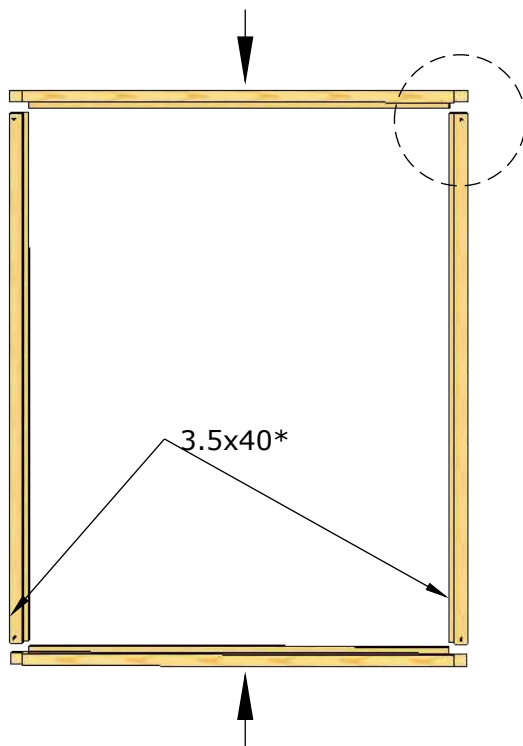





* - Screws are not included in the package

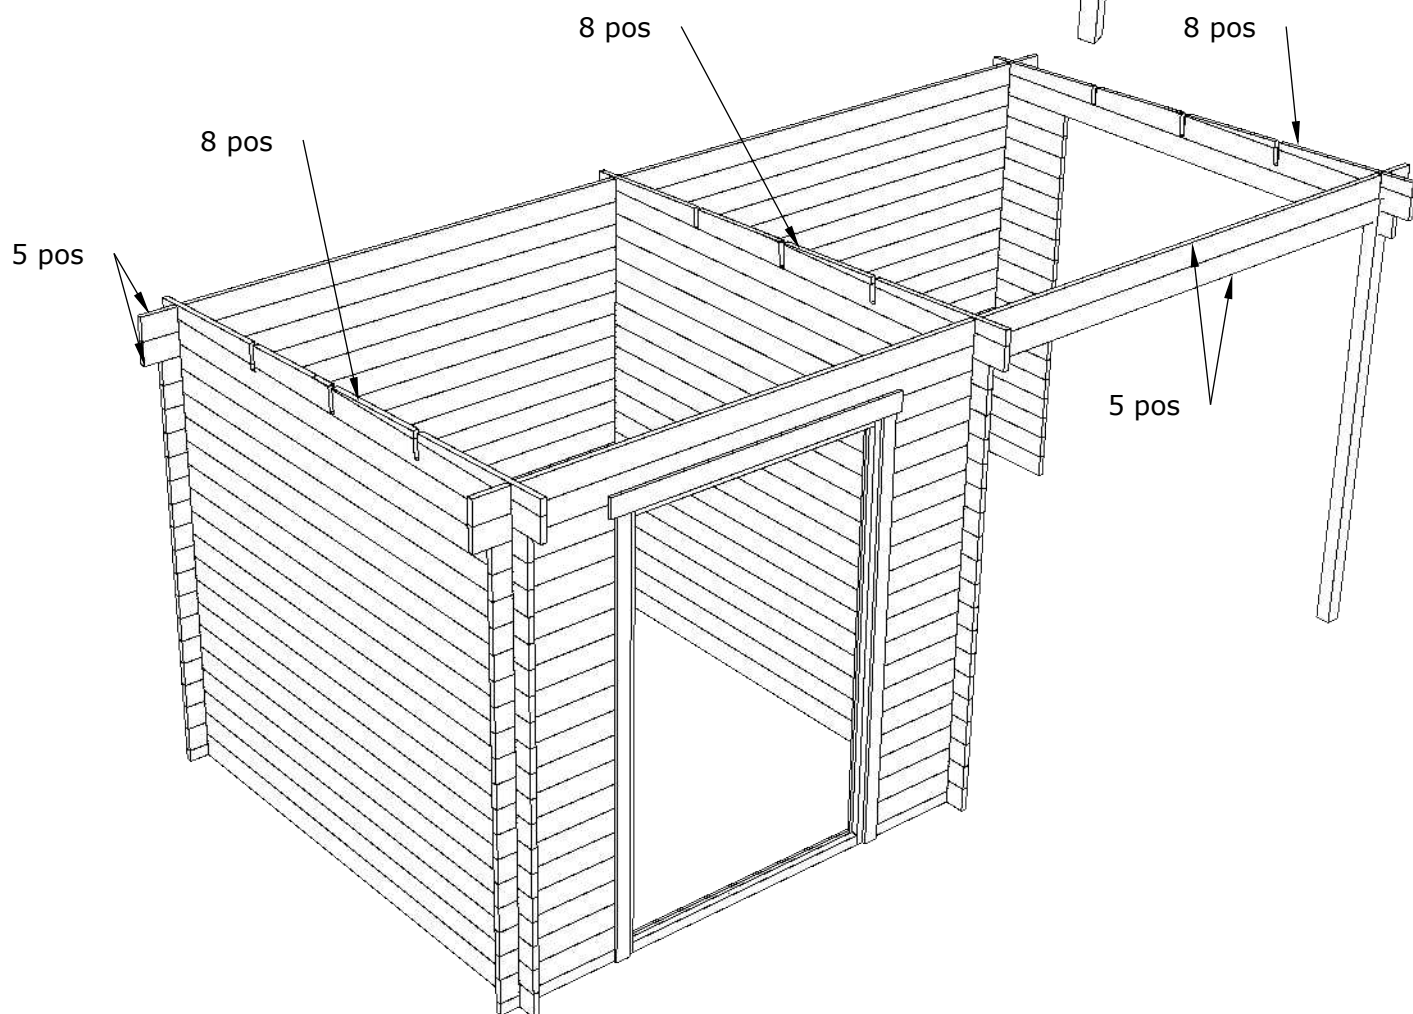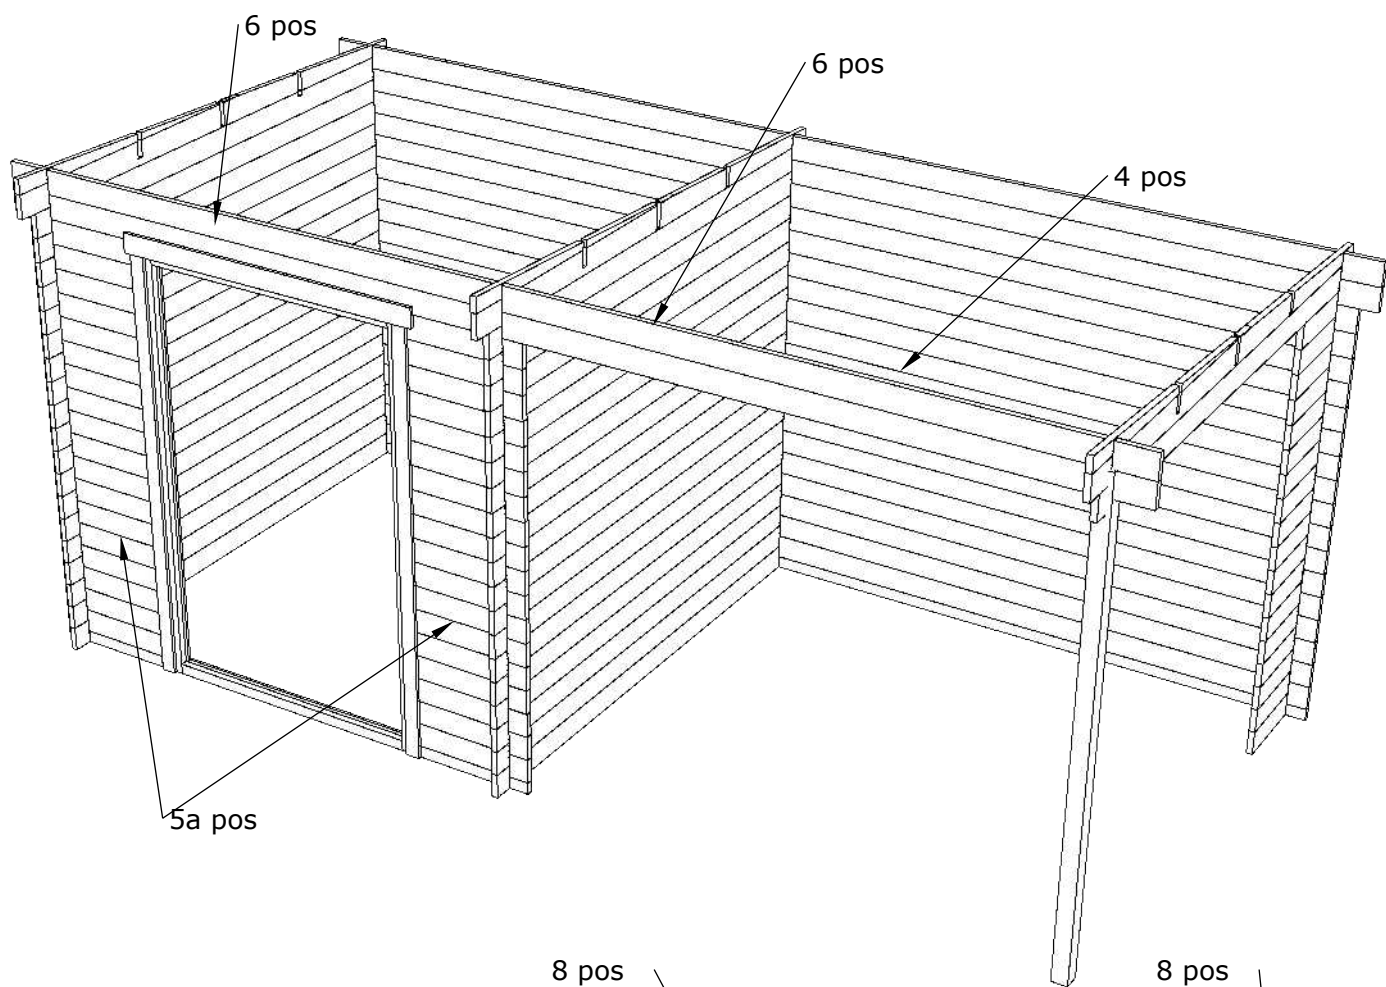

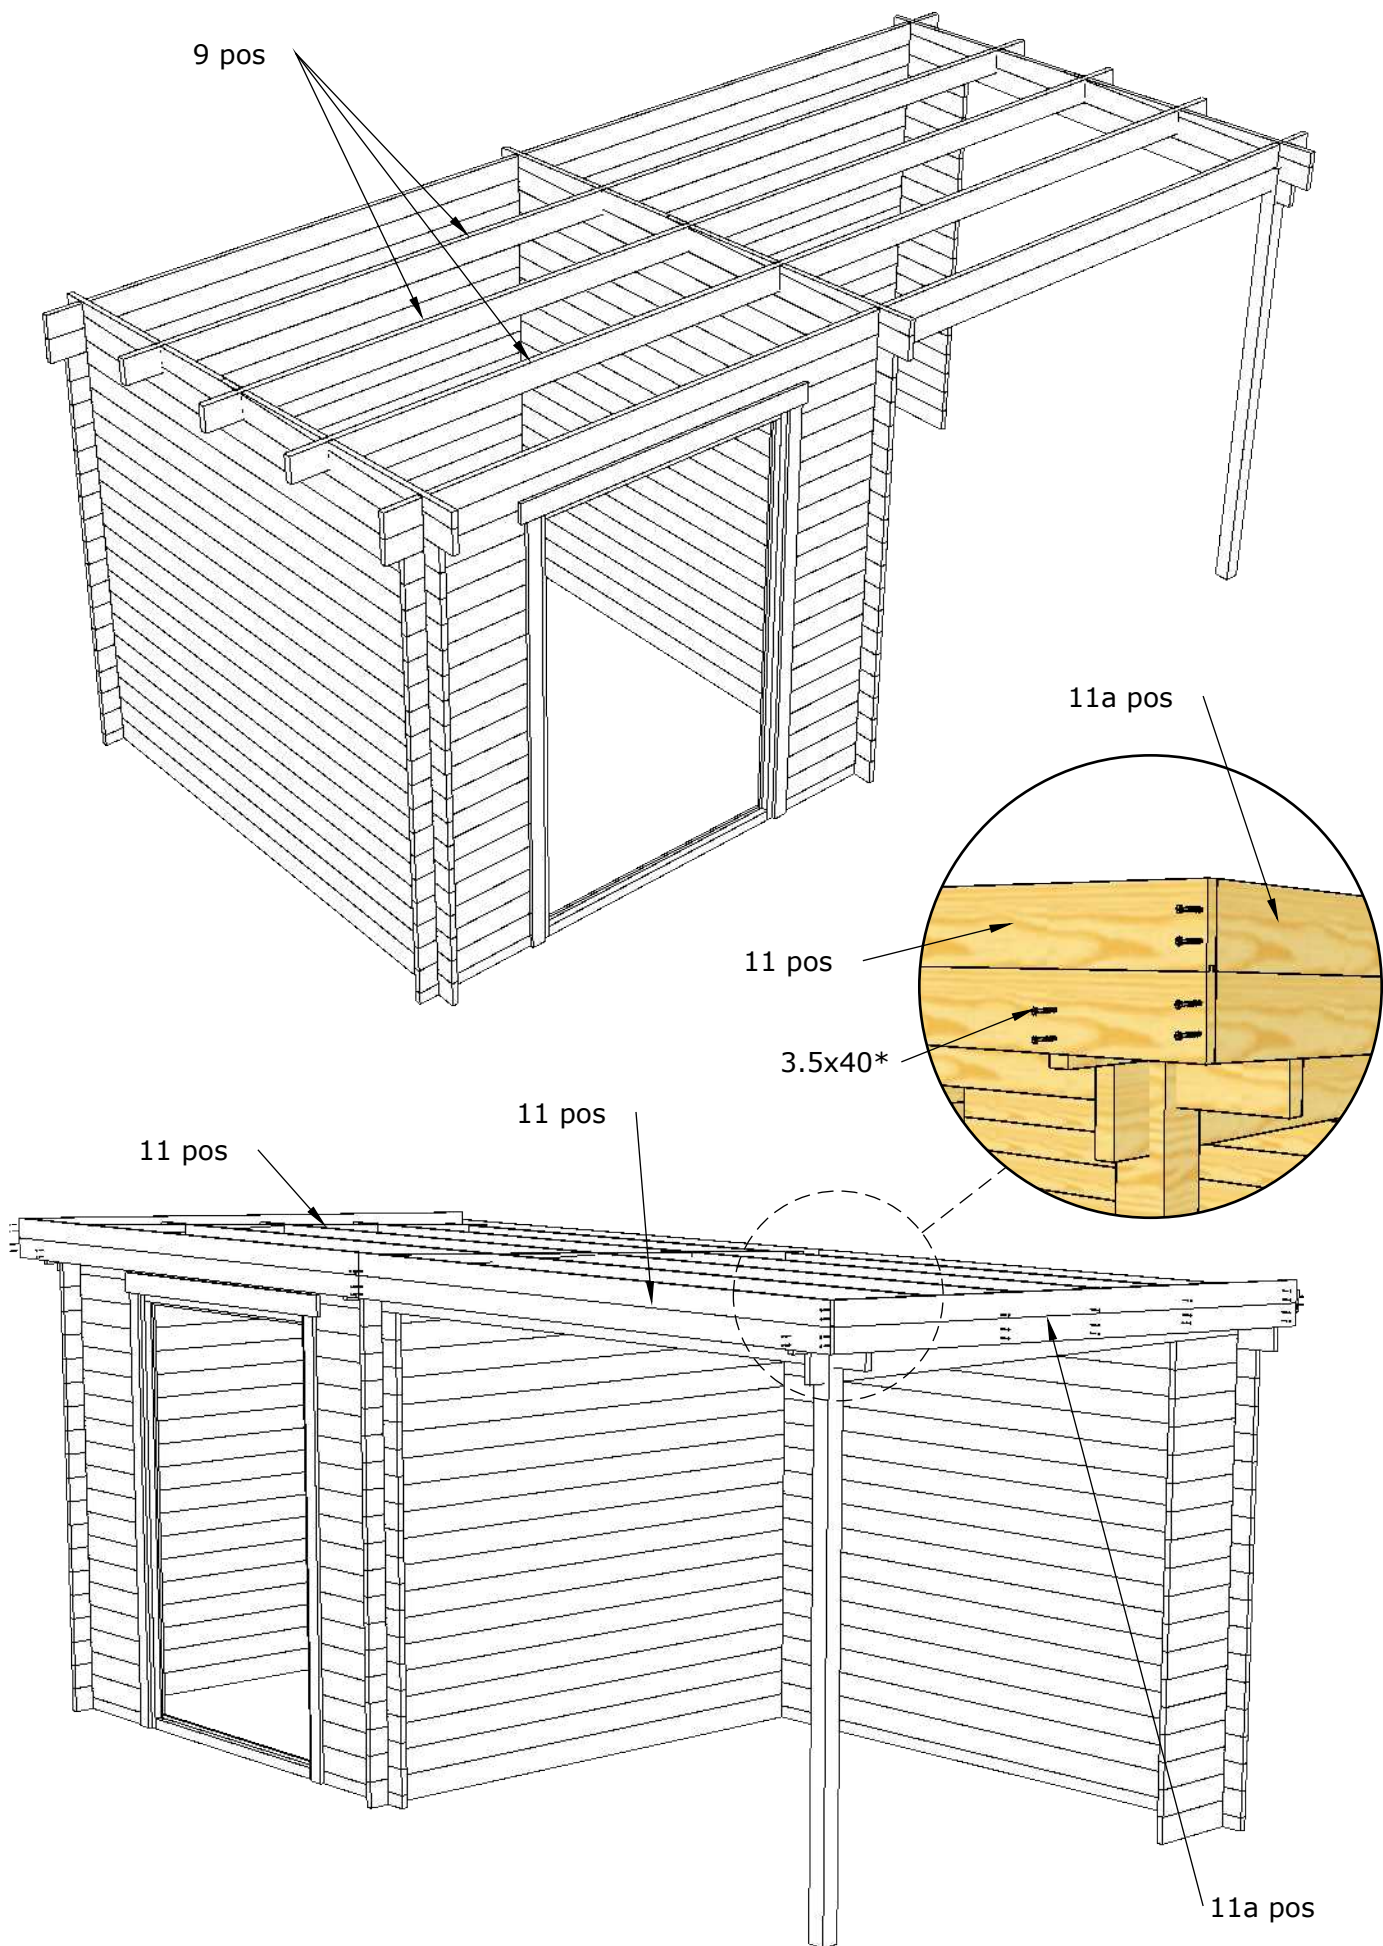

* - Screws are not included in the package

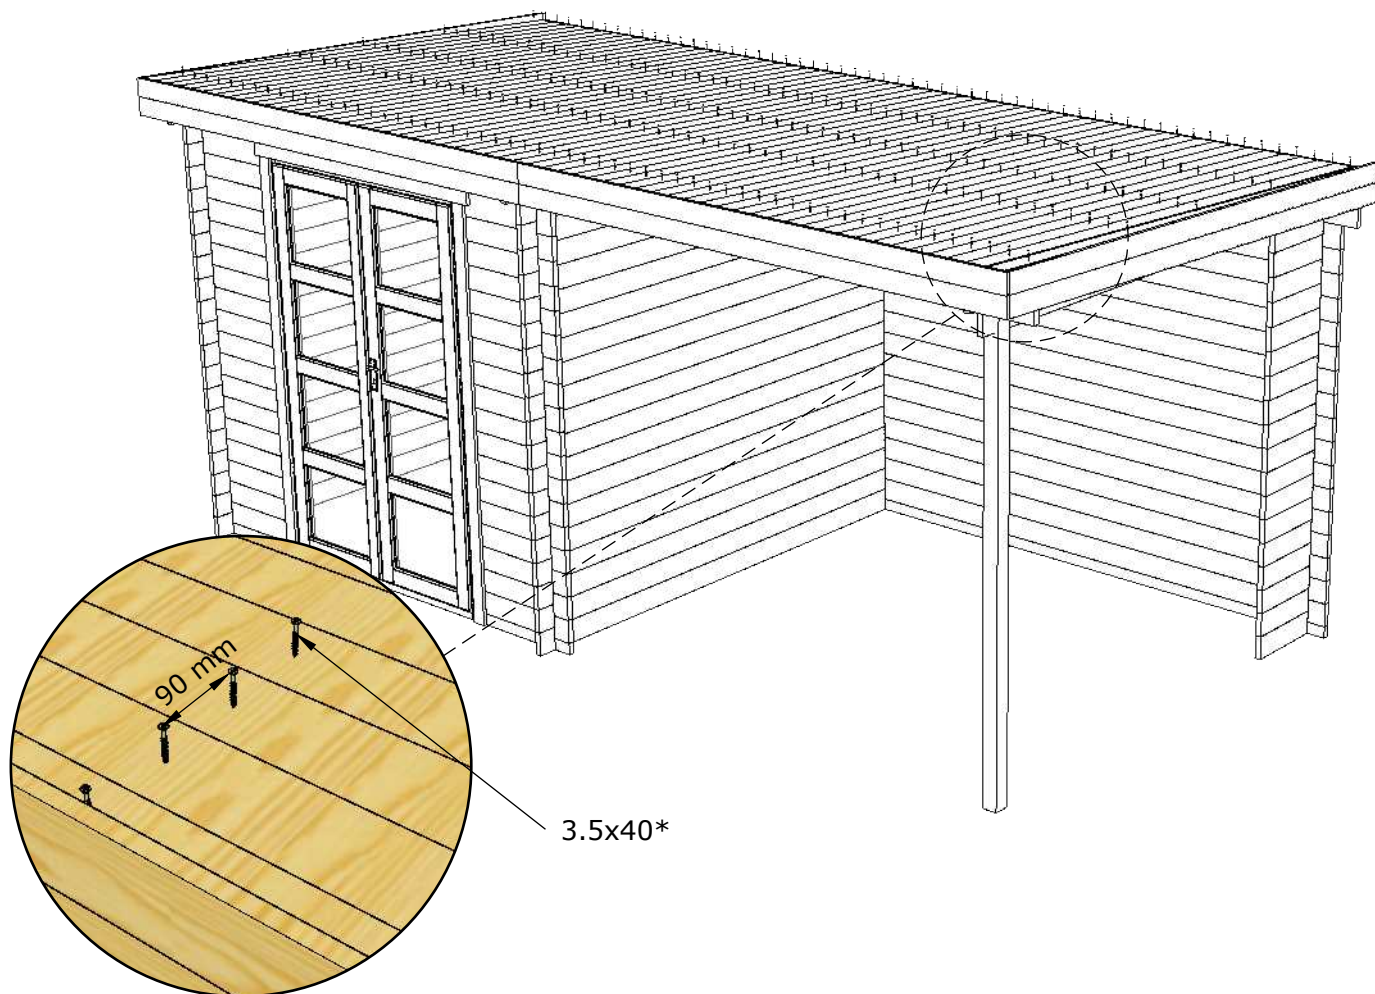


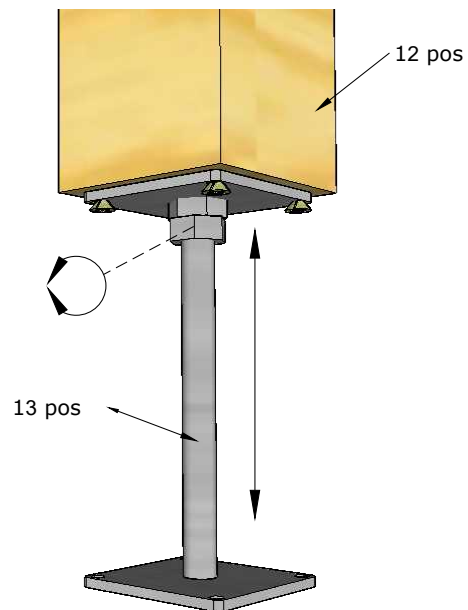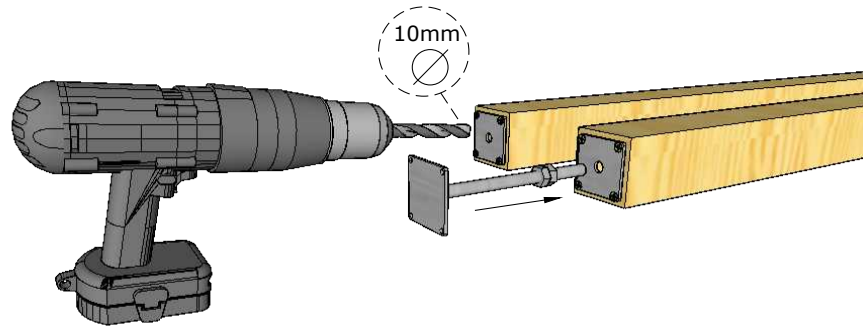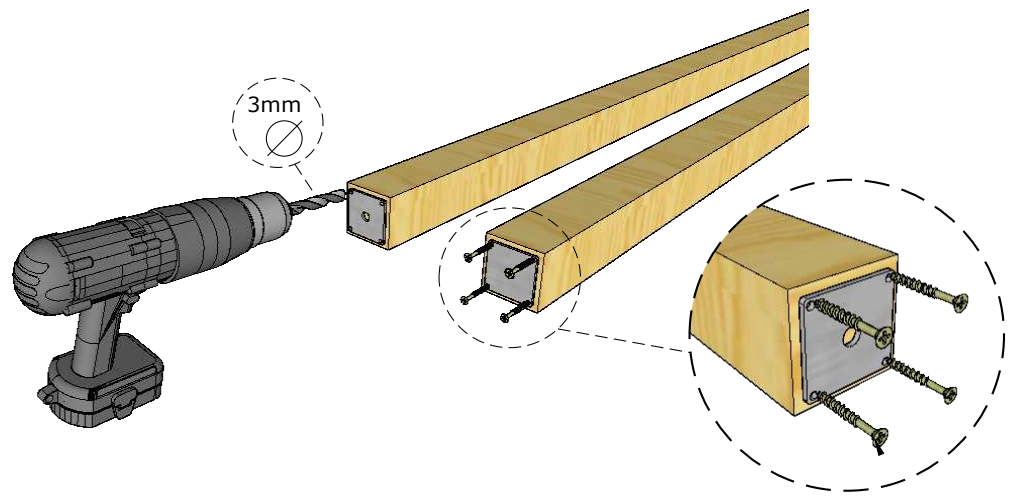


Cutting support post / Schneiden der Stützpfosten




- * Adjustment space for post support should be at least 50mm.
- * Einstellraum für die Pfostenstütze muss mindestens 50mm sein.

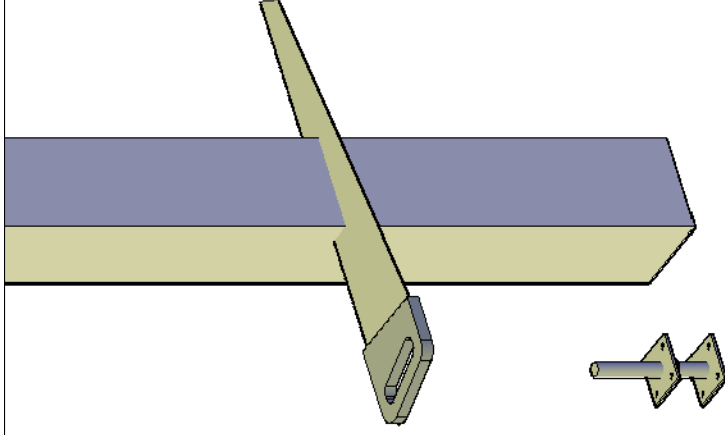

- * Support post has extra length for various conditions. Must be sawn to suitable length on spot considering local conditions.
- * Stützpfosten hat extra Länge für verschiedene Bedingungen. Muss vor Ort unter Berücksichtigung der örtlichen Gegebenheiten zu einer geeigneten Länge gesägt werden.

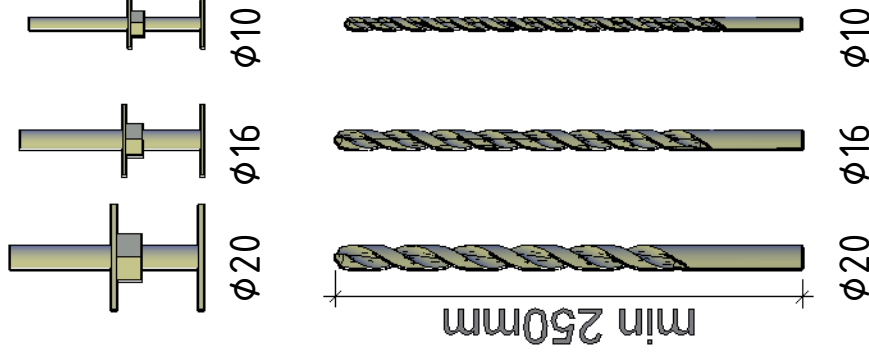


- * In some cases you need to drill a new hole for a post support. Find a matching drill bit.
- * In einigen Fällen müssen Sie ein neues Loch für die Pfostenstütze bohren. Finden Sie hier den passenden Bohrer.



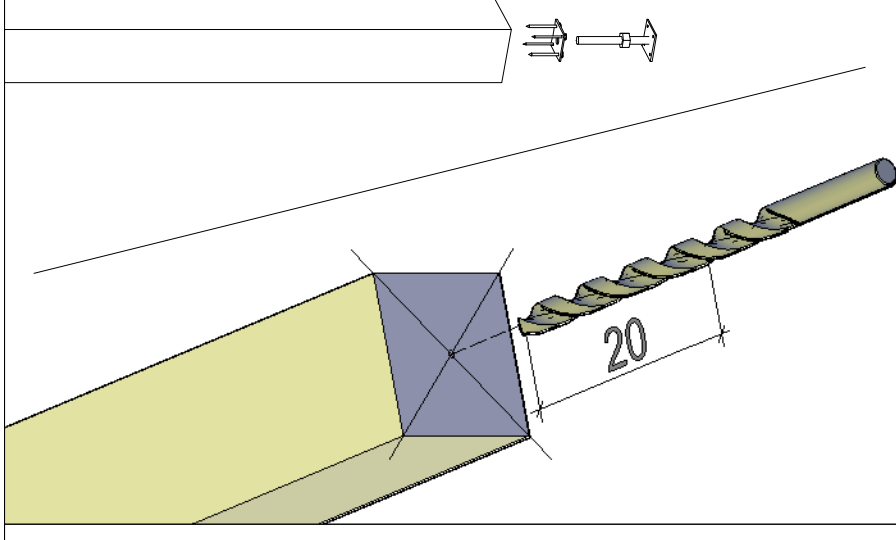


- * Mark the center of the post and drill a new 20cm deep hole.
Continue building.
- * Markieren Sie die Mitte des pfostens und bohren Sie ein neues 20cm tiefes Loch. Danach mit Aufbau weiter machen.


Door assembly

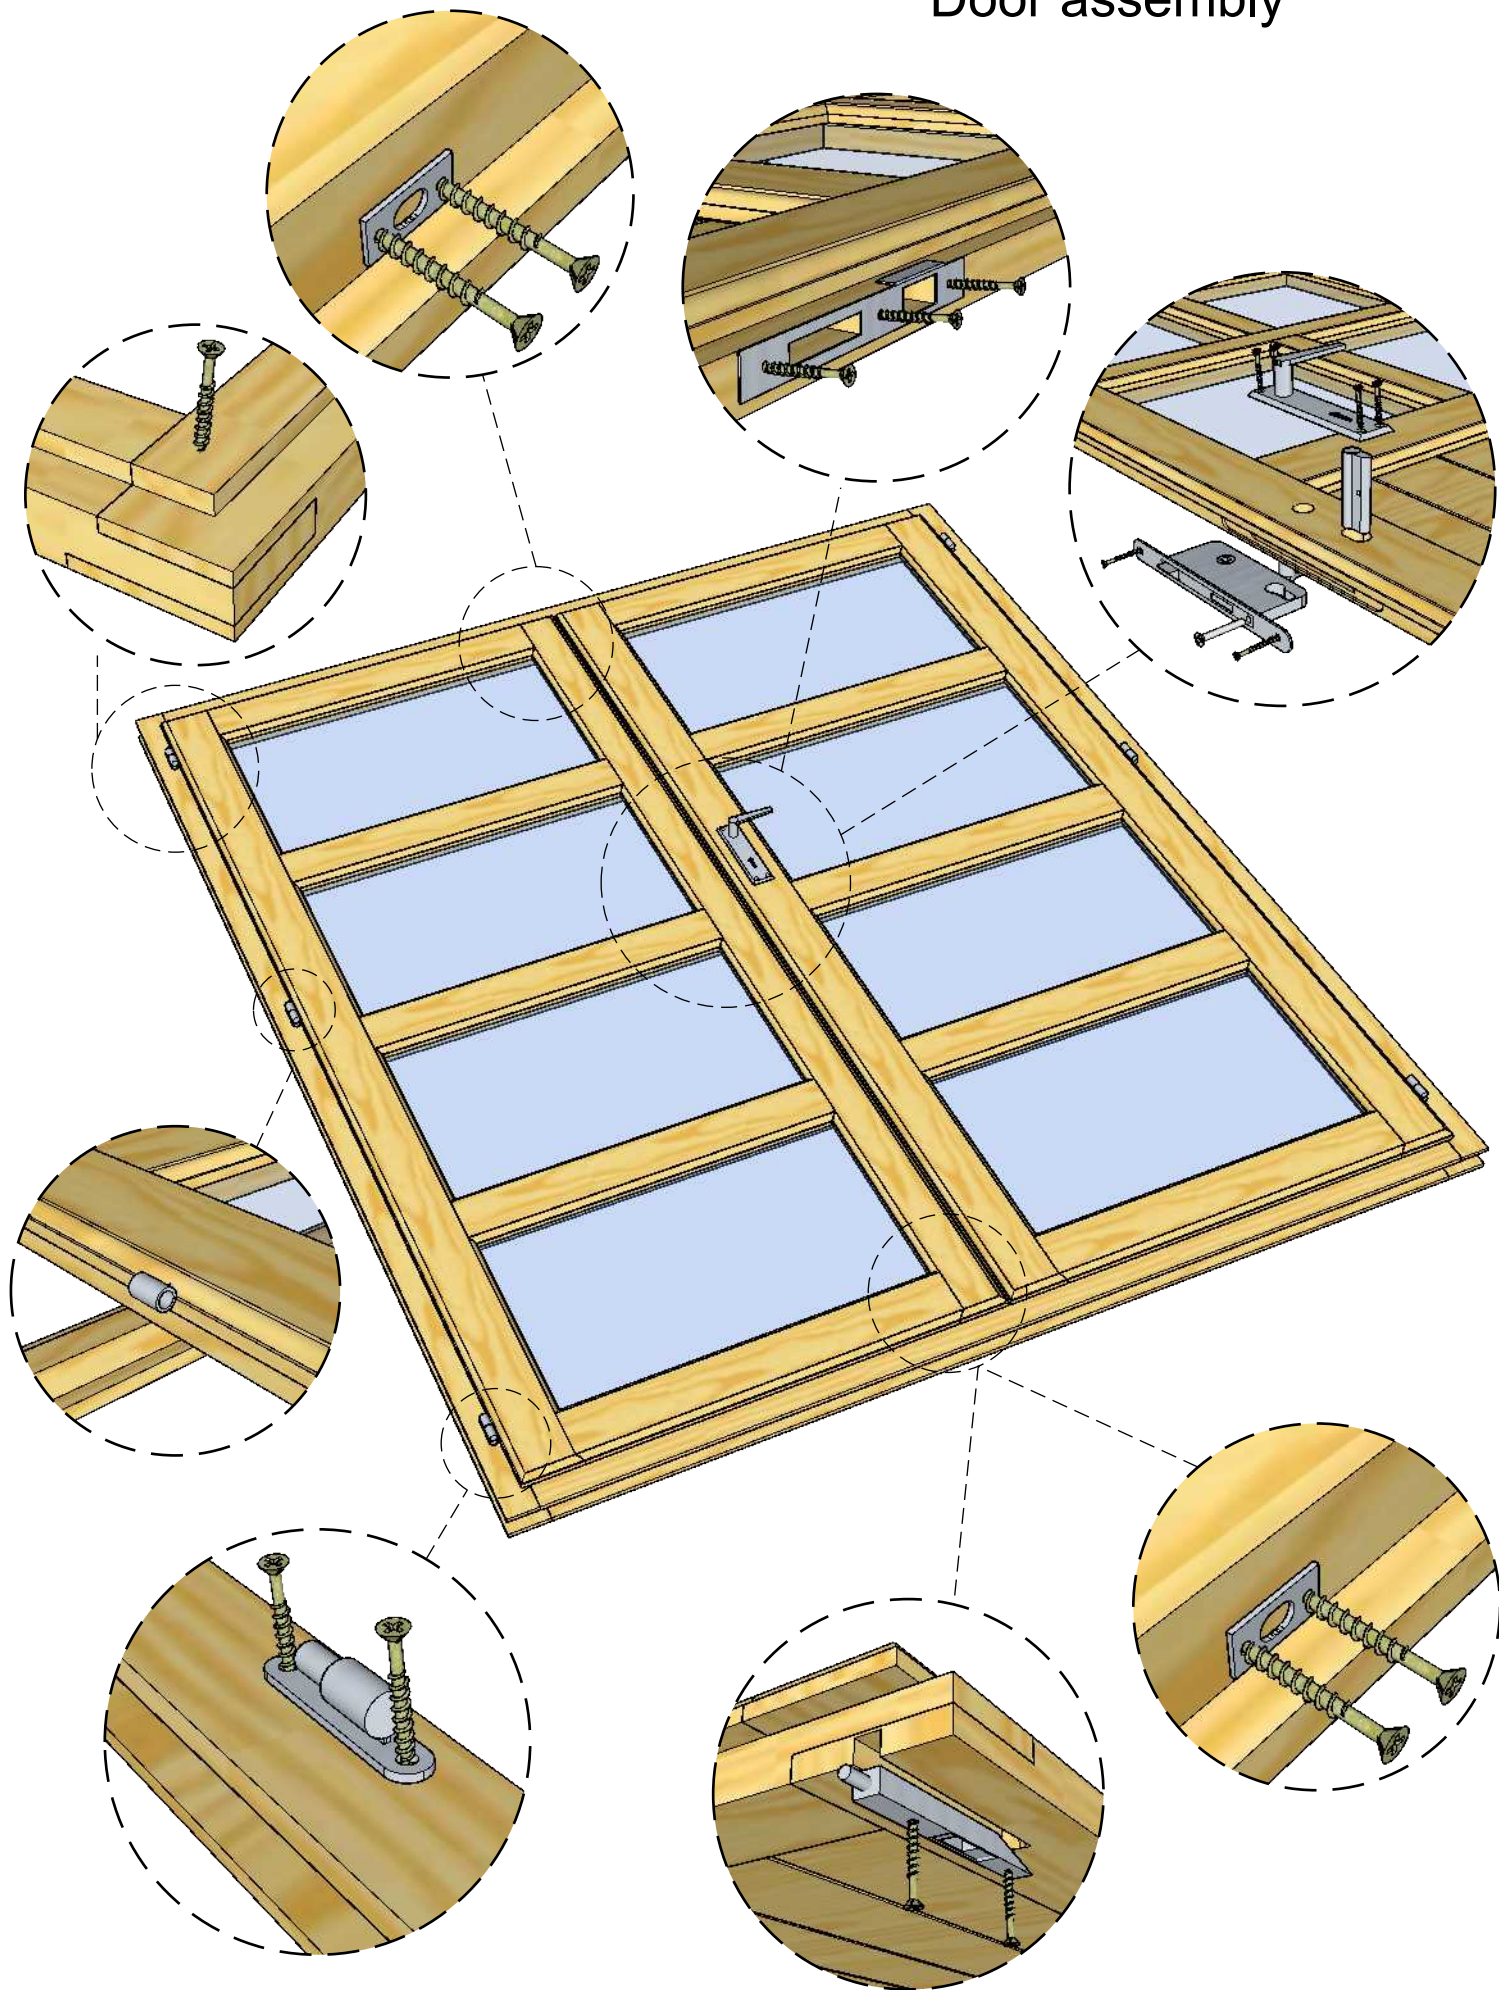

1.

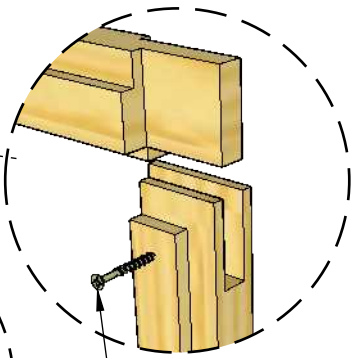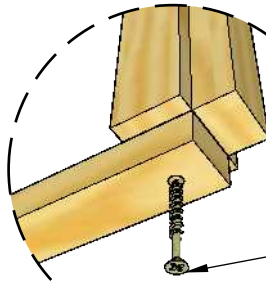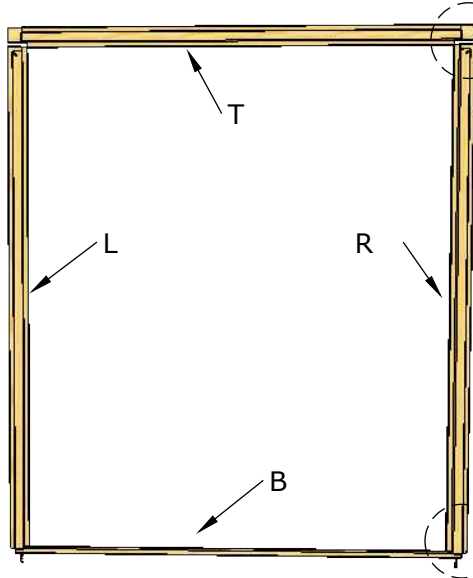


3.5x40

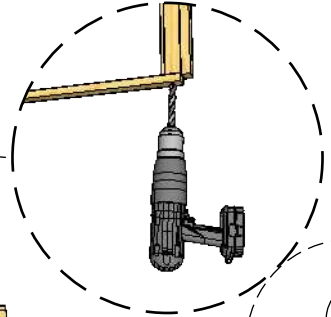


3 mm

2.

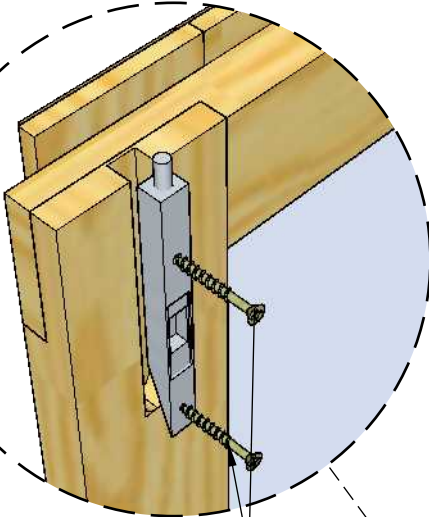

Schrauben 3x30

3.



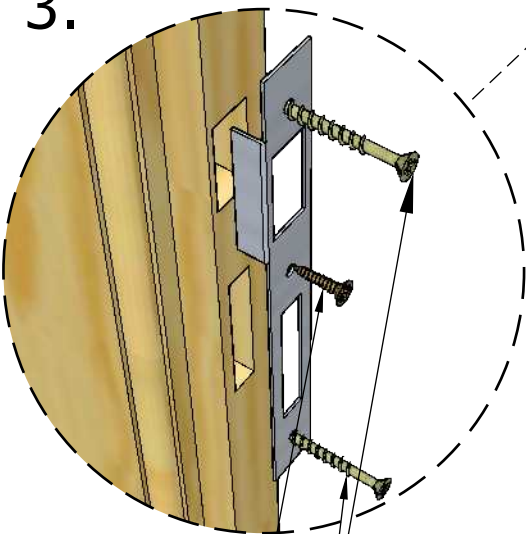


3x16


3x30

3.5x40


3.5x25

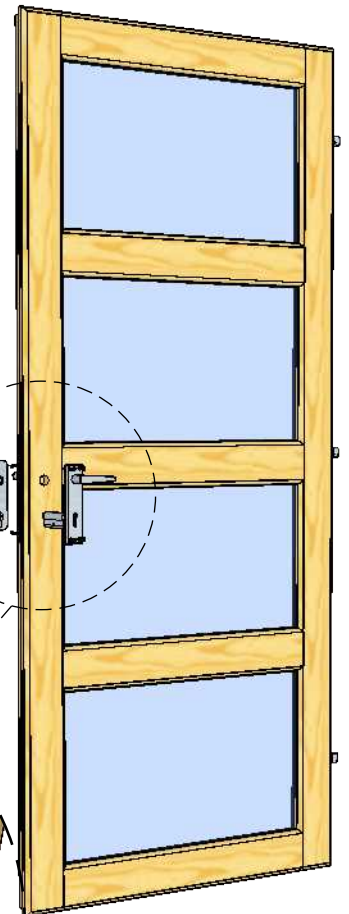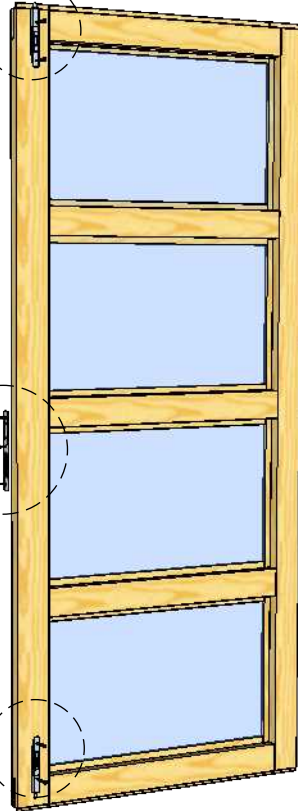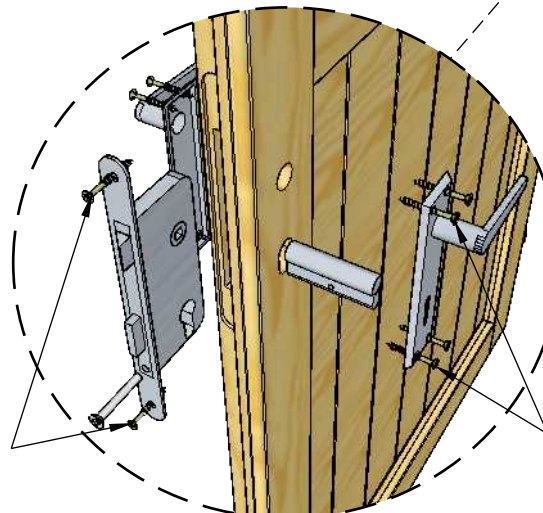


4.

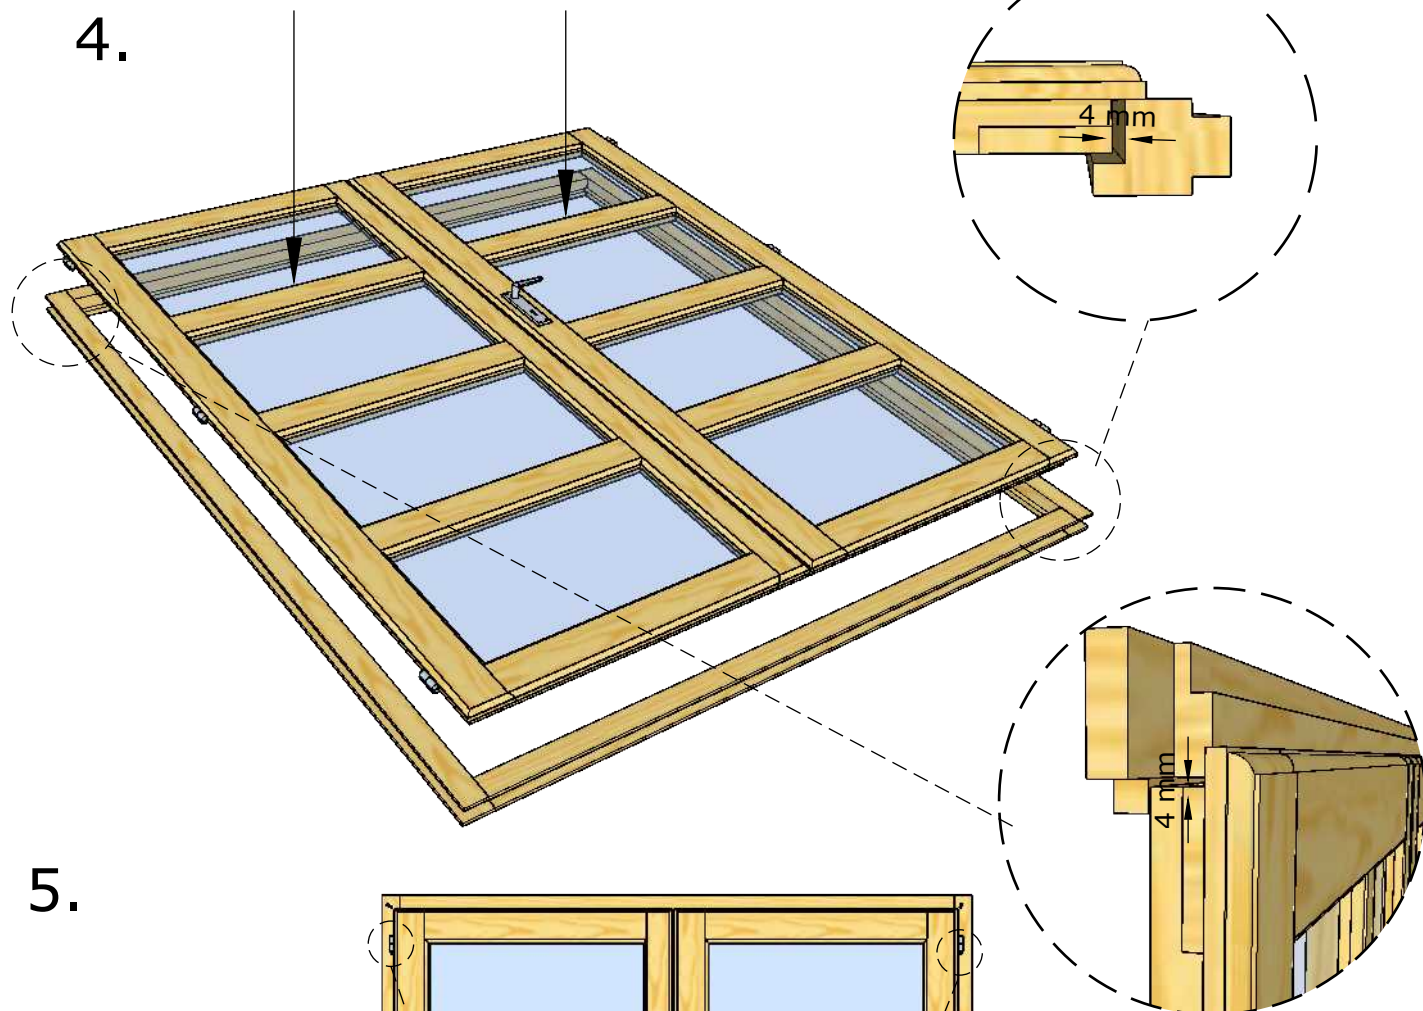


5.

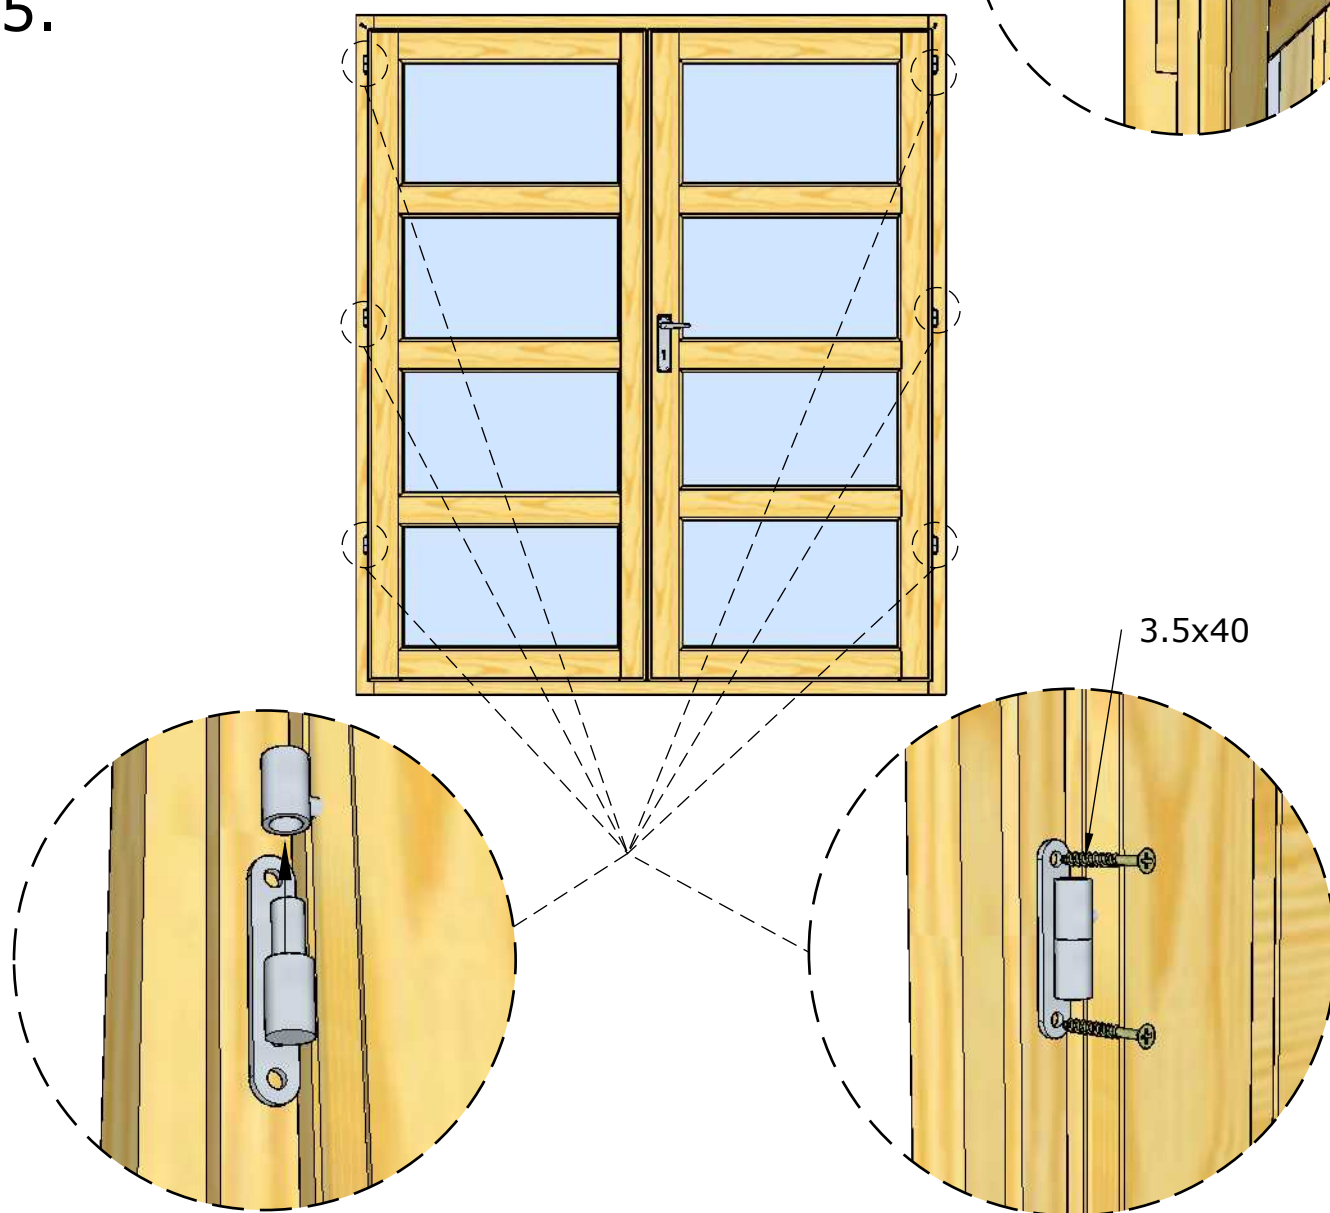


6.

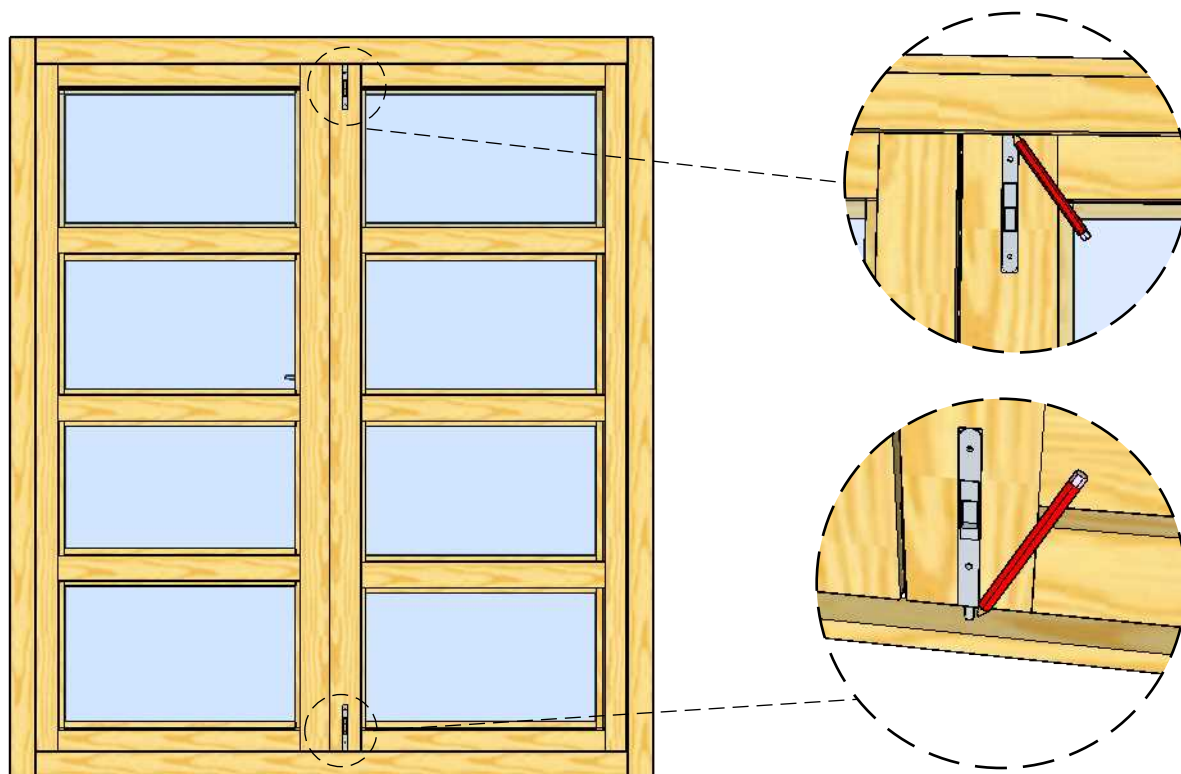


7.

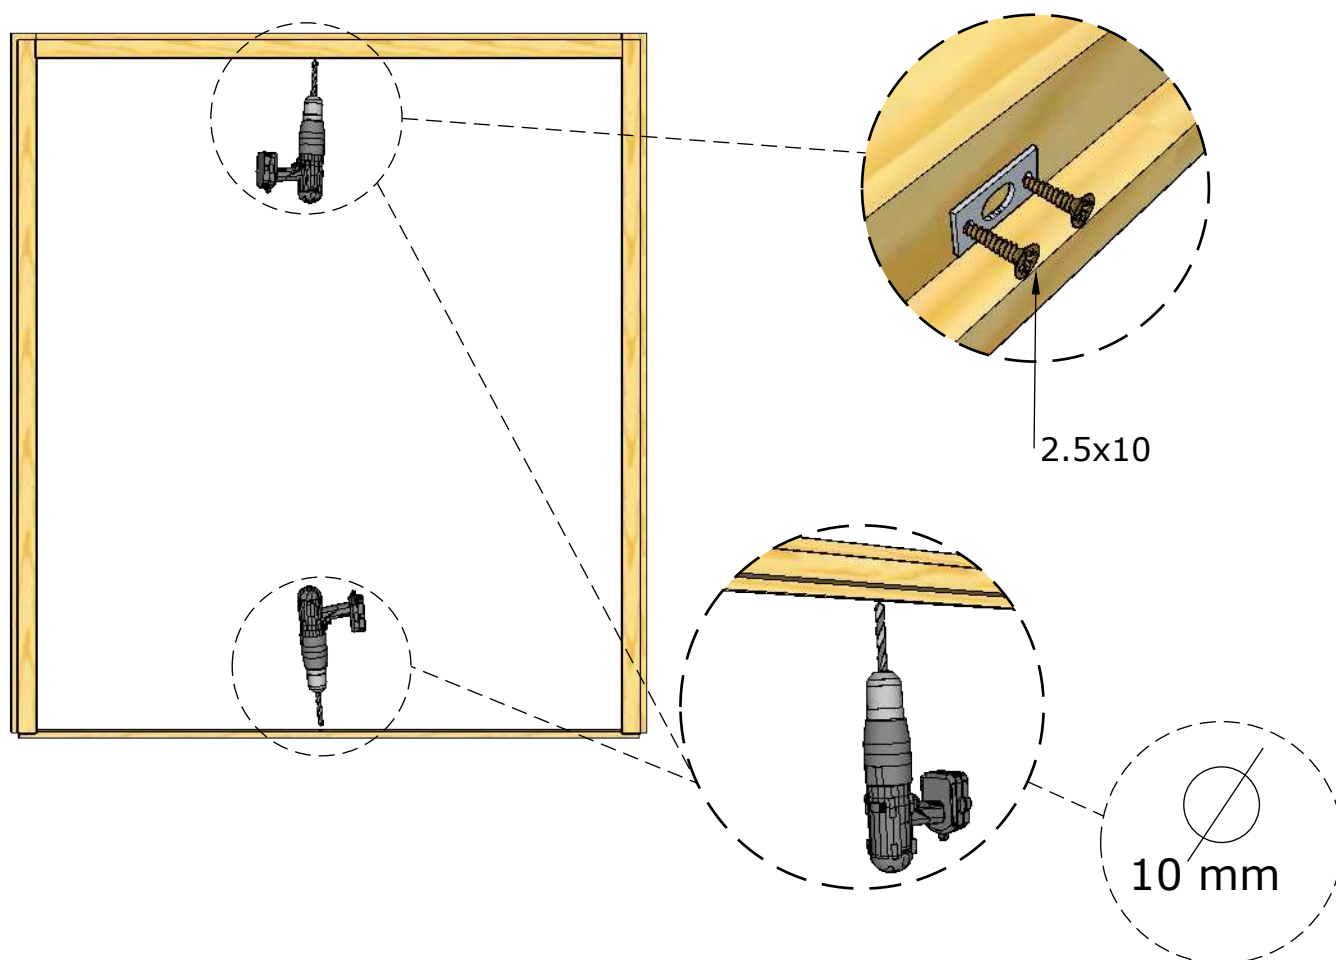

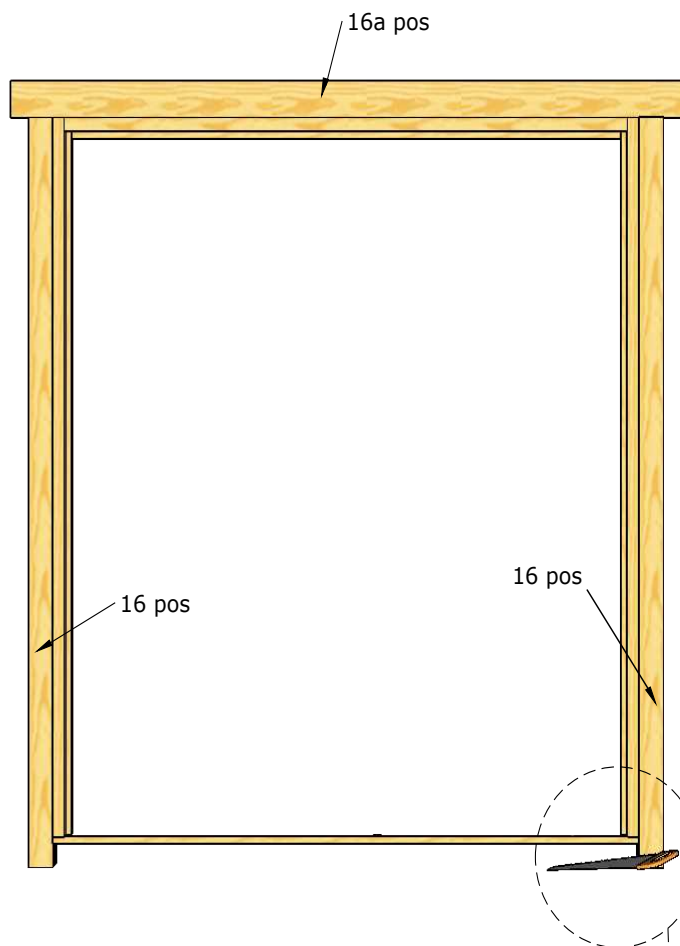

Cut pos 16 if too long

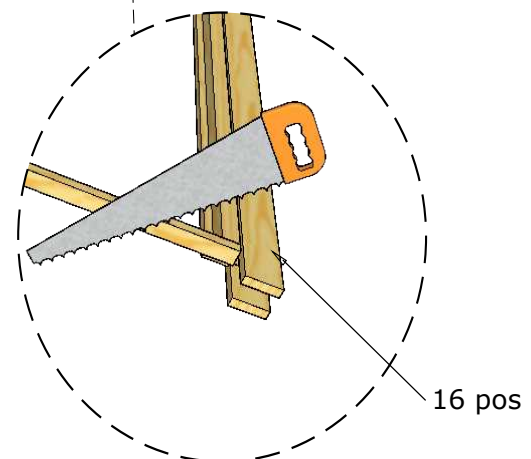

The guide is illustrative. This guide is not project specification.

Window

Normal ca 25 mm
min-max ca 5-90 mm

Door

Normal - ca 40 mm;
min - ca 5 mm;
max - ca 90 mm

