
Sauna POD 2,4x2,6



SPT24x26


SAUNA POD 2,4x2,6 (termo)


Detail list Nr.1

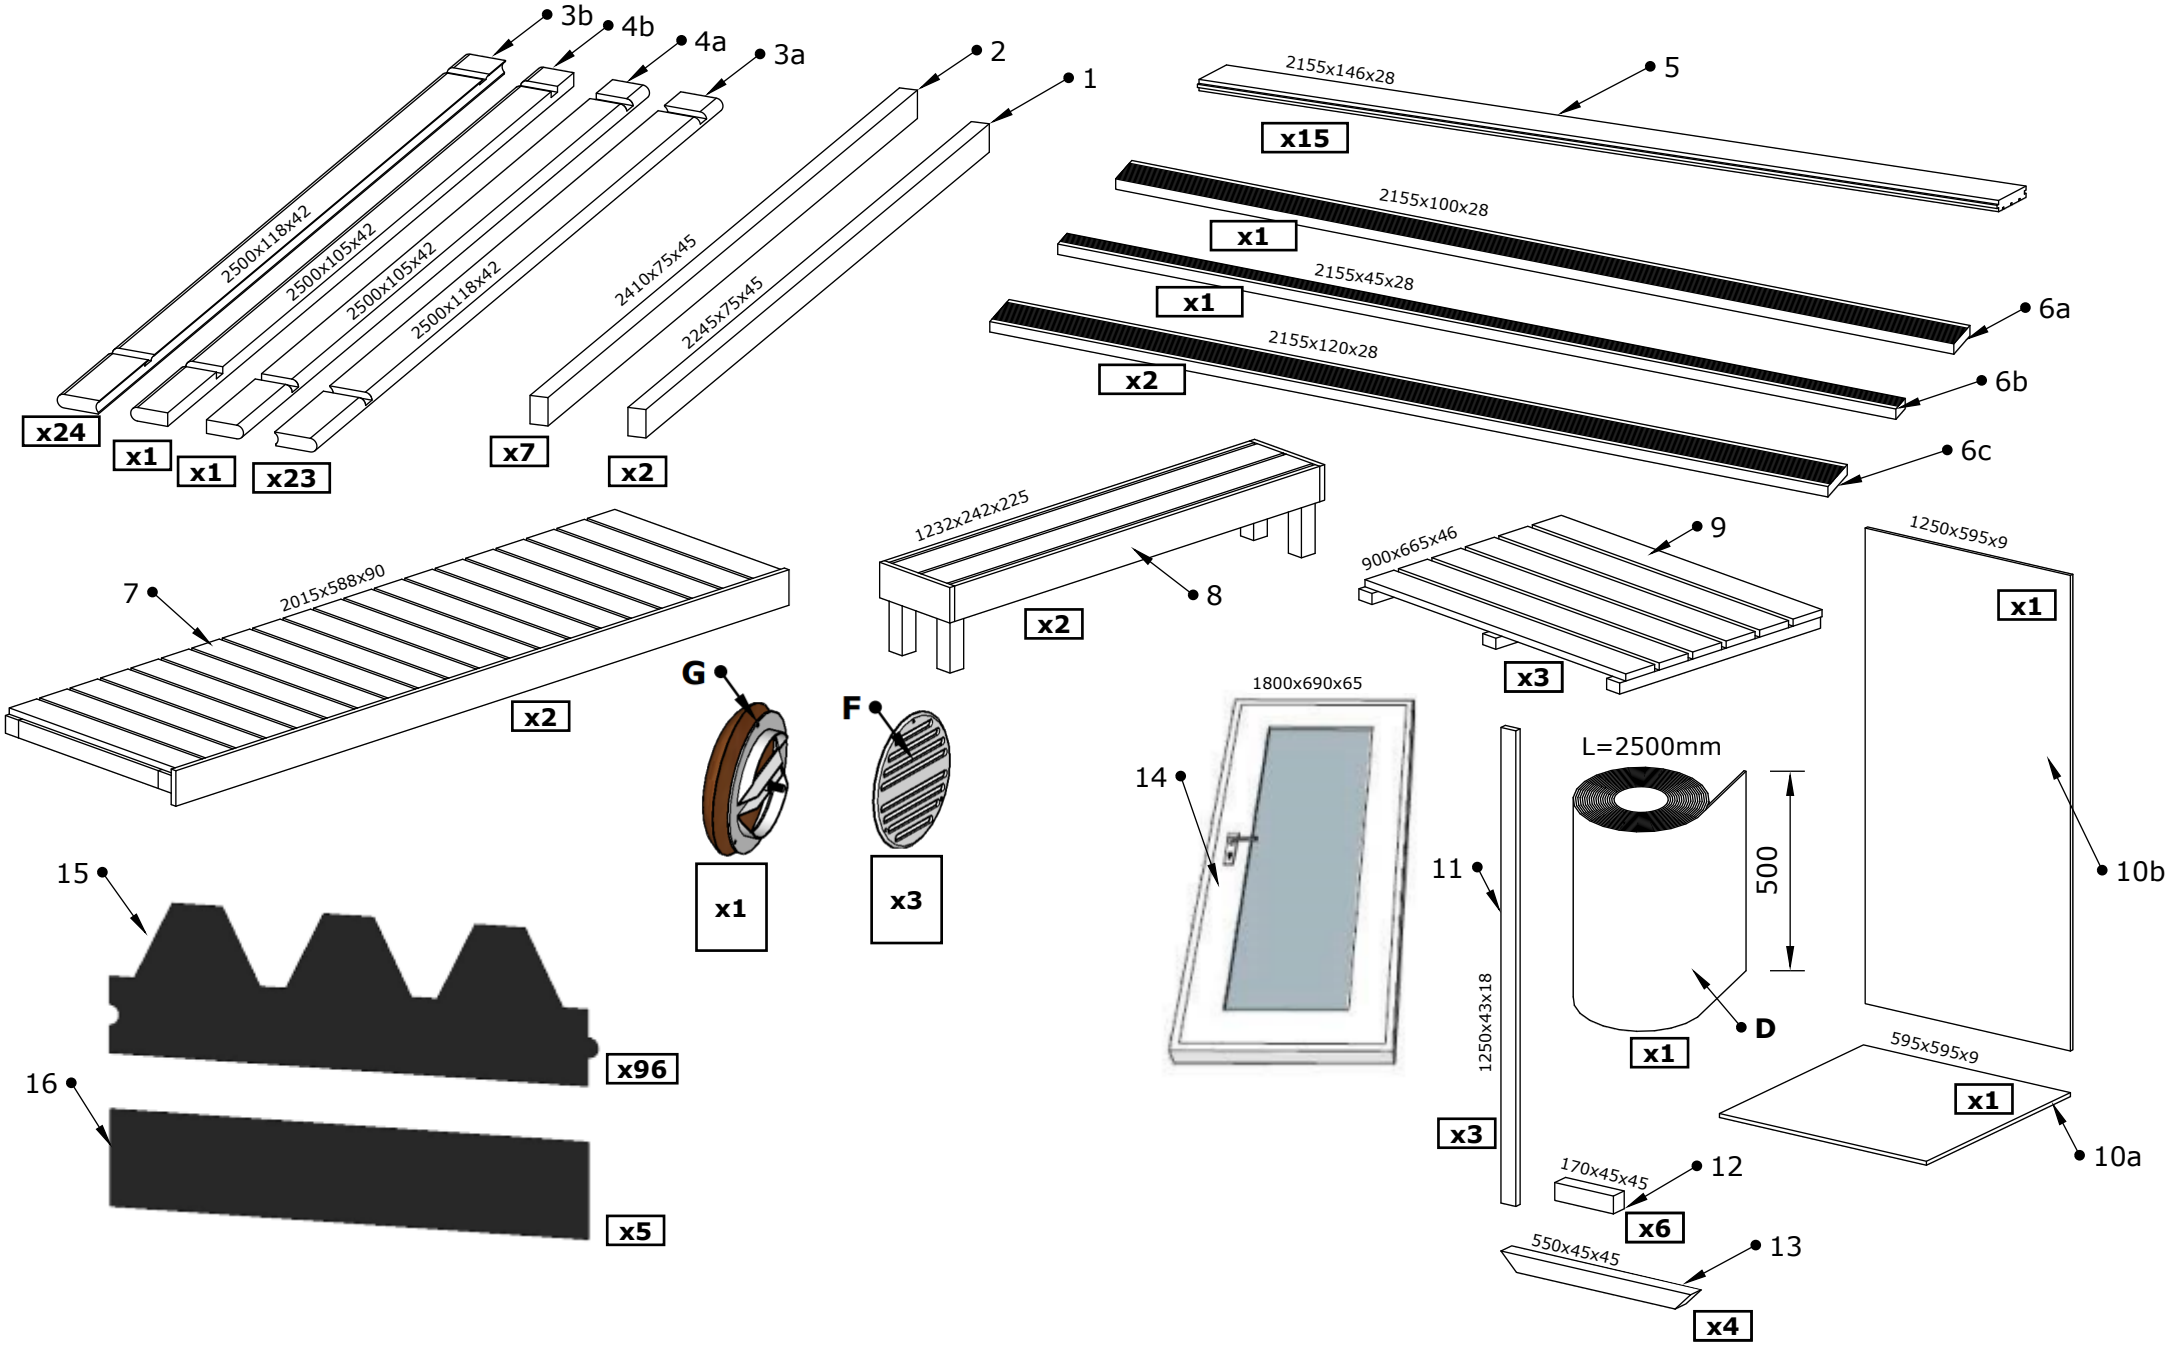



SAUNA POD 2,4x2,6 (termo)

Detail list Nr.2

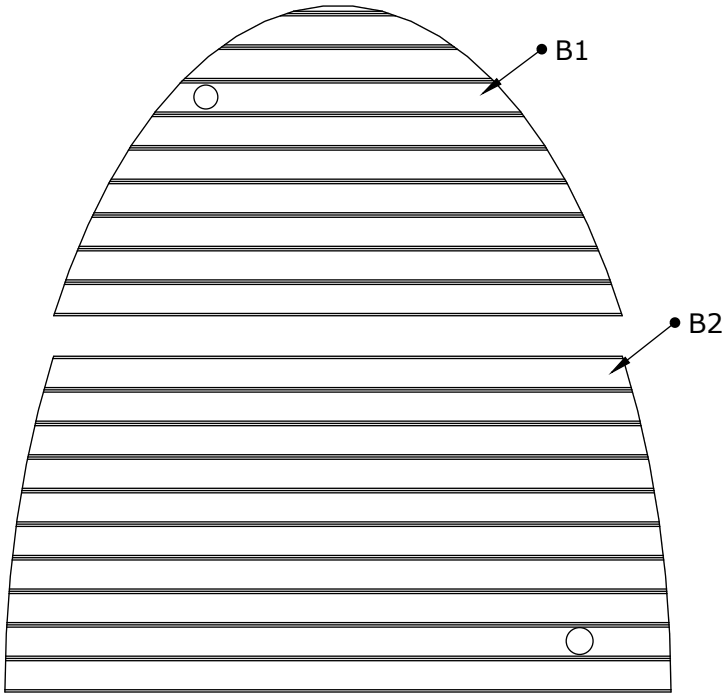


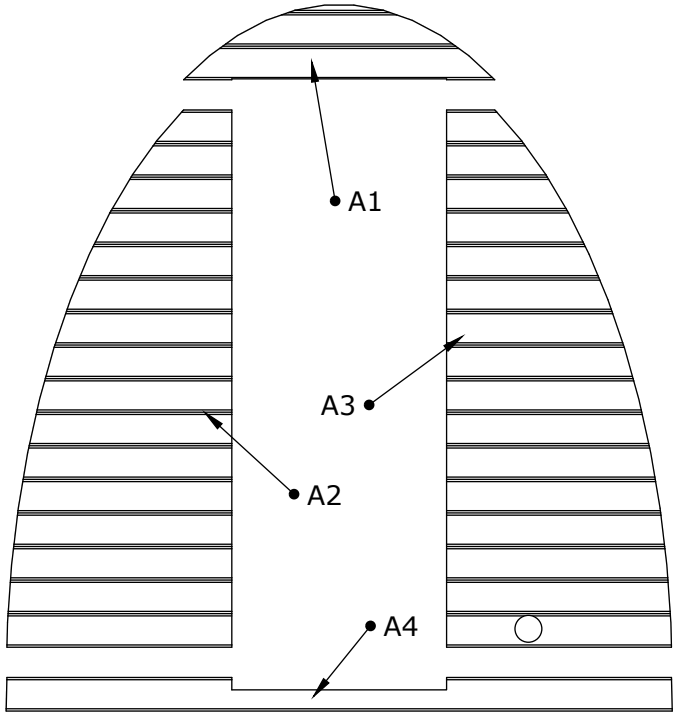


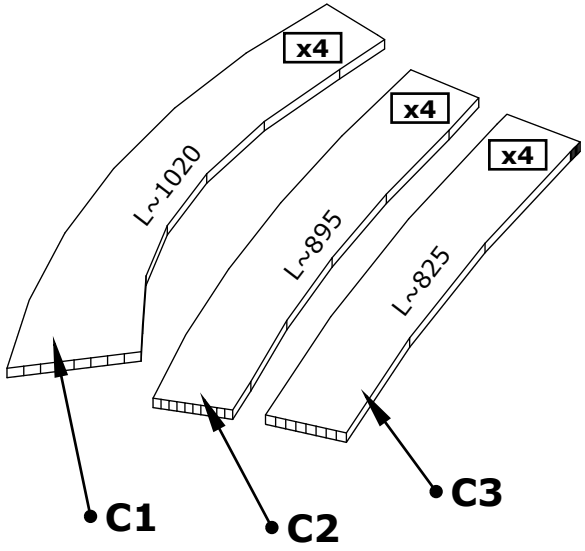

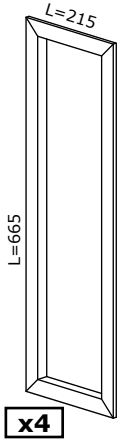




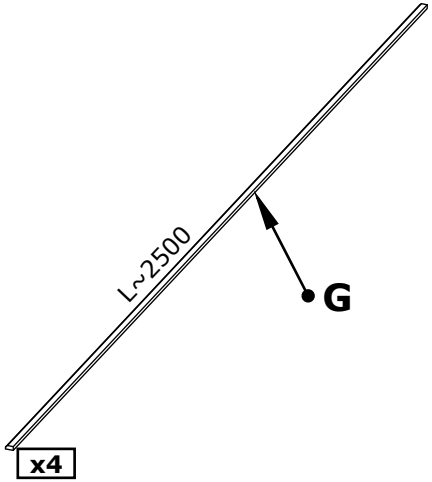







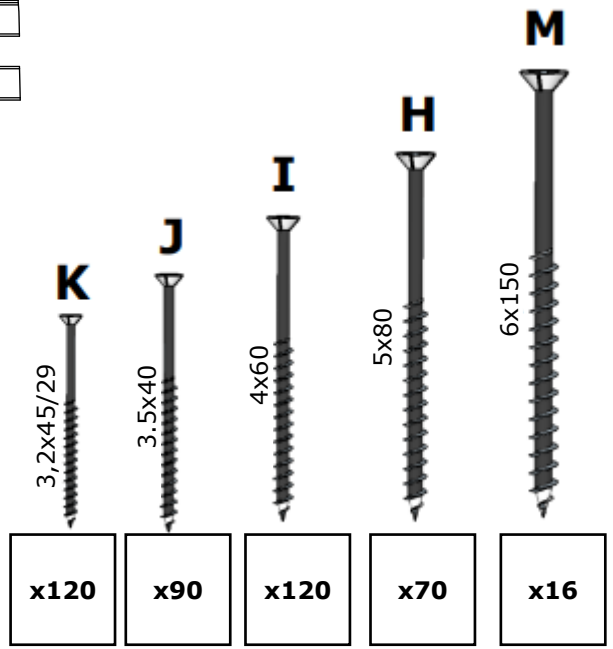


SAUNA POD 2,4x2,6 (termo)

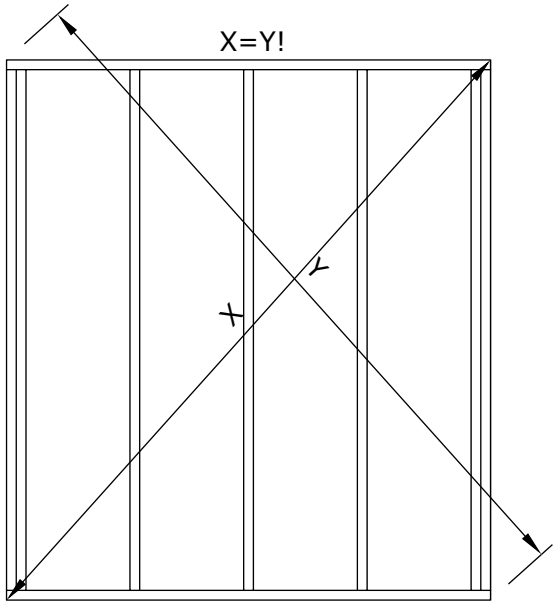

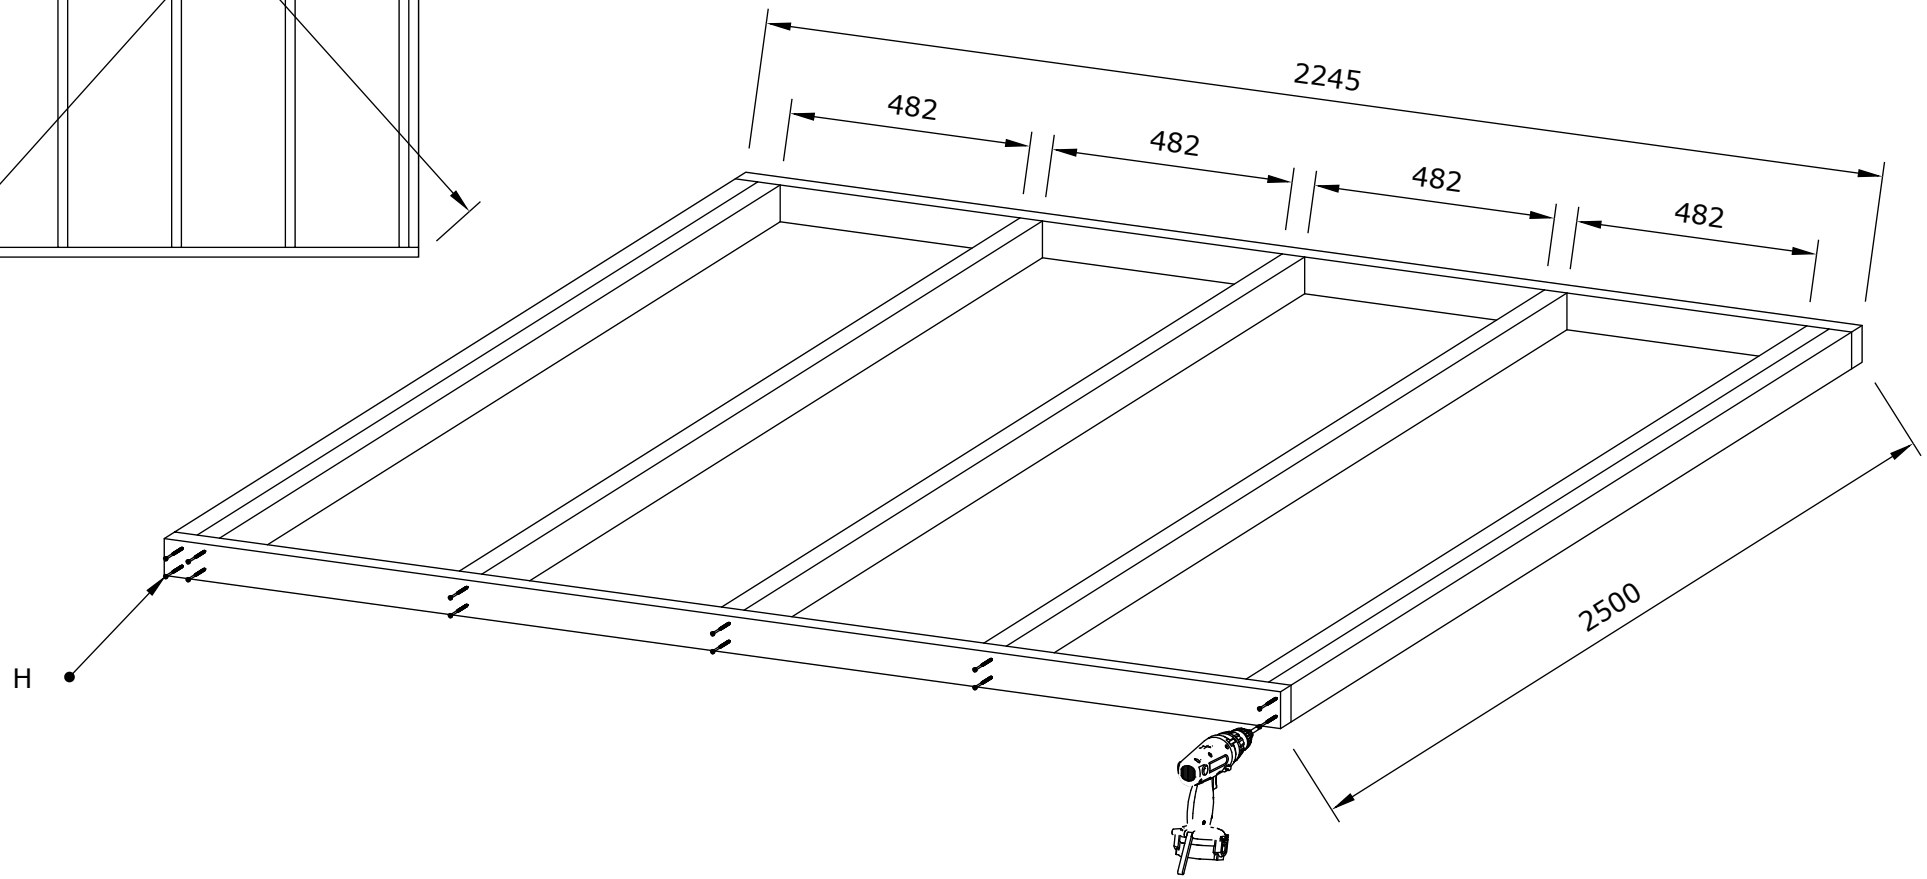


SPT24x26

SAUNA POD 2,4x2,6 (termo)

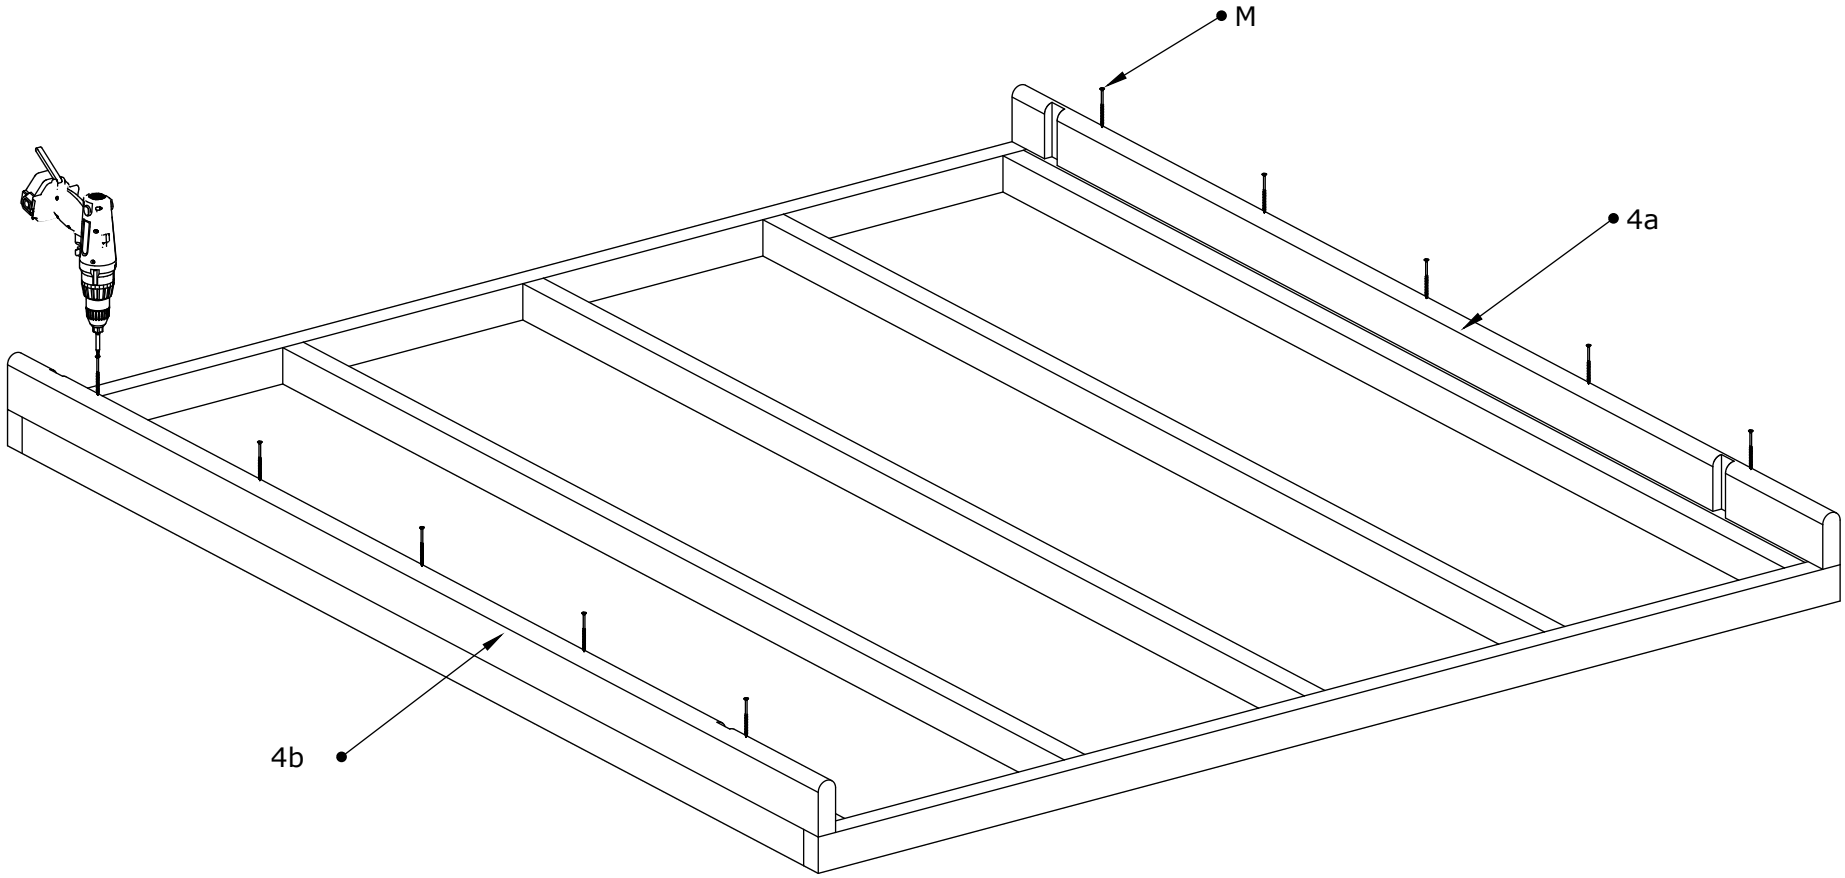



SPT24x26

SAUNA POD 2,4x2,6 (termo)

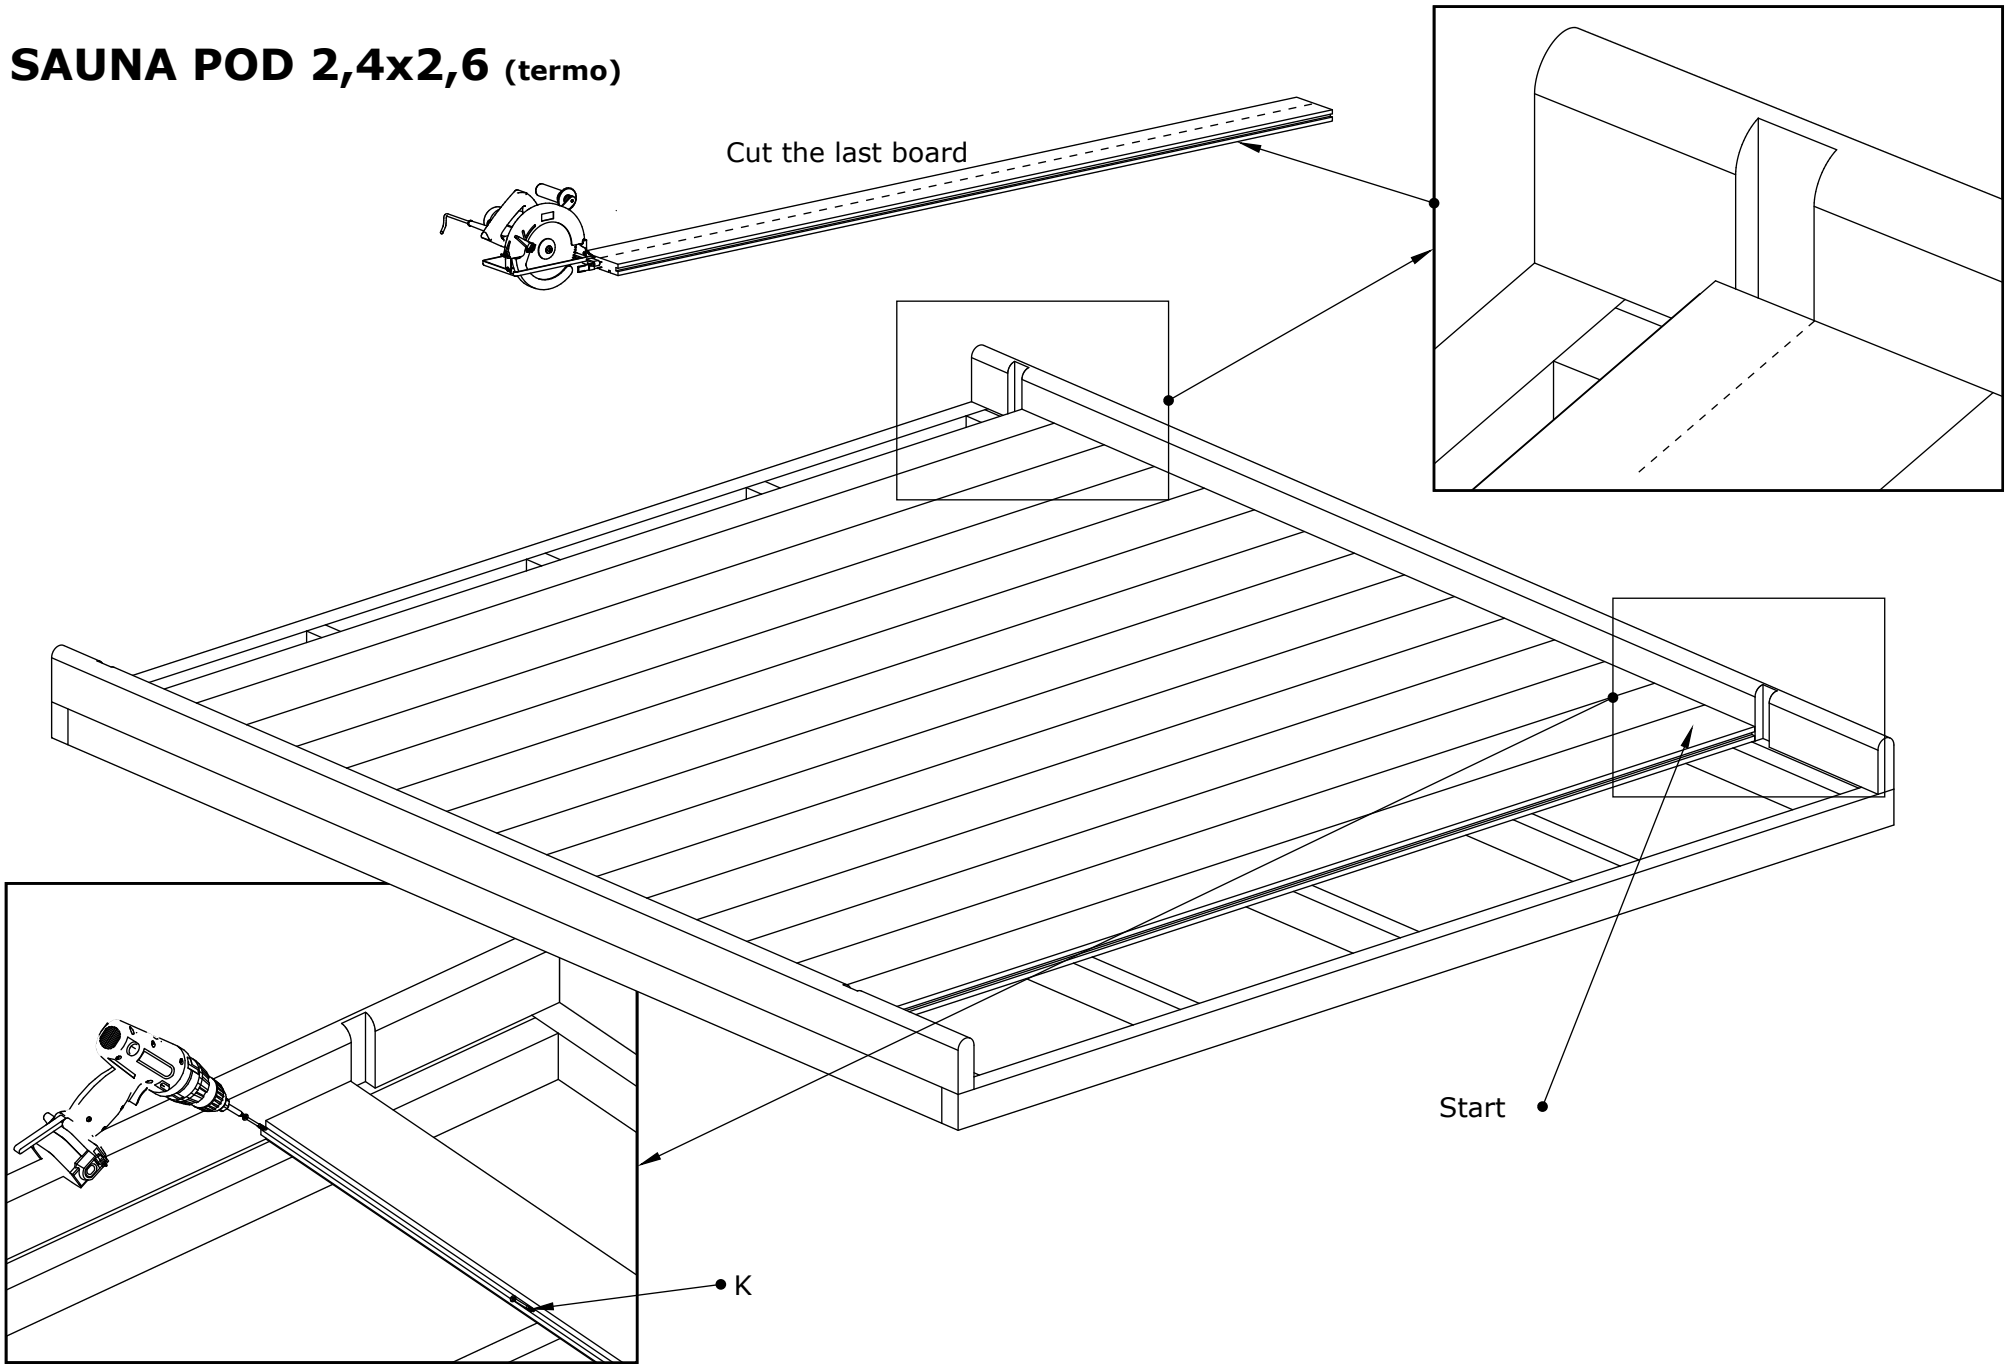



SAUNA POD 2,4x2,6 (termo)

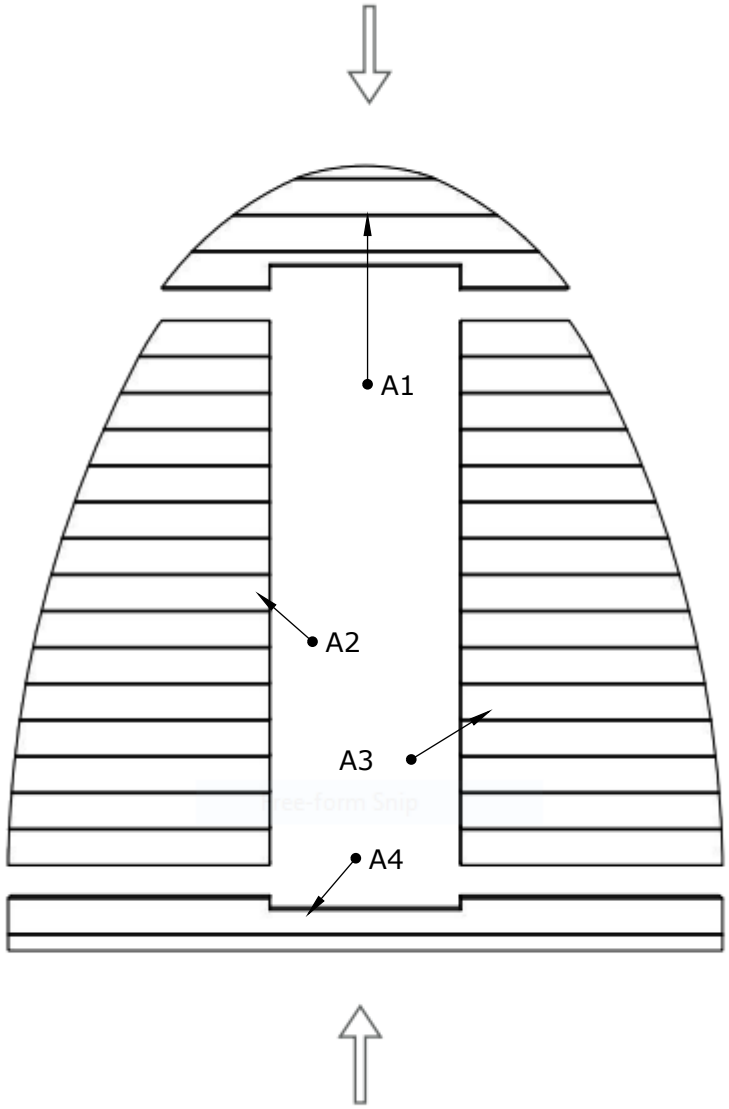

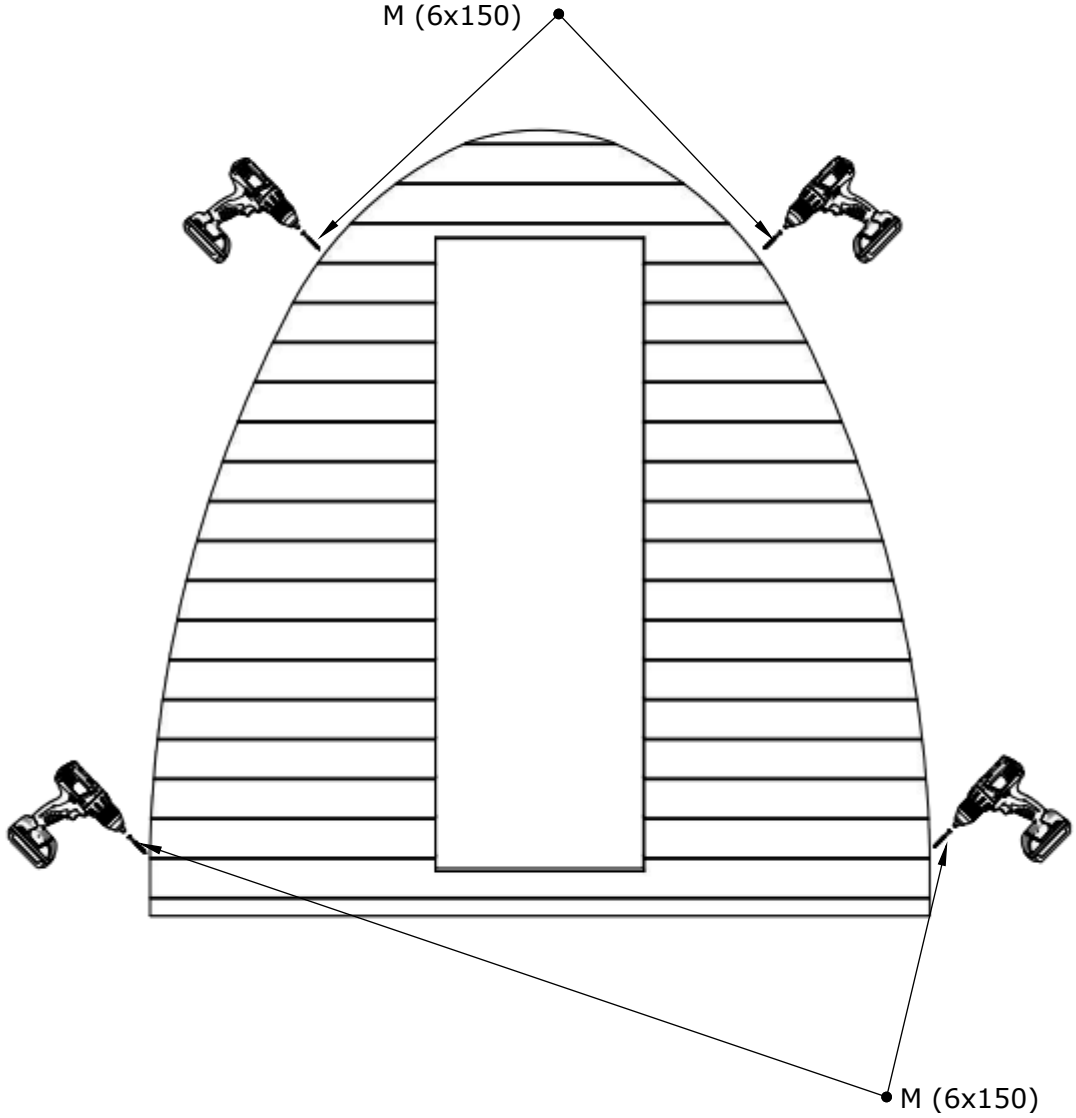


SAUNA POD 2,4x2,6 (termo)

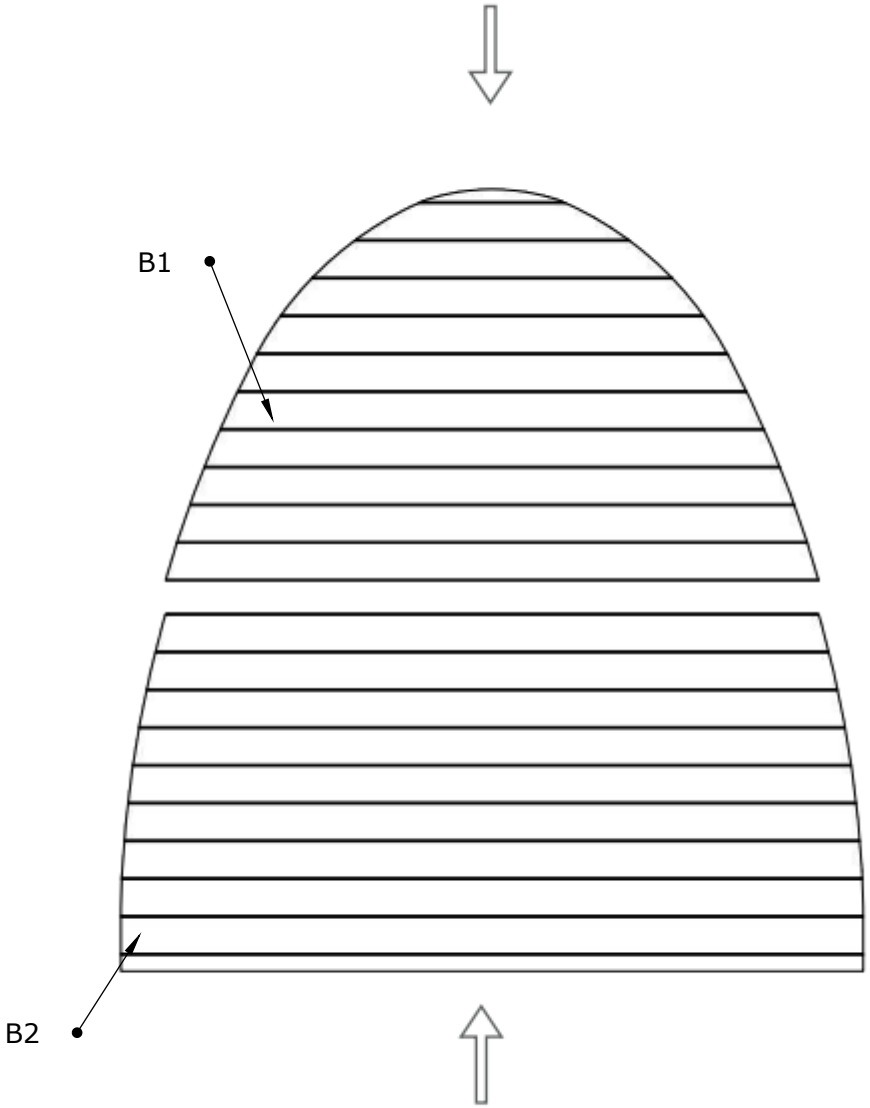

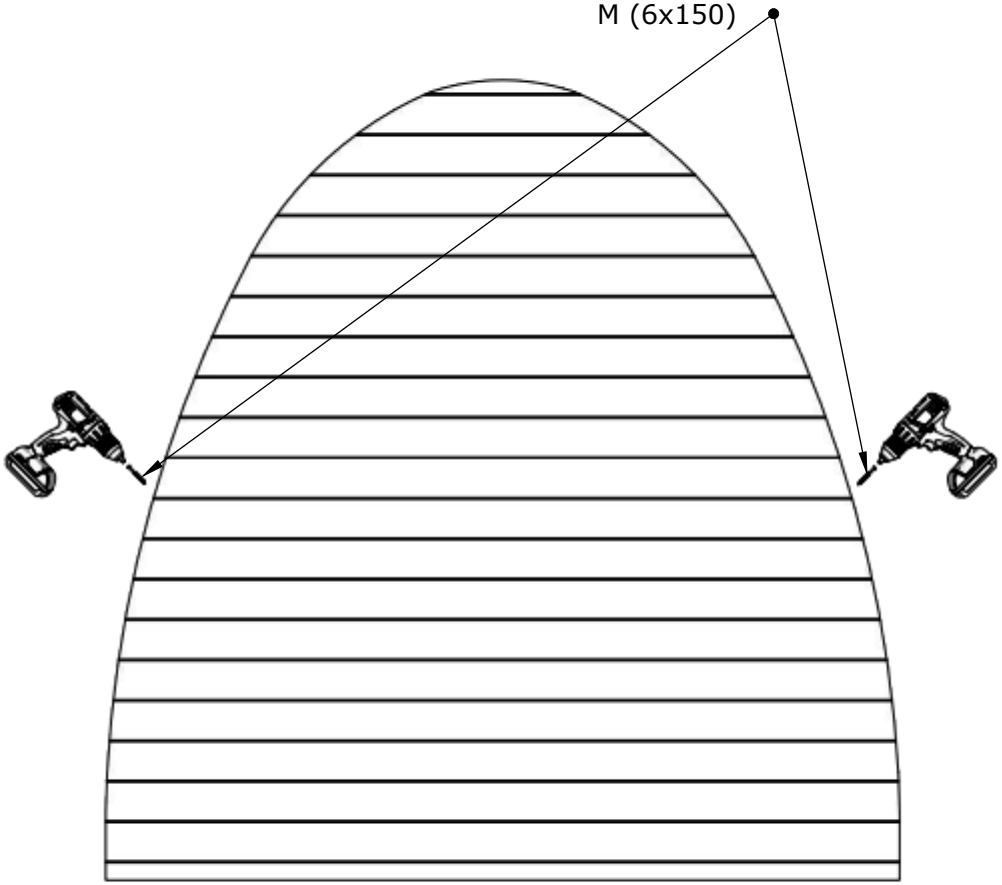


SPT24x26

SAUNA POD 2,4x2,6 (termo)

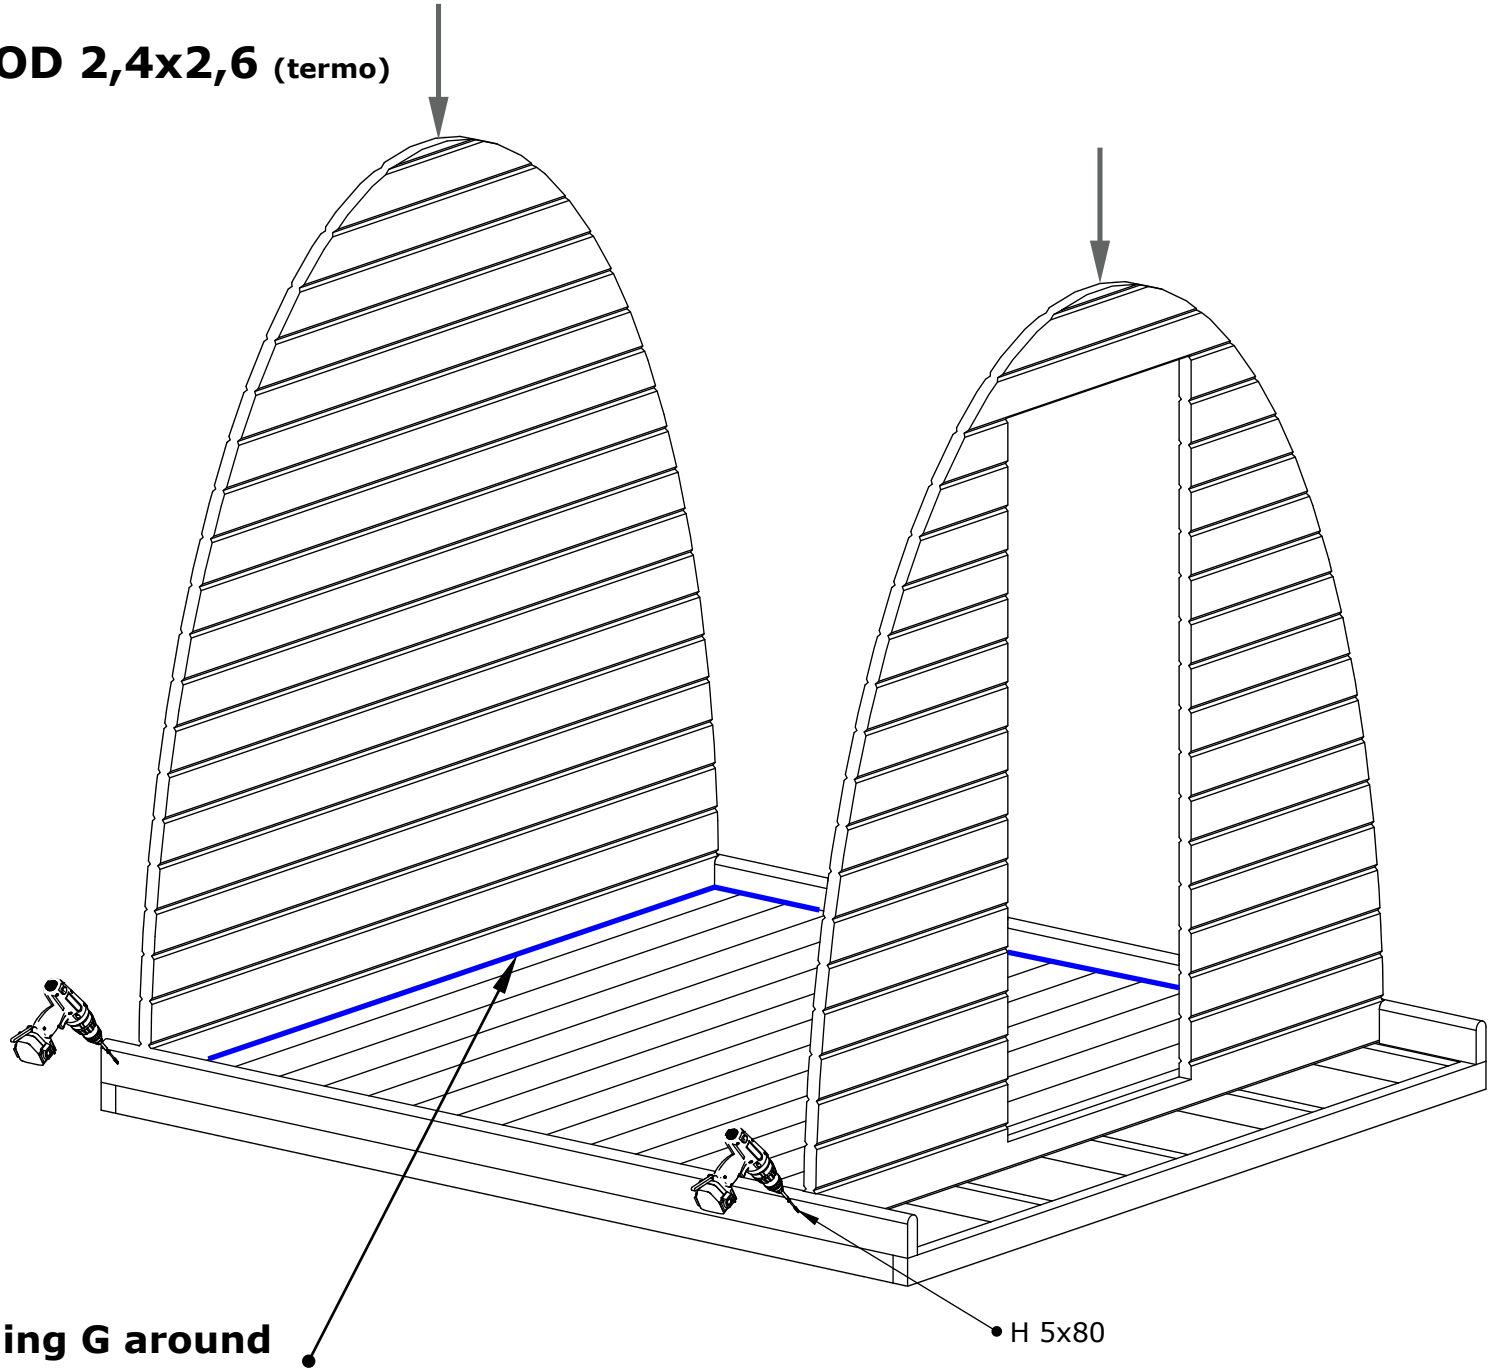



Install edging G around the perimeter

SAUNA POD 2,4x2,6 (termo)

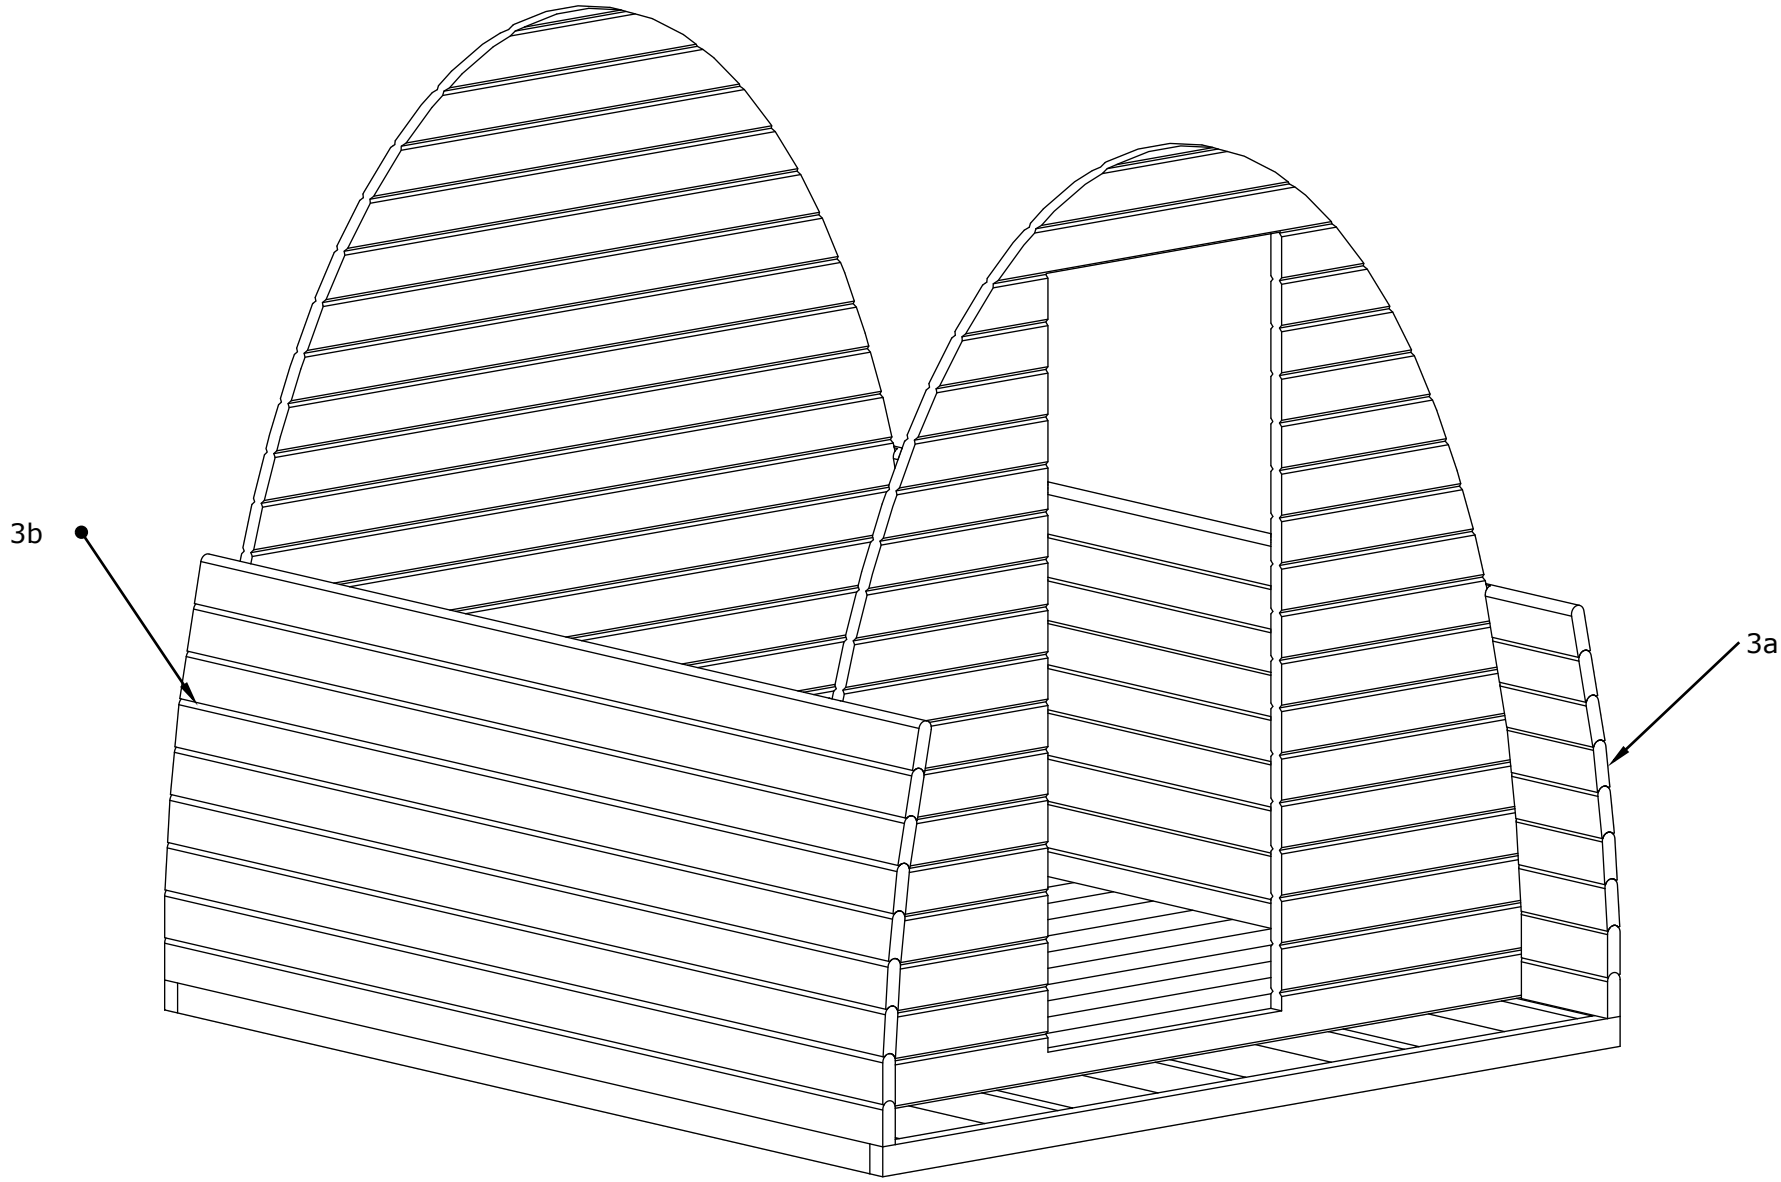


SAUNA POD 2,4x2,6 (termo)

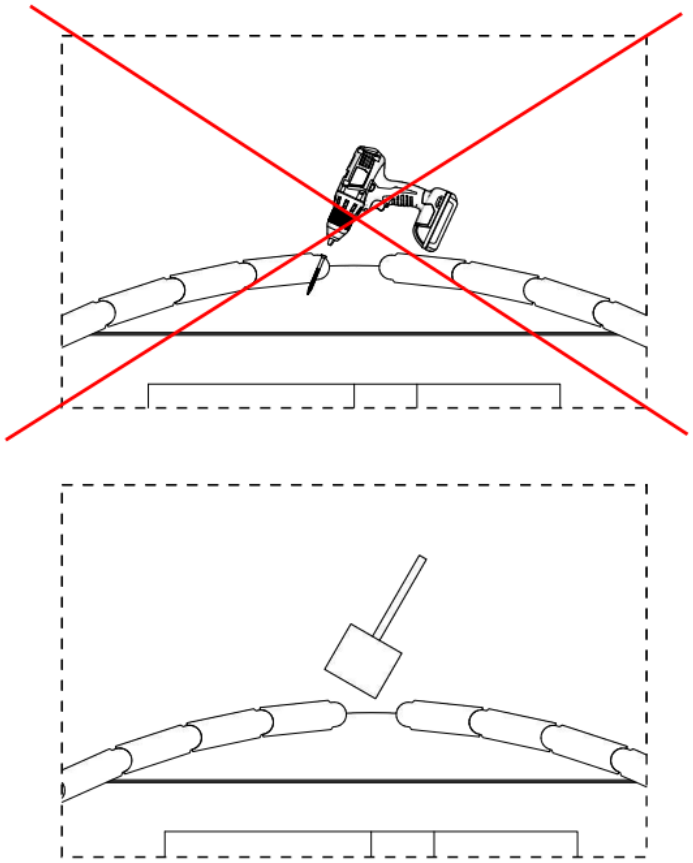


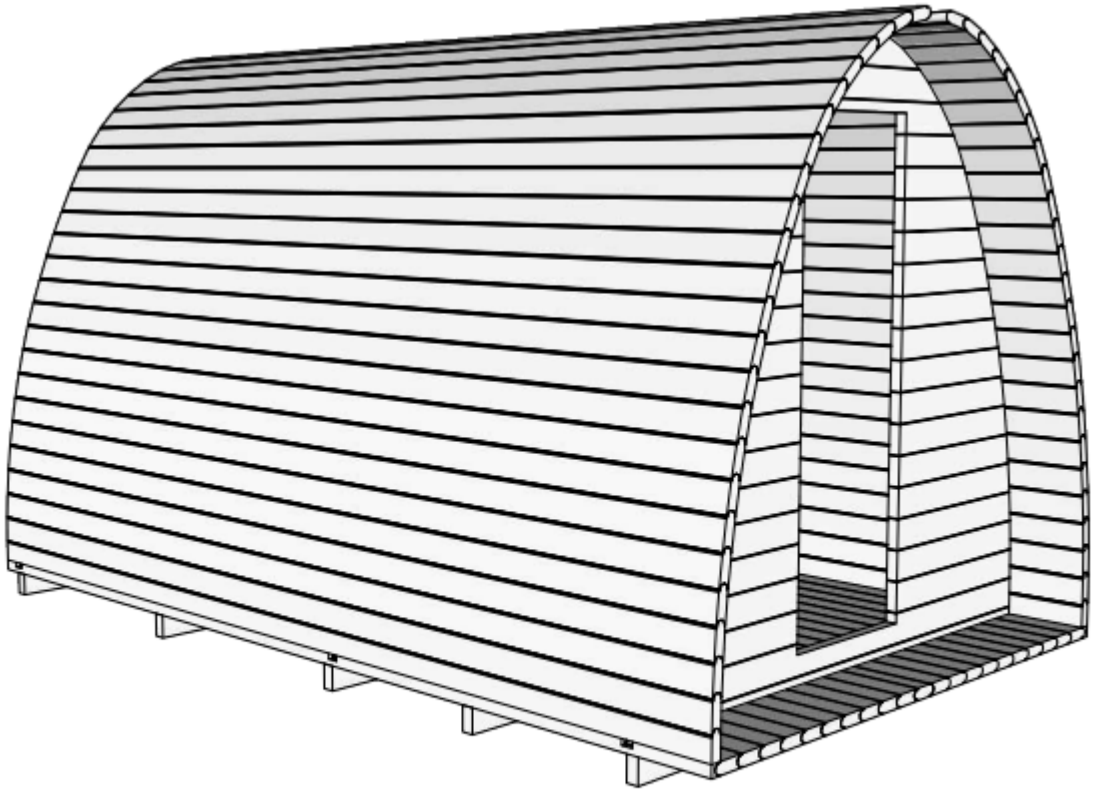


SAUNA POD 2,4x2,6 (termo)


Measure both ends, since they might differ

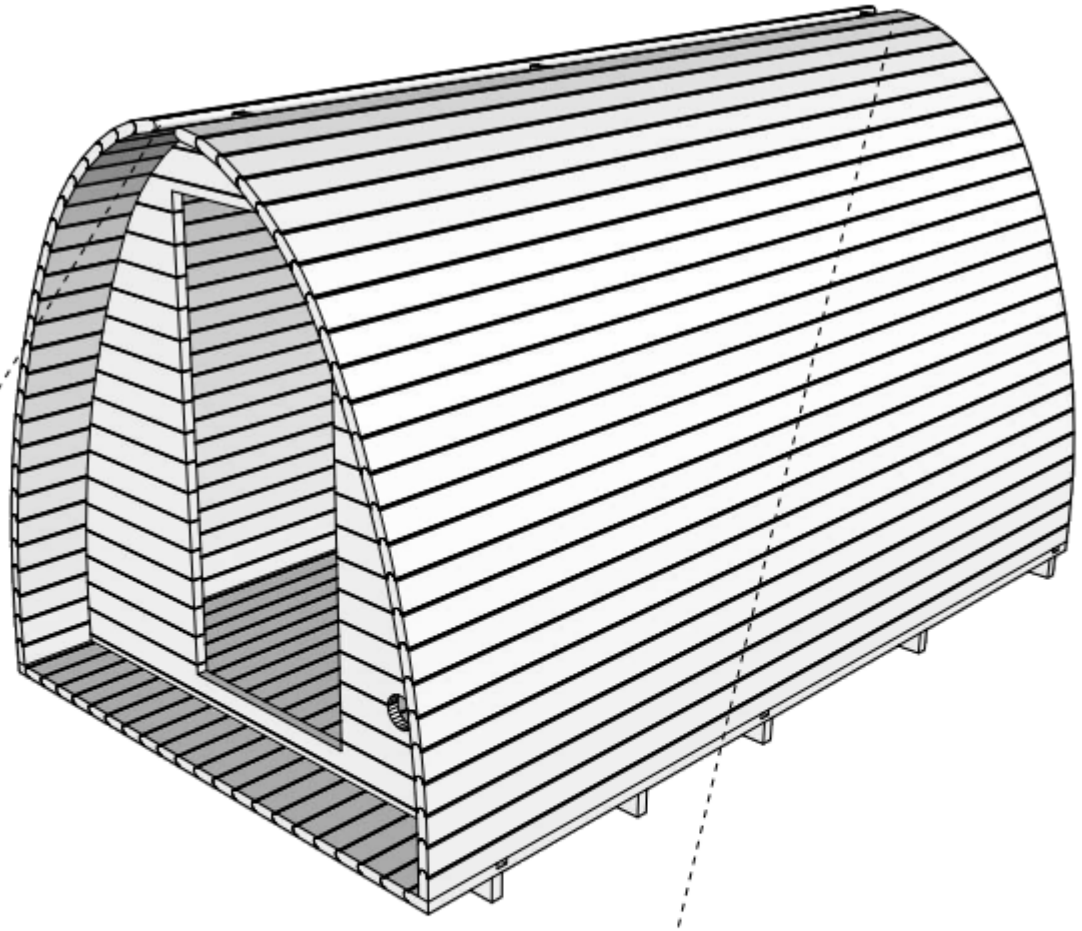


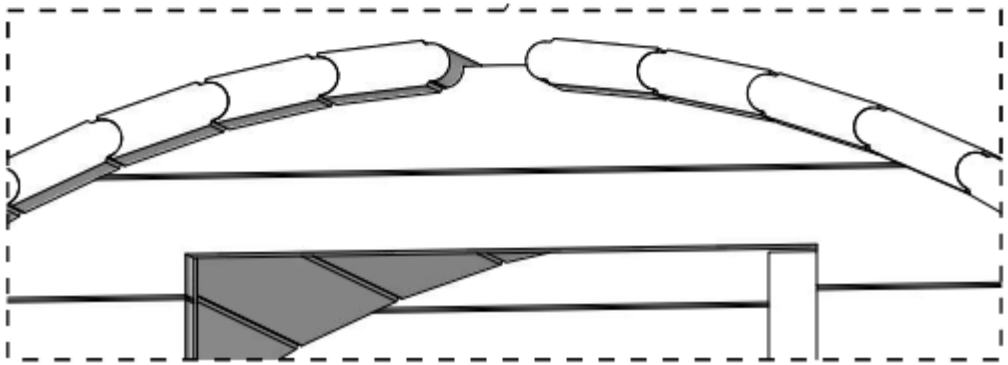

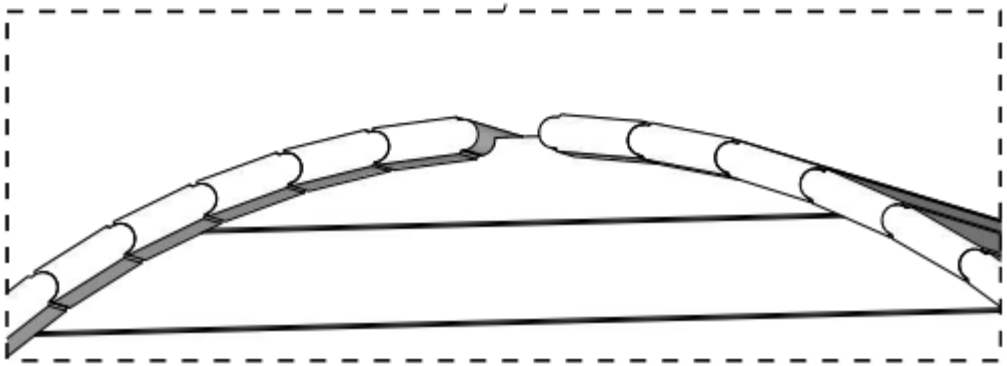


SAUNA POD 2,4x2,6 (termo)

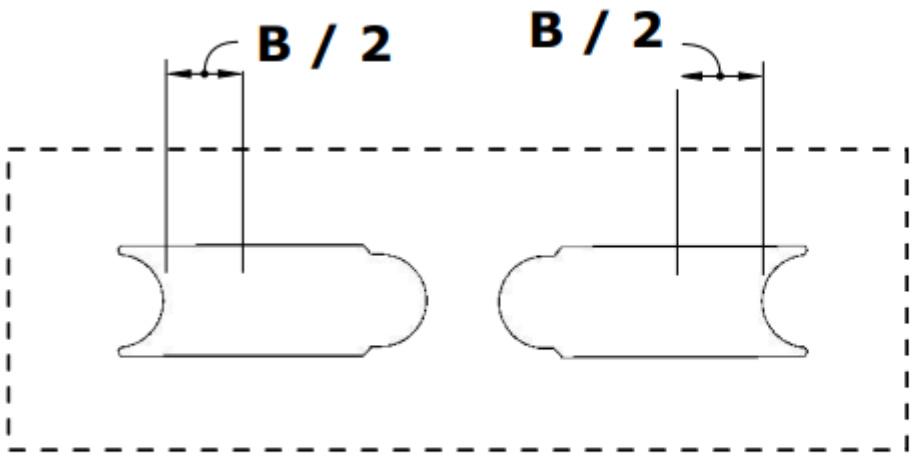

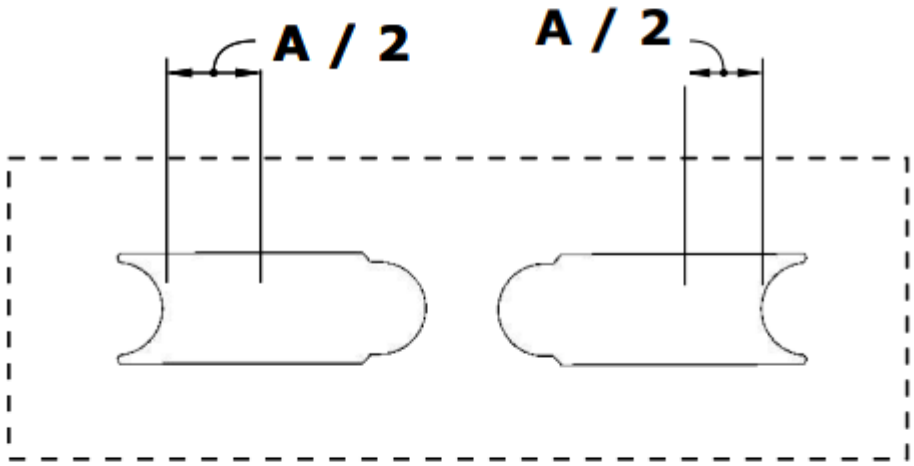



NB! Connect the points A-A and B-B before cutting

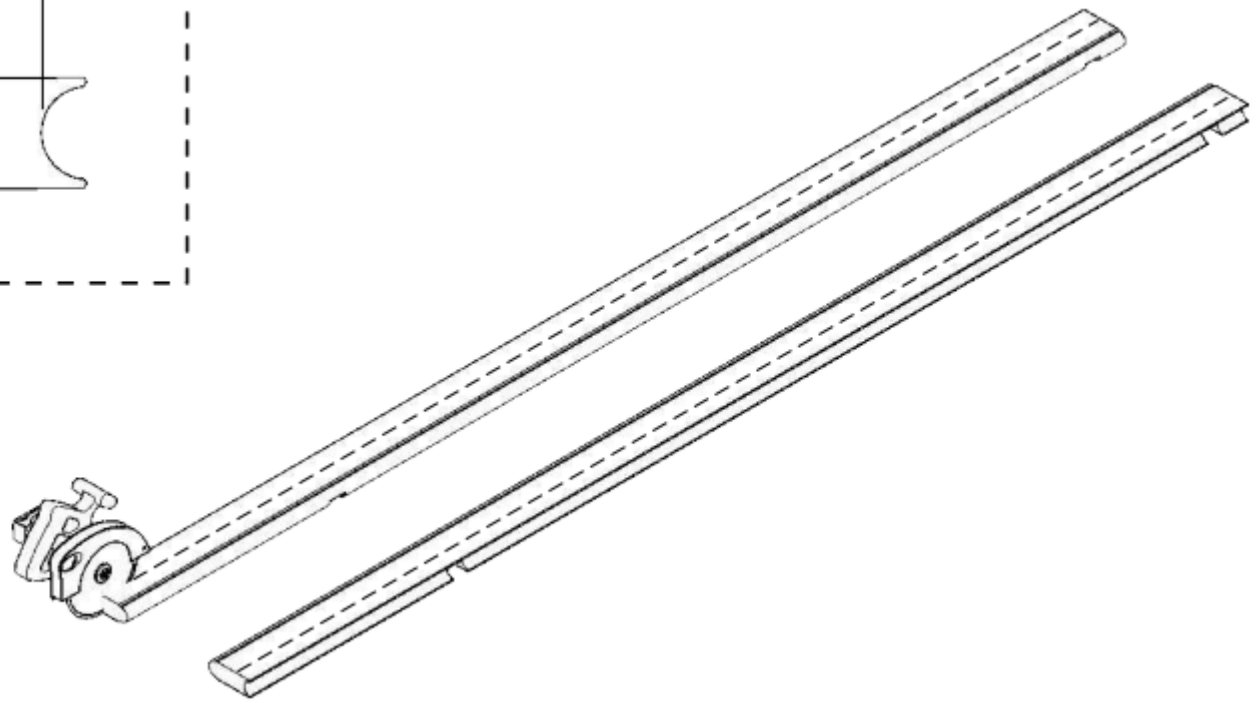


SPT24x26


SAUNA POD 2,4x2,6 (termo)

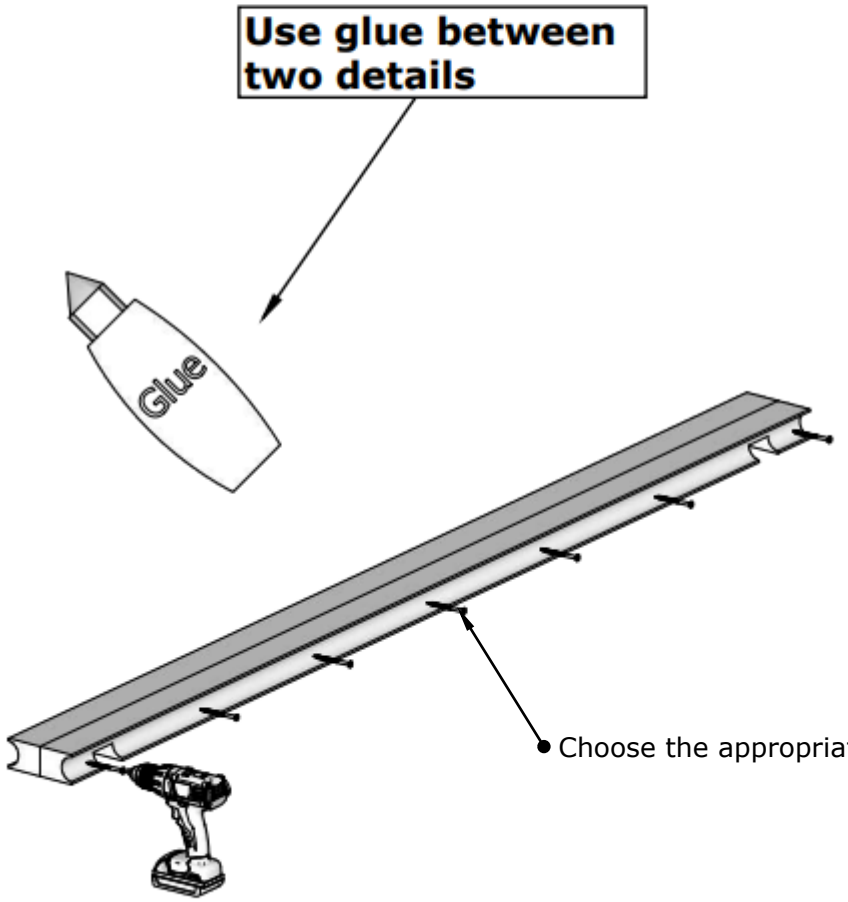

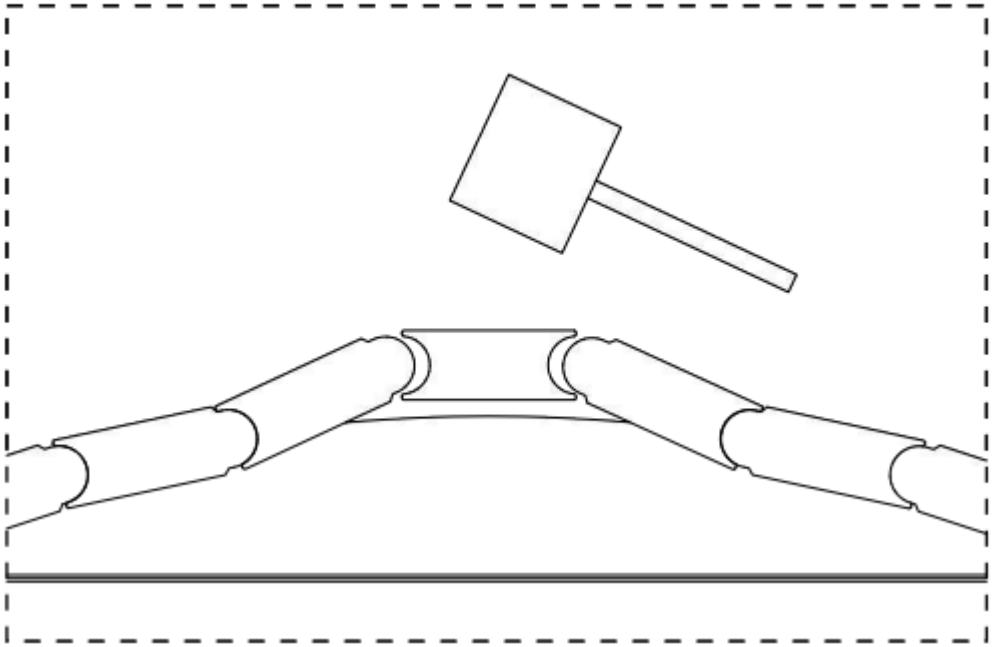

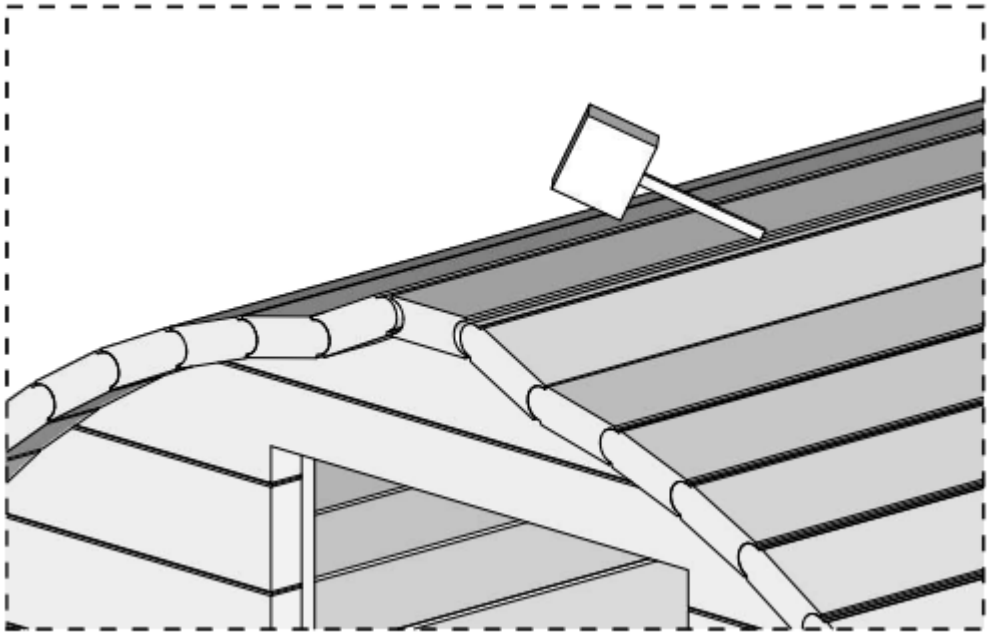


SAUNA POD 2,4x2,6 (termo)

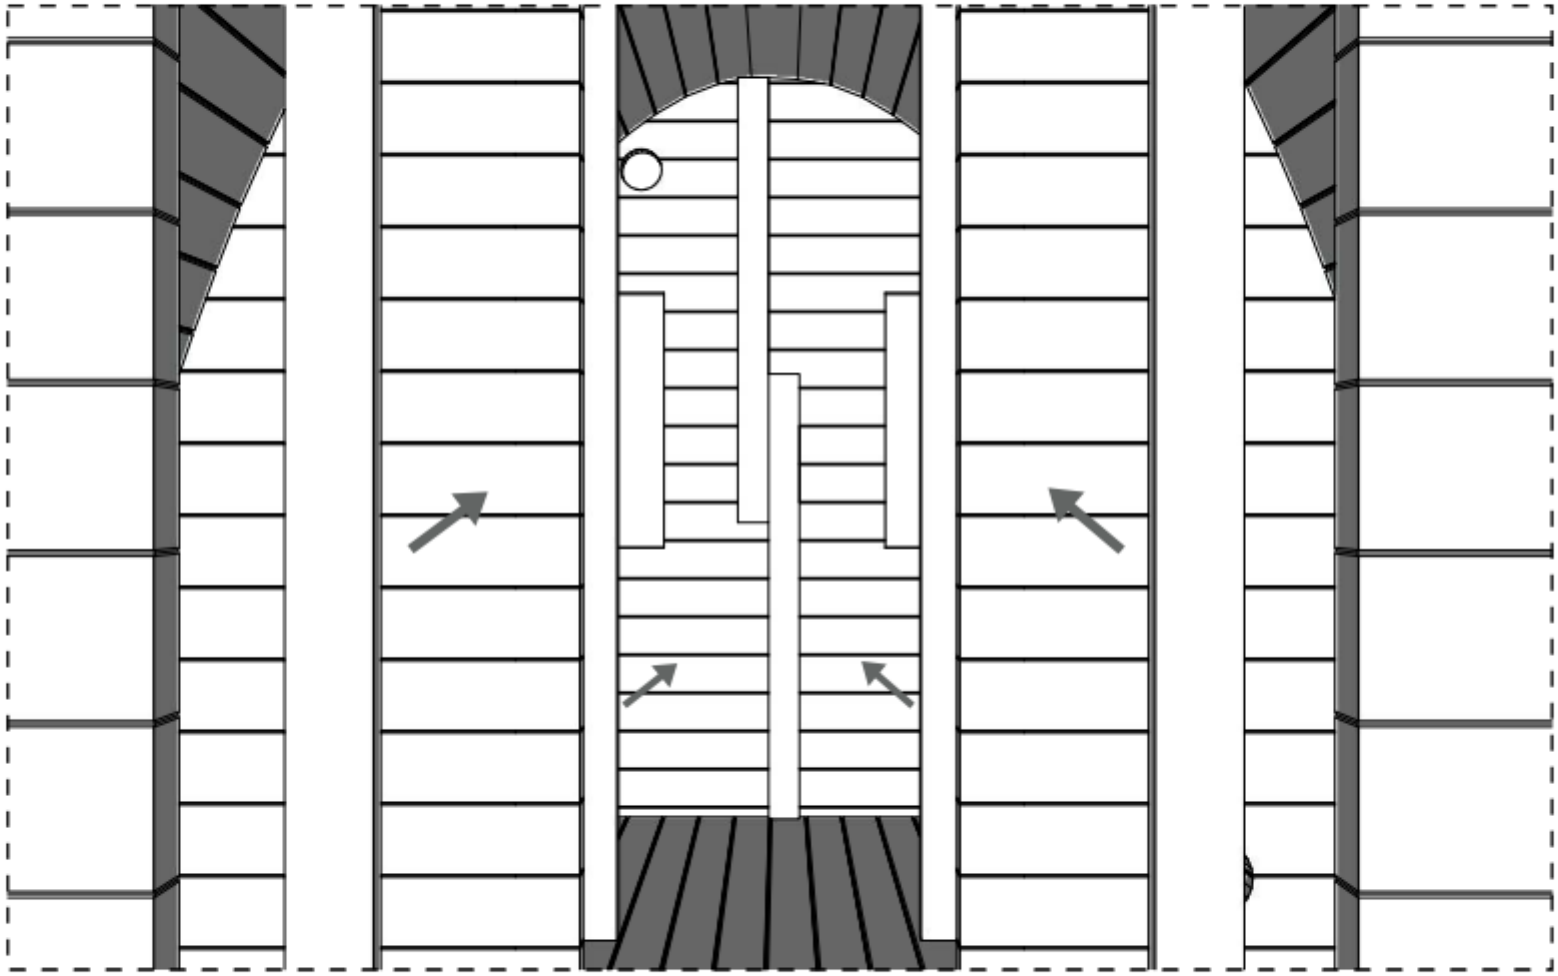

Remove brackets from all the walls


SAUNA POD 2,4x2,6


Install DET F from both sides of the wall with screws

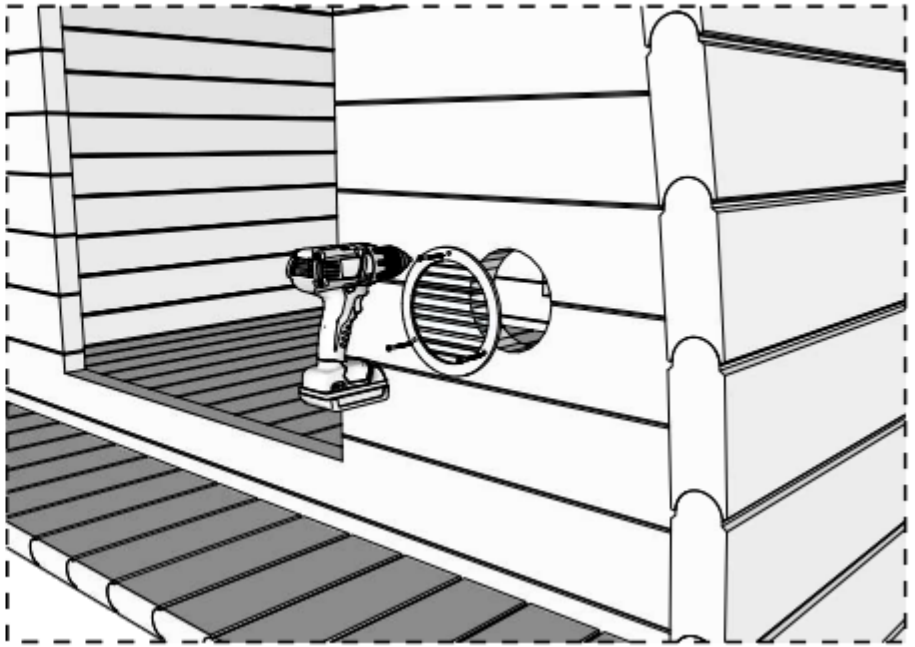

Install DET G from the inside with three 3x30 screws and DET F from the outside

3.5x40

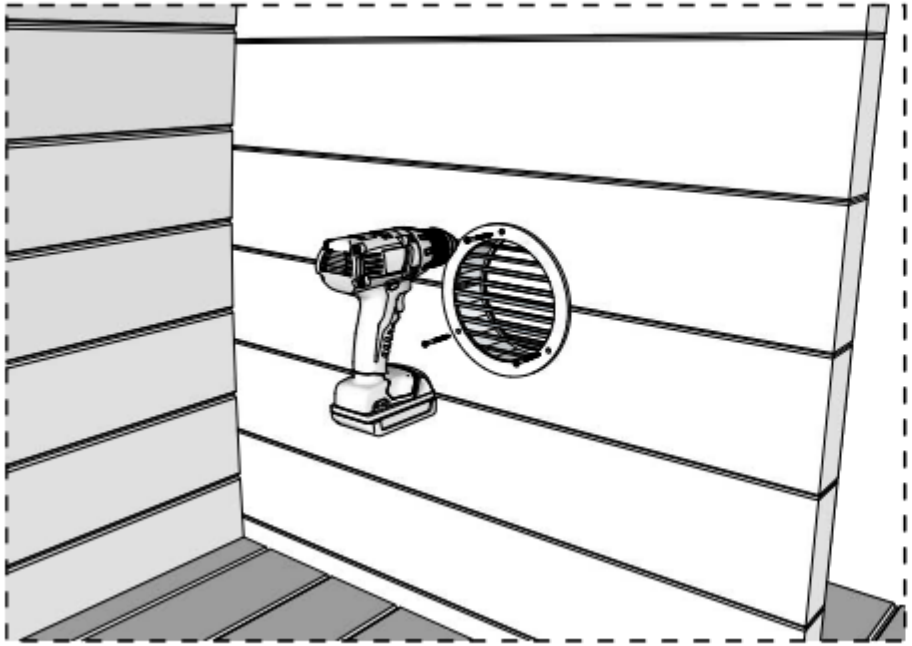

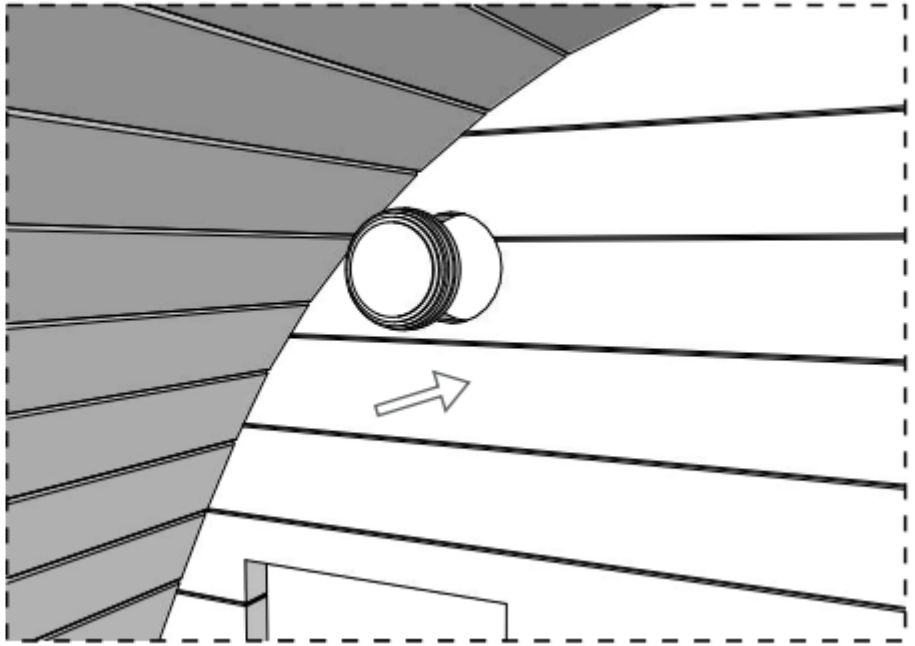

SAUNA POD 2,4x2,6 (termo)


Repeat on the other side

NB! Use level to install details




Use glue between supporting beams and wall



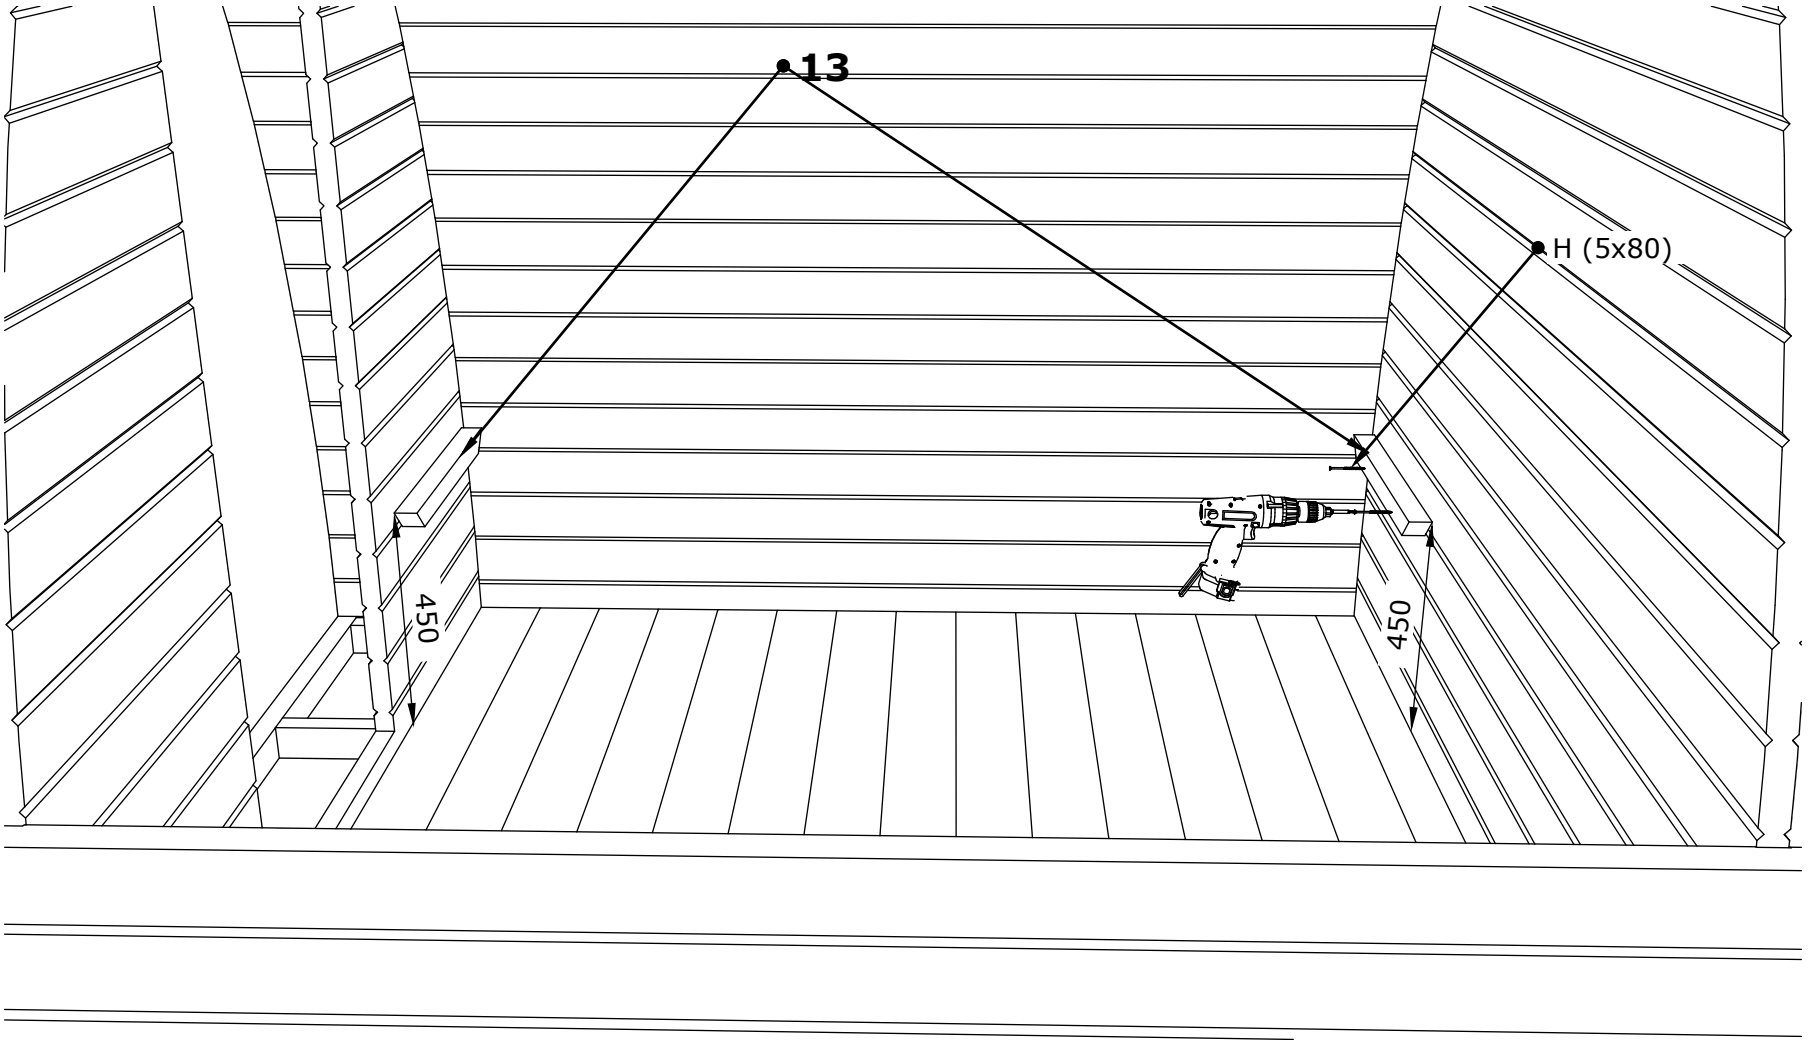


SAUNA POD 2,4x2,6 (termo)

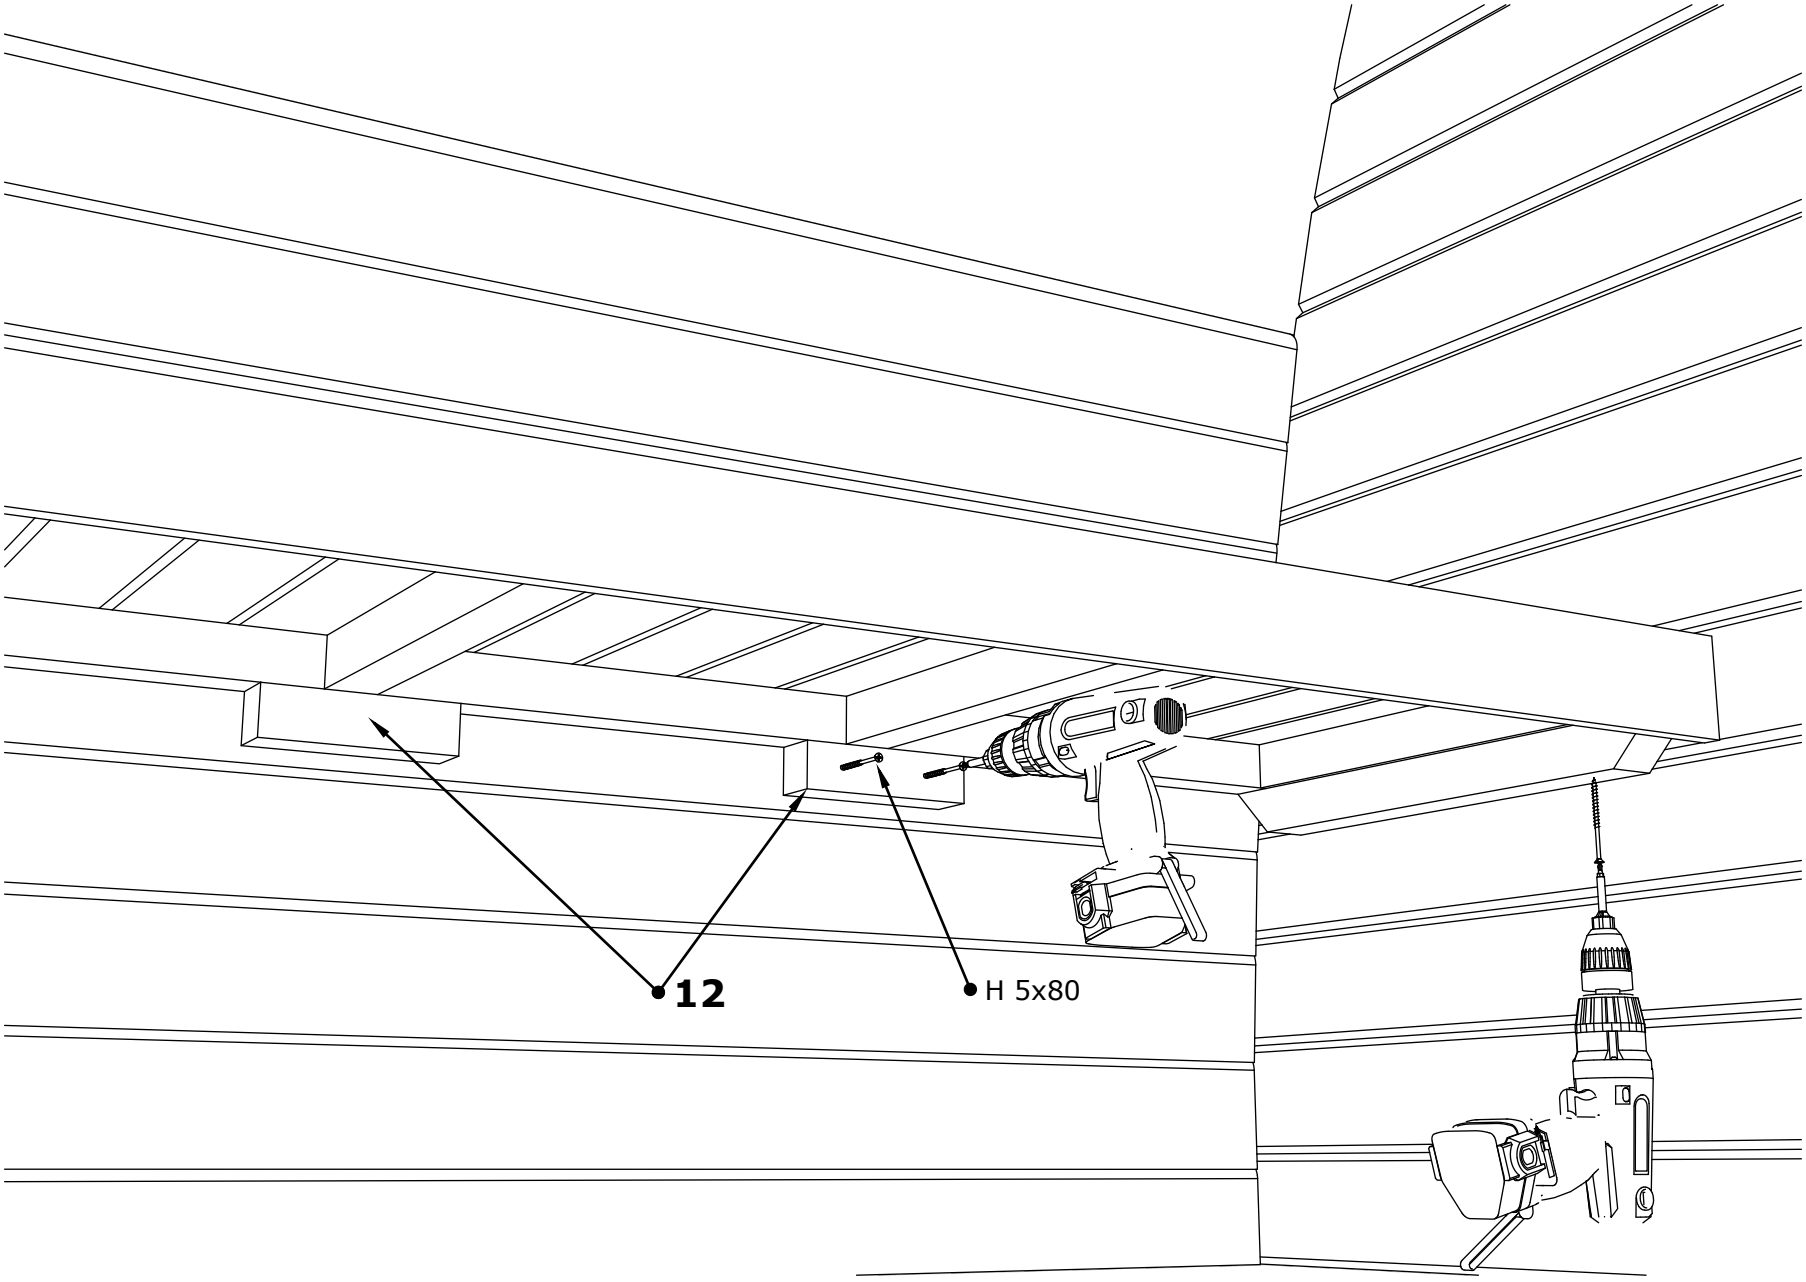


SAUNA POD 2,4x2,6 (termo)

Cut out window holes following the marked lines shown

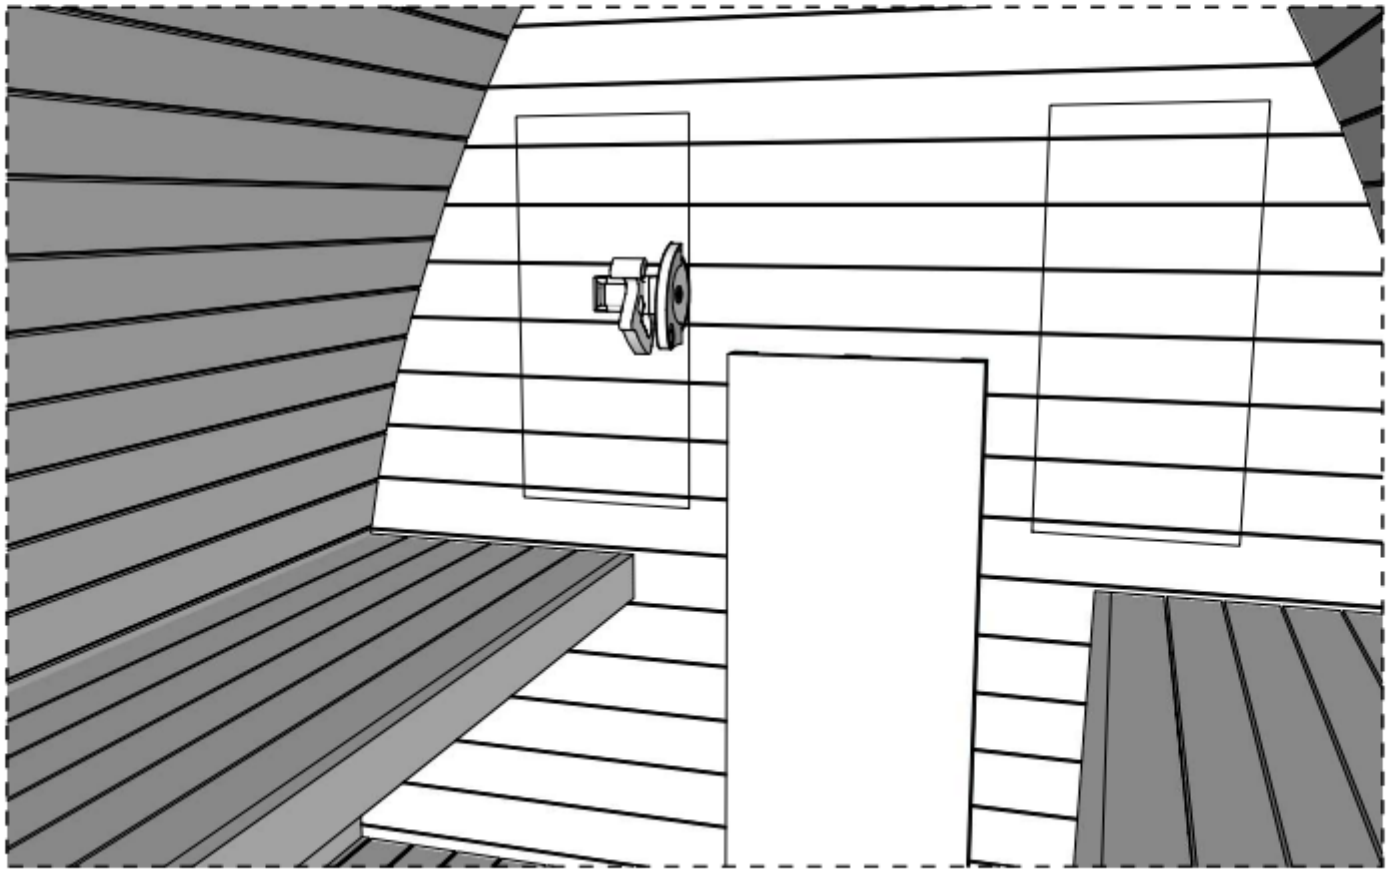


SAUNA POD 2,4x2,6 (termo)


Before fastening, drill holes in the profiles

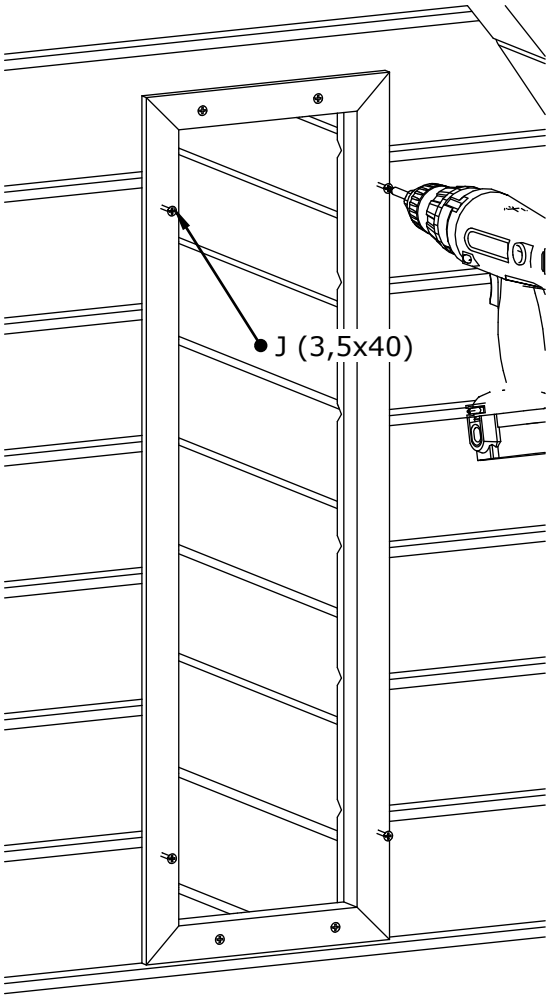


Seal the perimeter with silicone

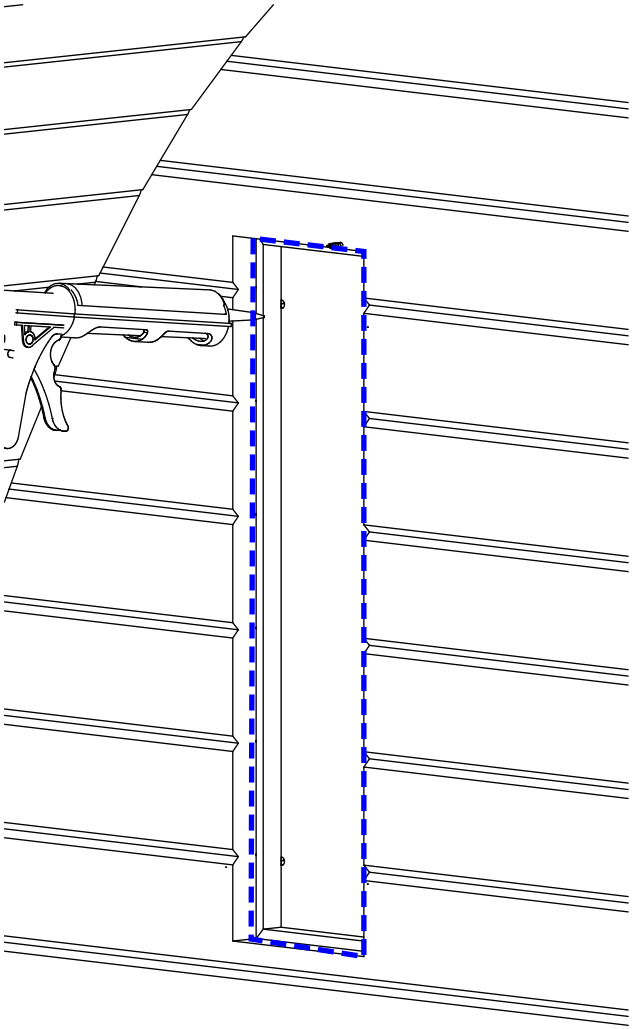


Install the glass ant screw the frame

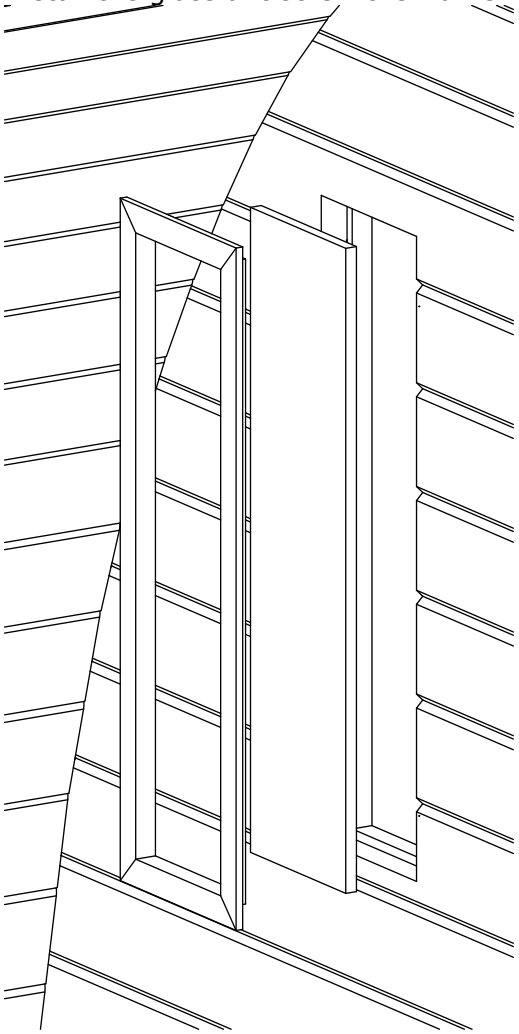

SAUNA POD 2,4x2,6 (termo)

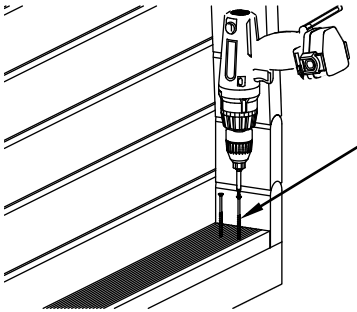


I (4x60)

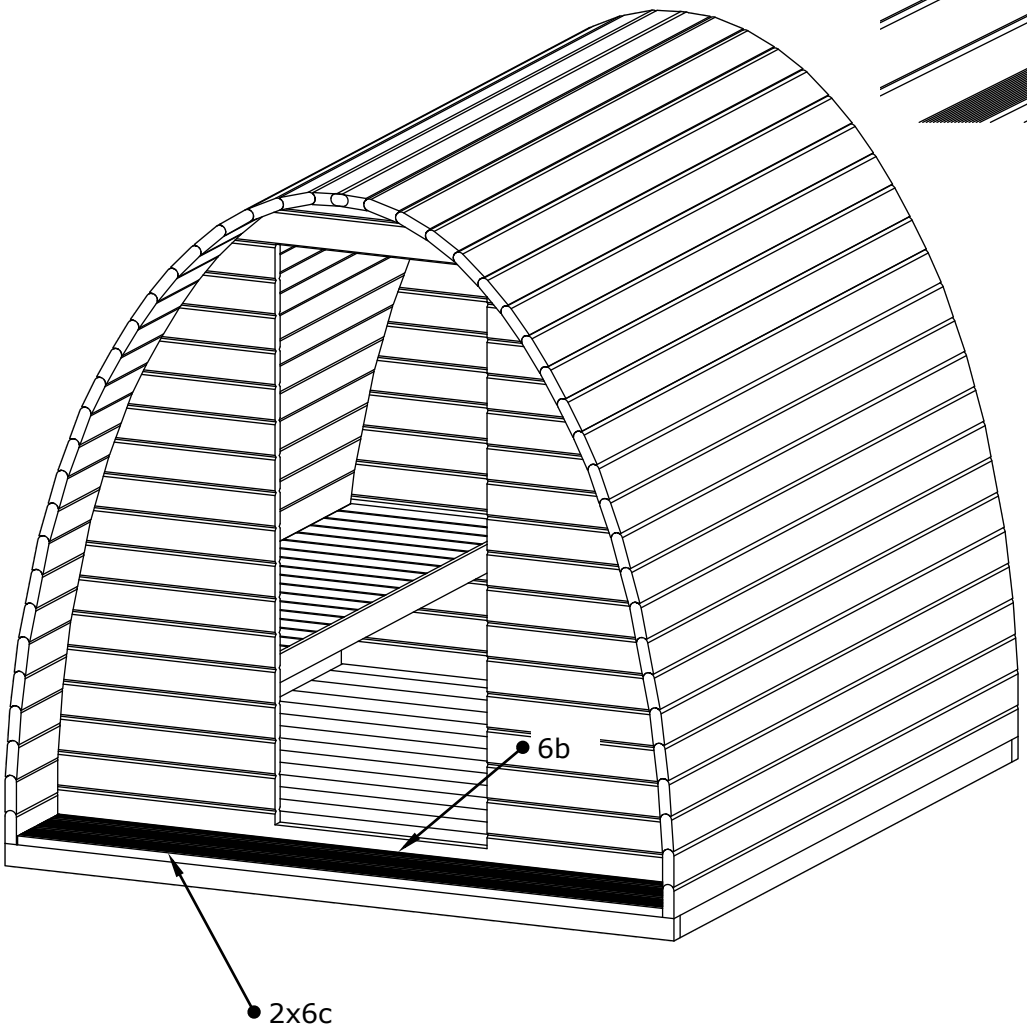

6b

2x6c

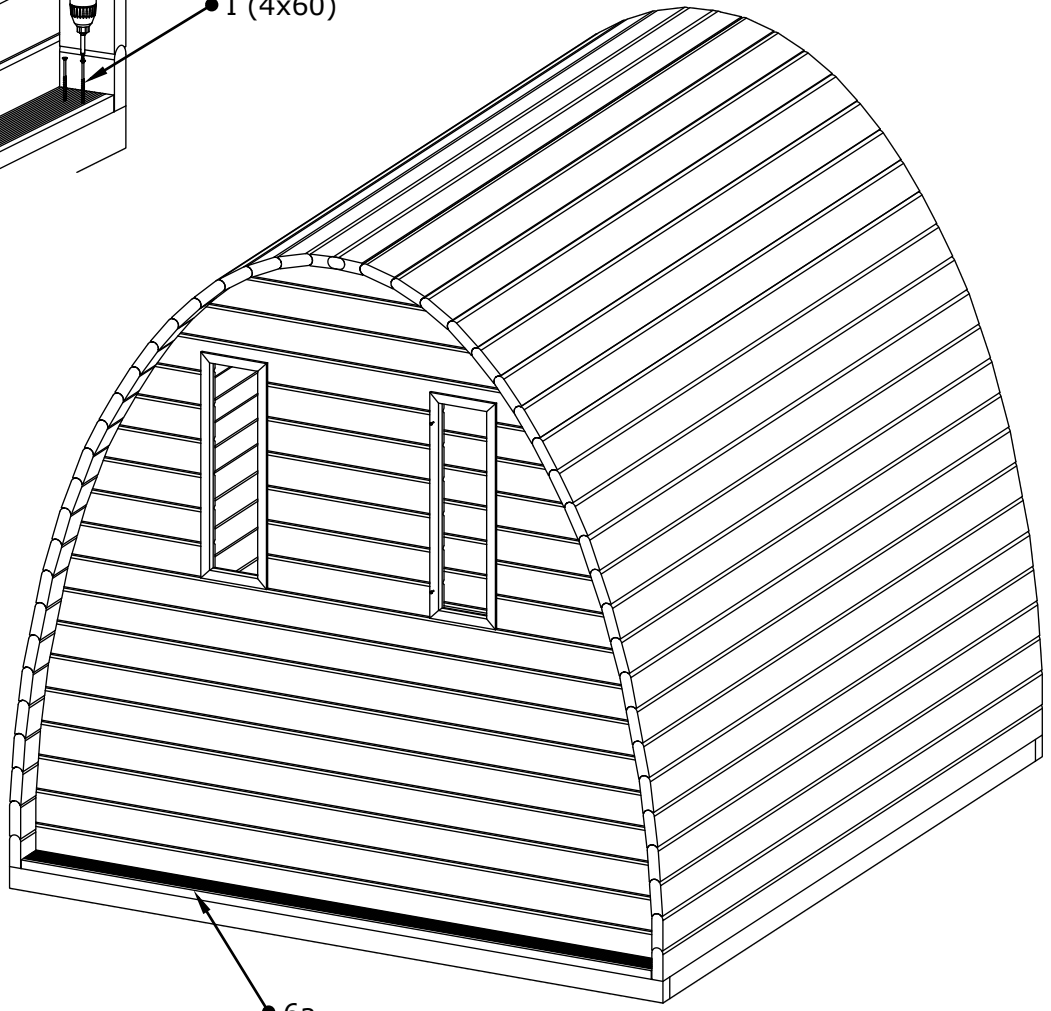

6a

SAUNA POD 2,4x2,6 (termo)


Install doors from the inside

NB! Fix a screw in every board


Install DET 7a

Install DET 7b


1

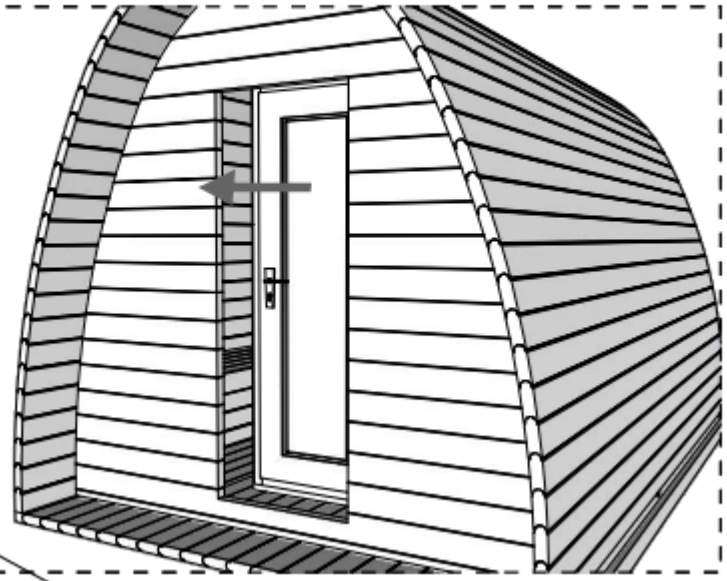

2

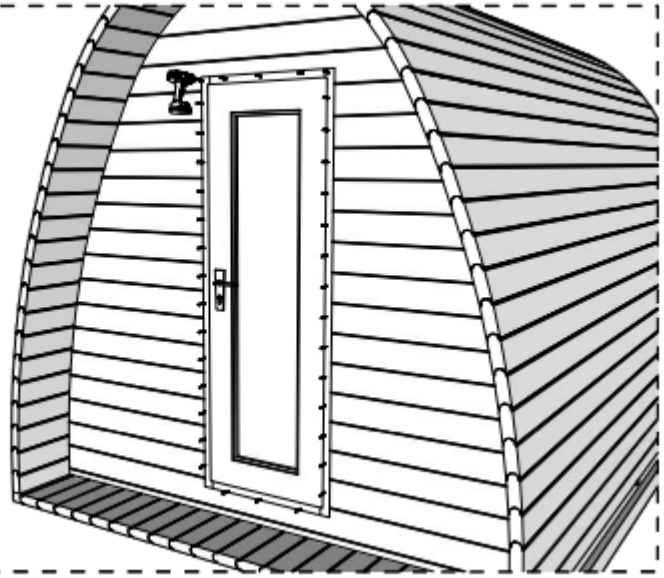



3

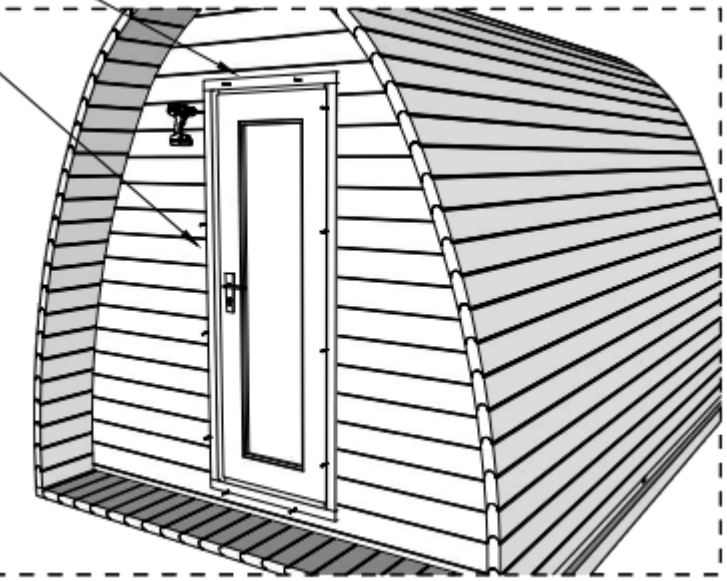

SAUNA POD 2,4x2,6 (termo)

Use the roof shingles manual for reference how to install the shingles properly

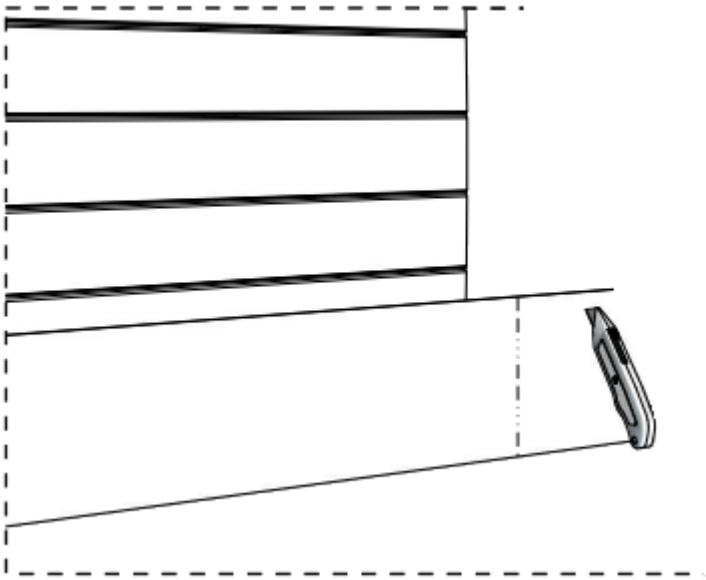

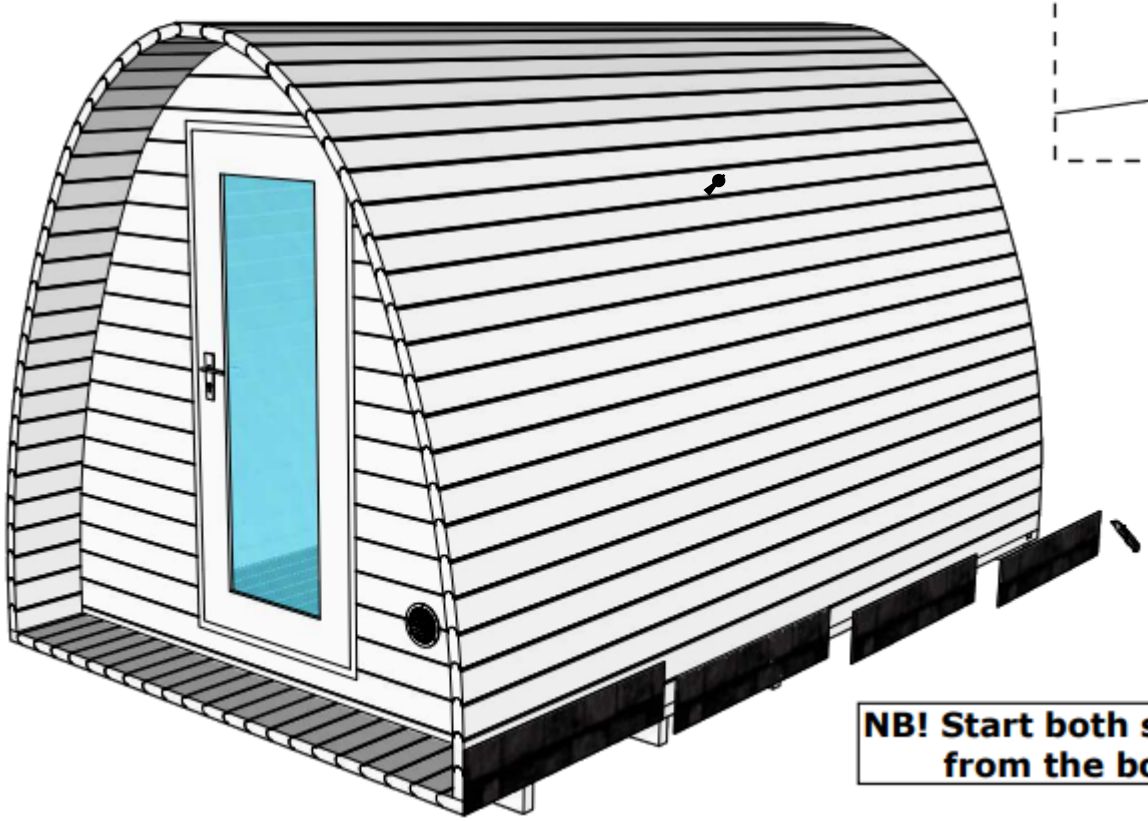


NB! Start both sides from the bottom




Use a knife to cut the excess parts of the roofing and use the excess to start the next row.


SAUNA POD 2,4x2,6 (termo)

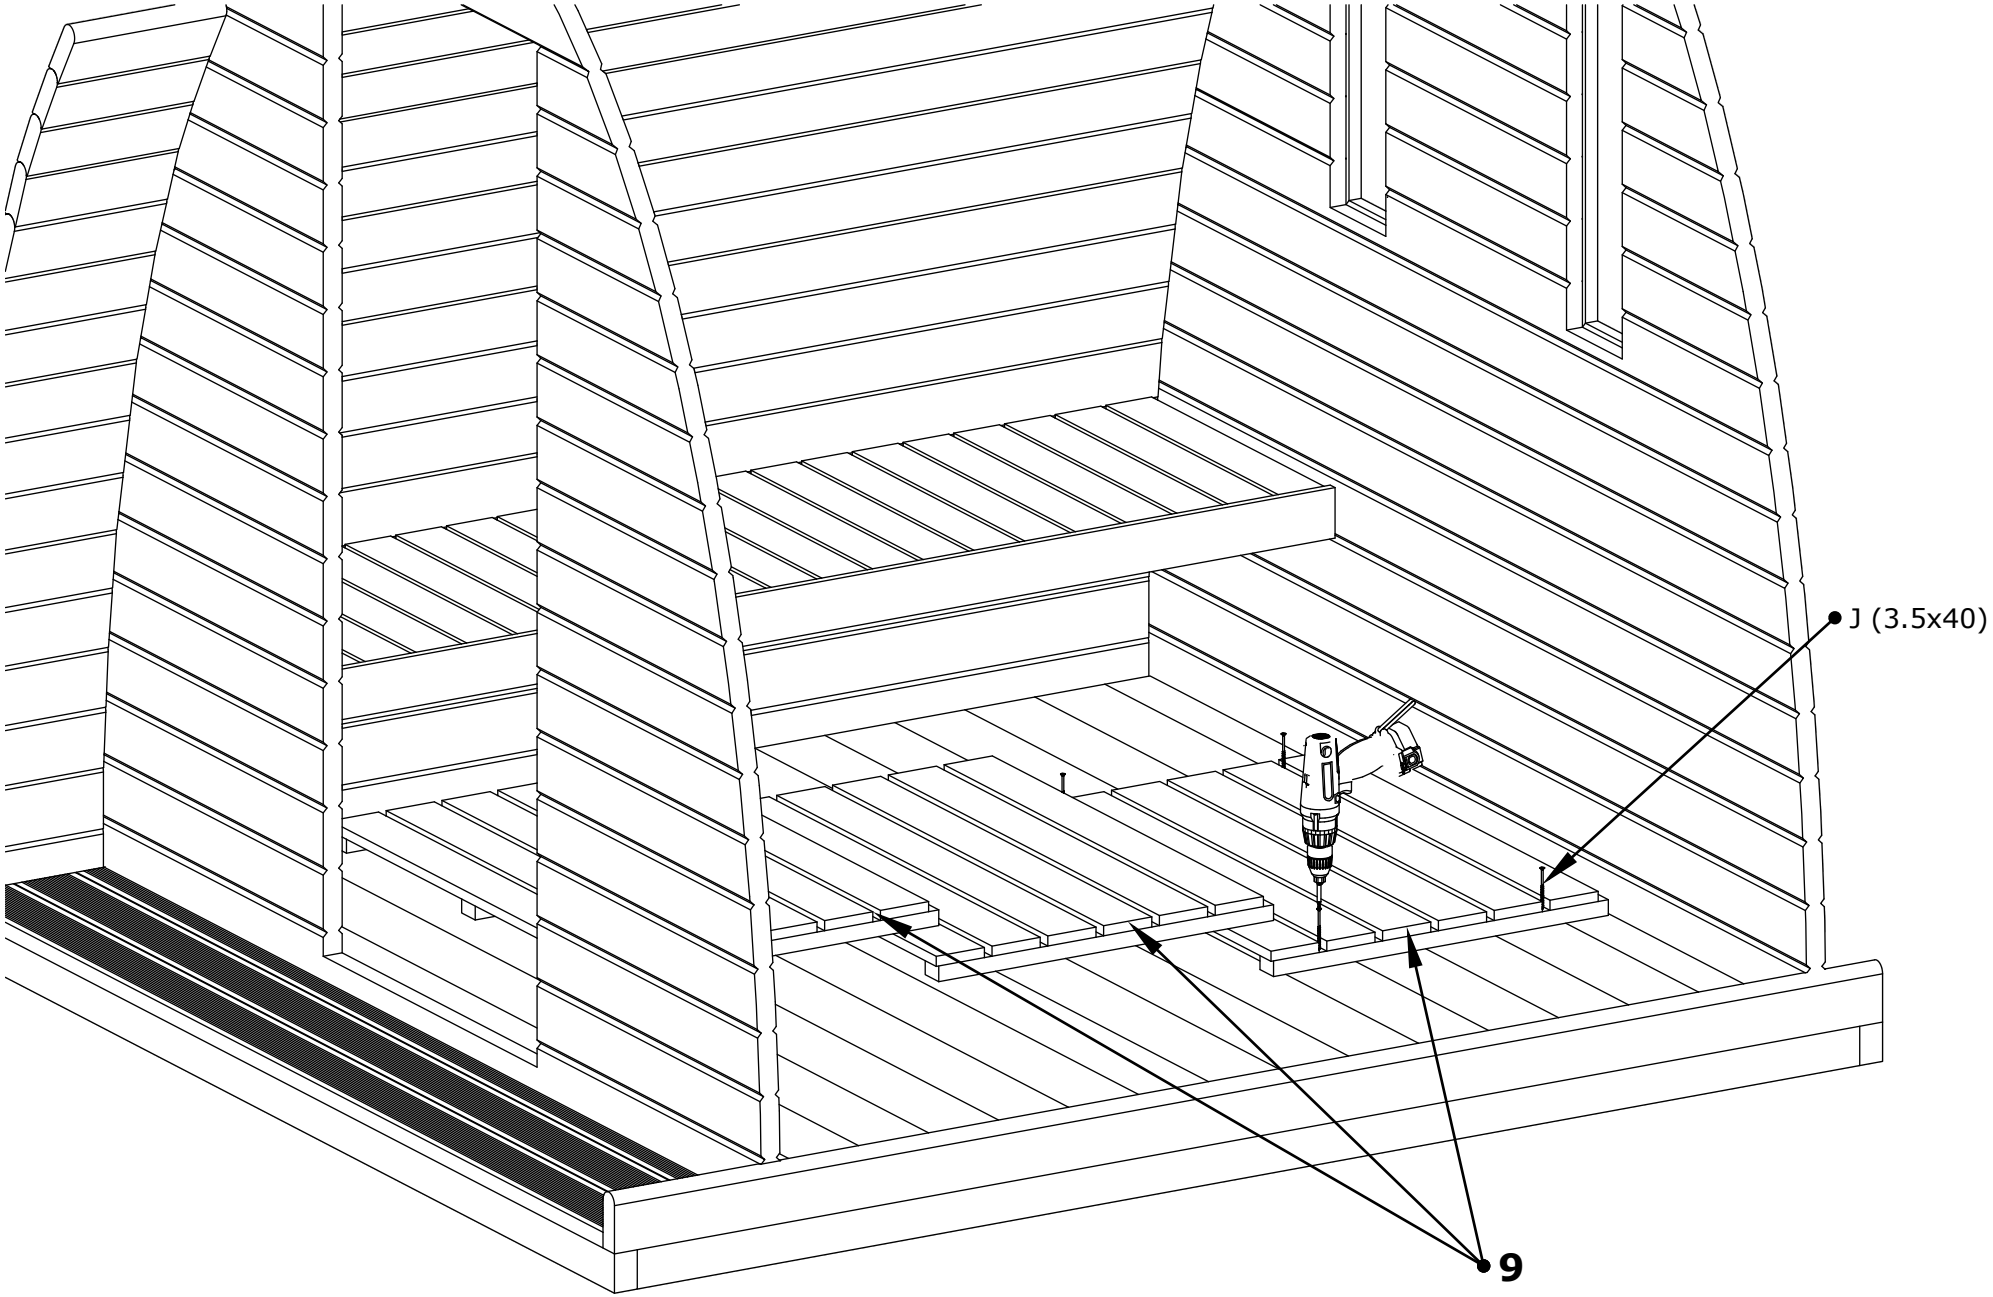

SAUNA POD 2,4x2,6 (termo)

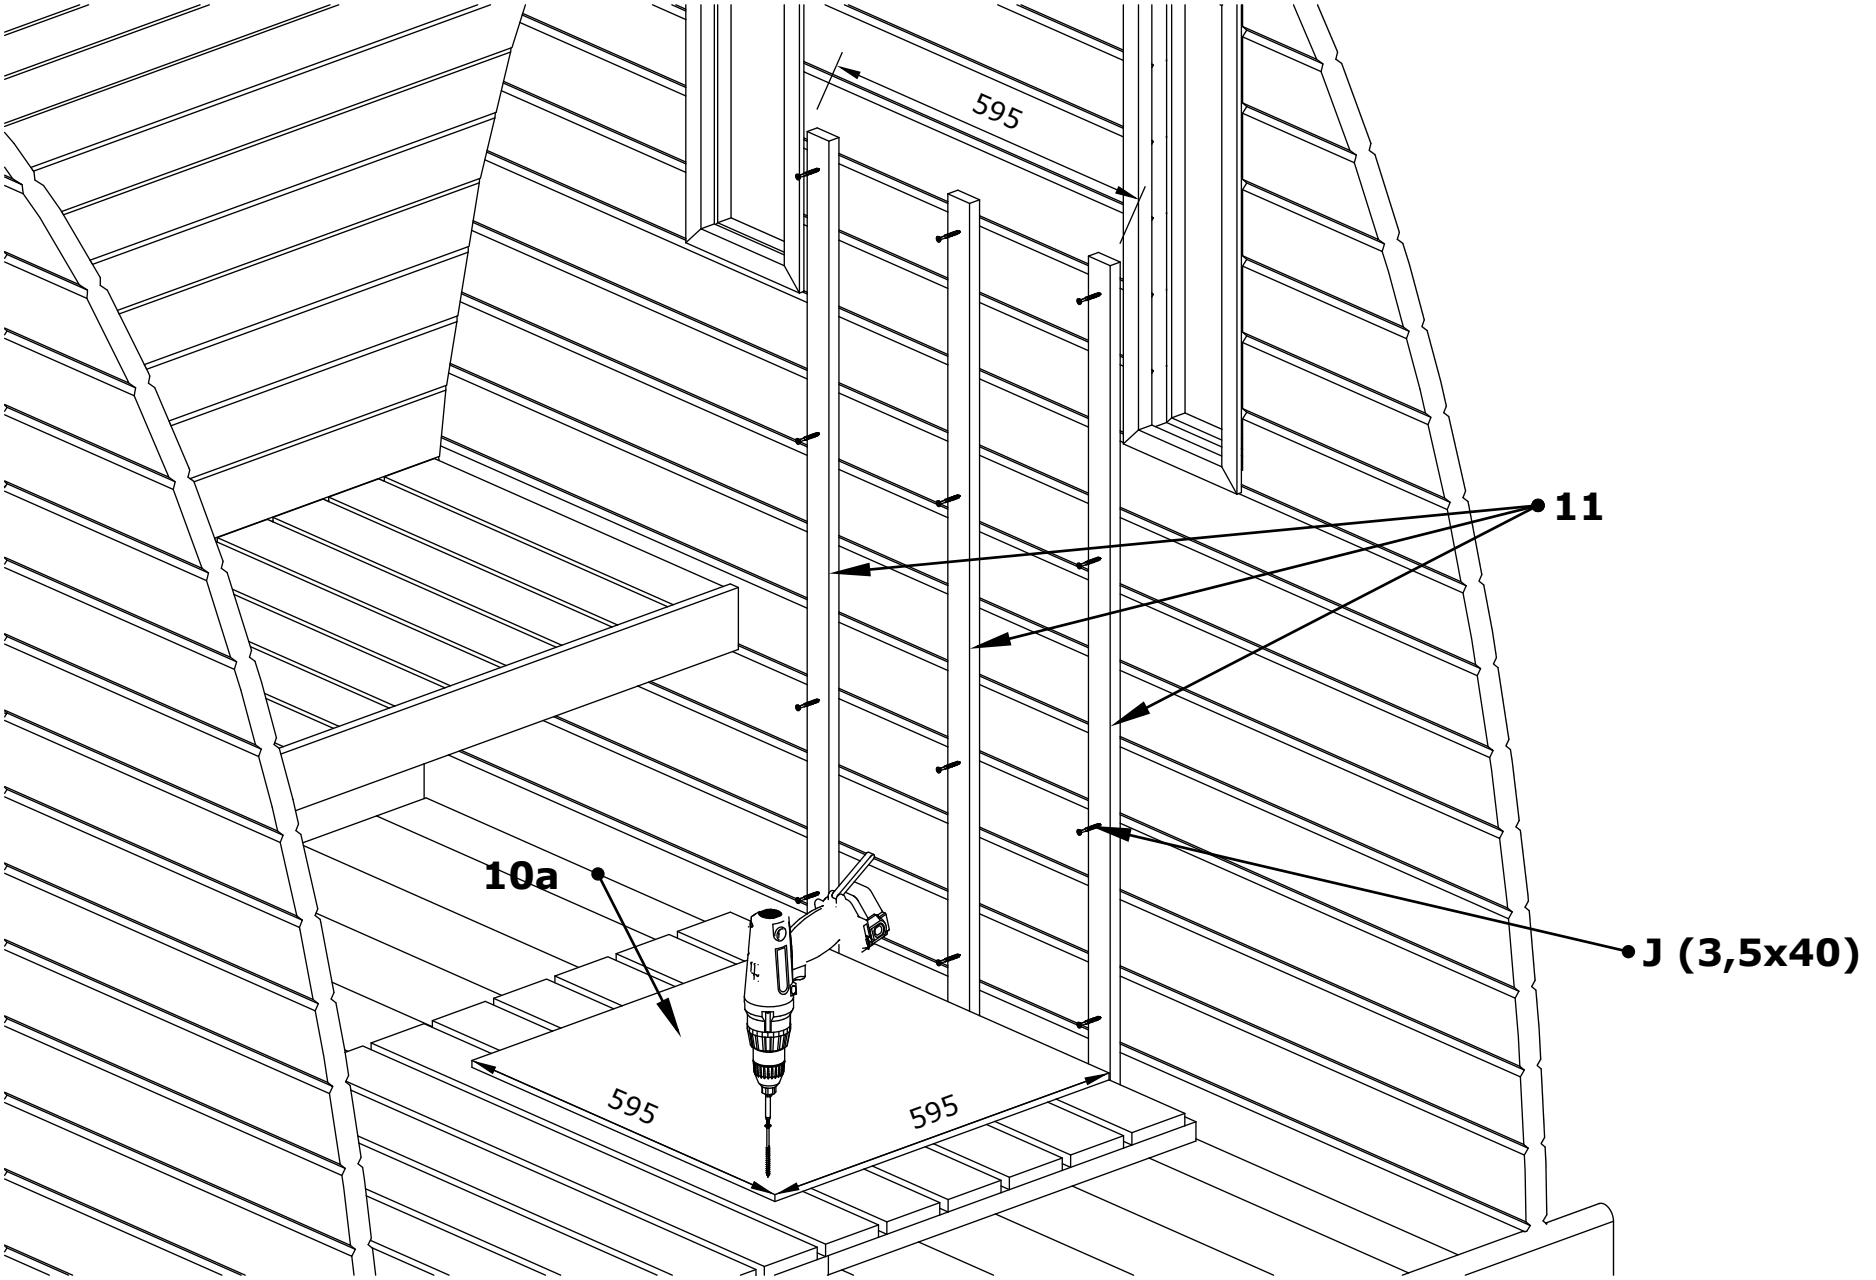



SAUNA POD 2,4x2,6 (termo)

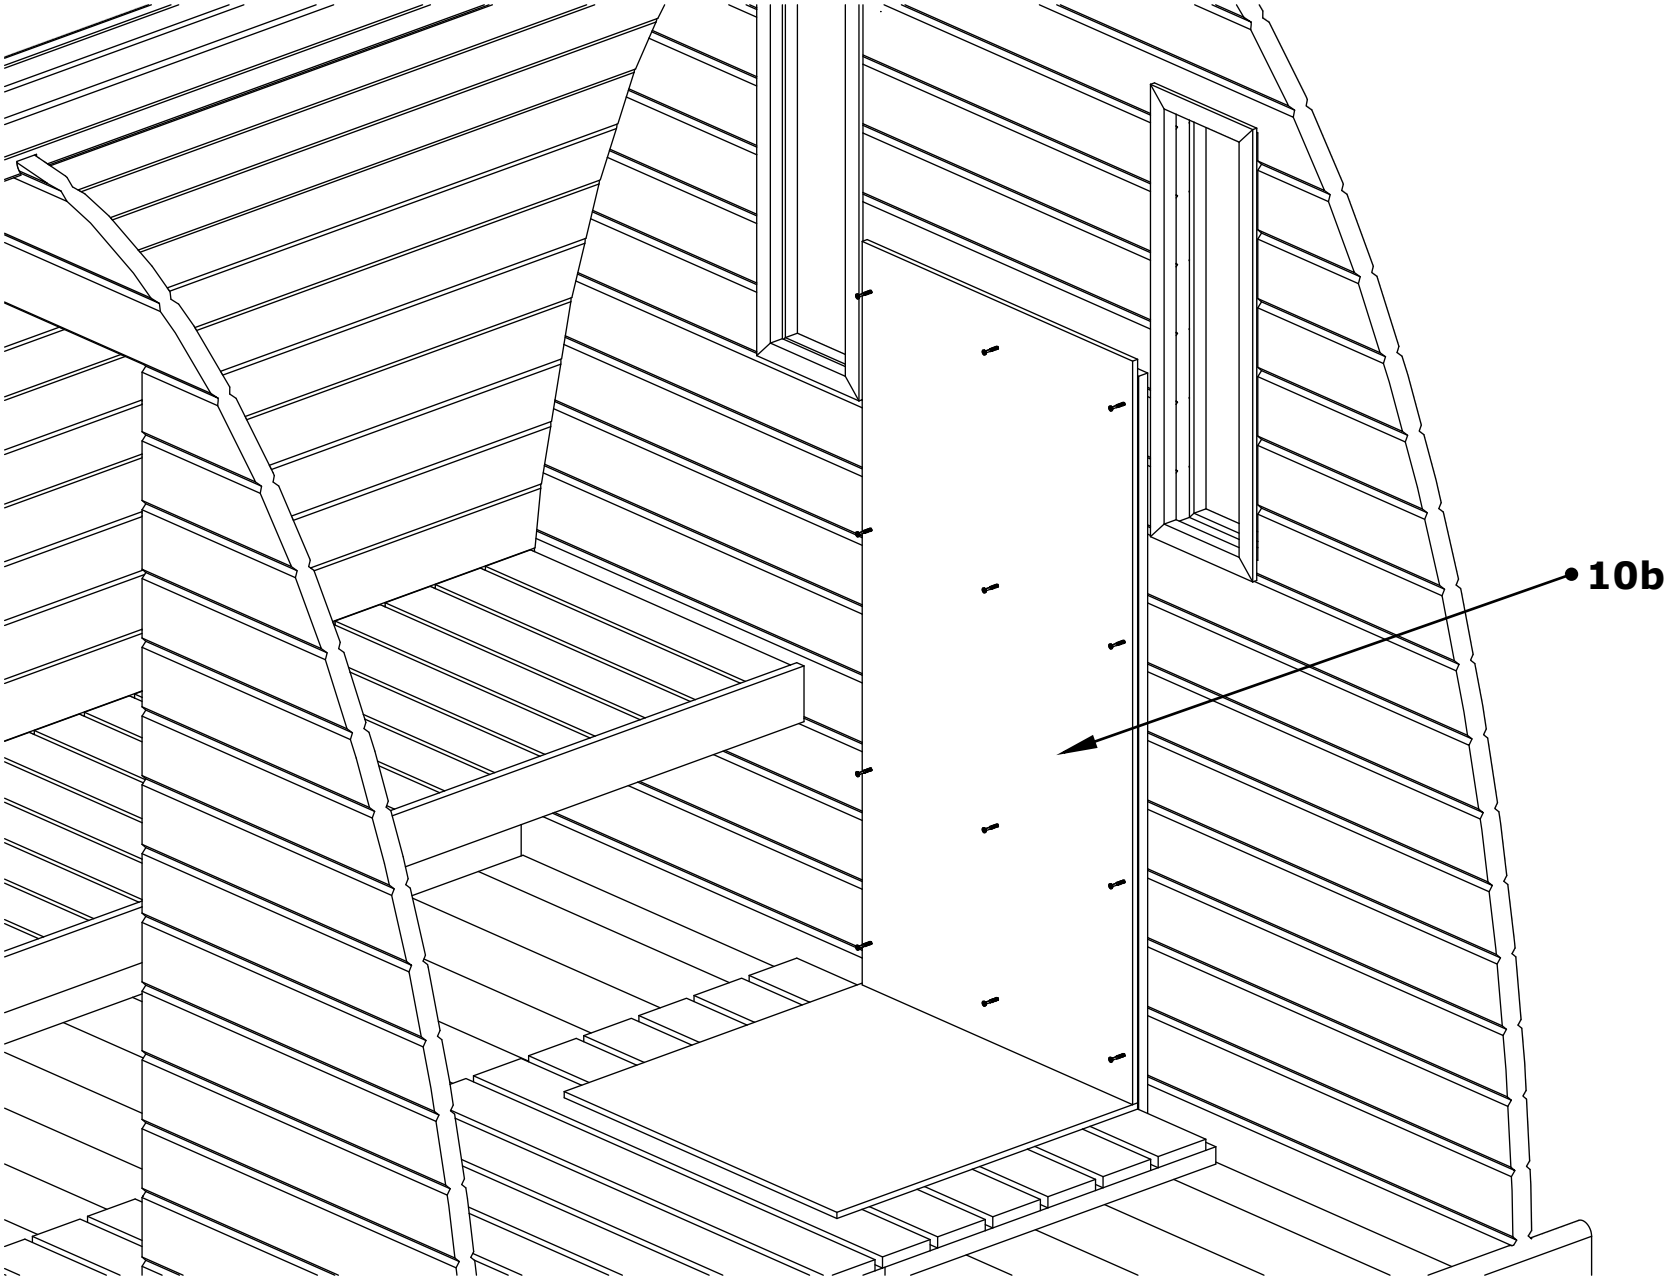

SAUNA POD 2,4x2,6 (termo)

Use 4 screws on longer and 3 screws on shorter pieces

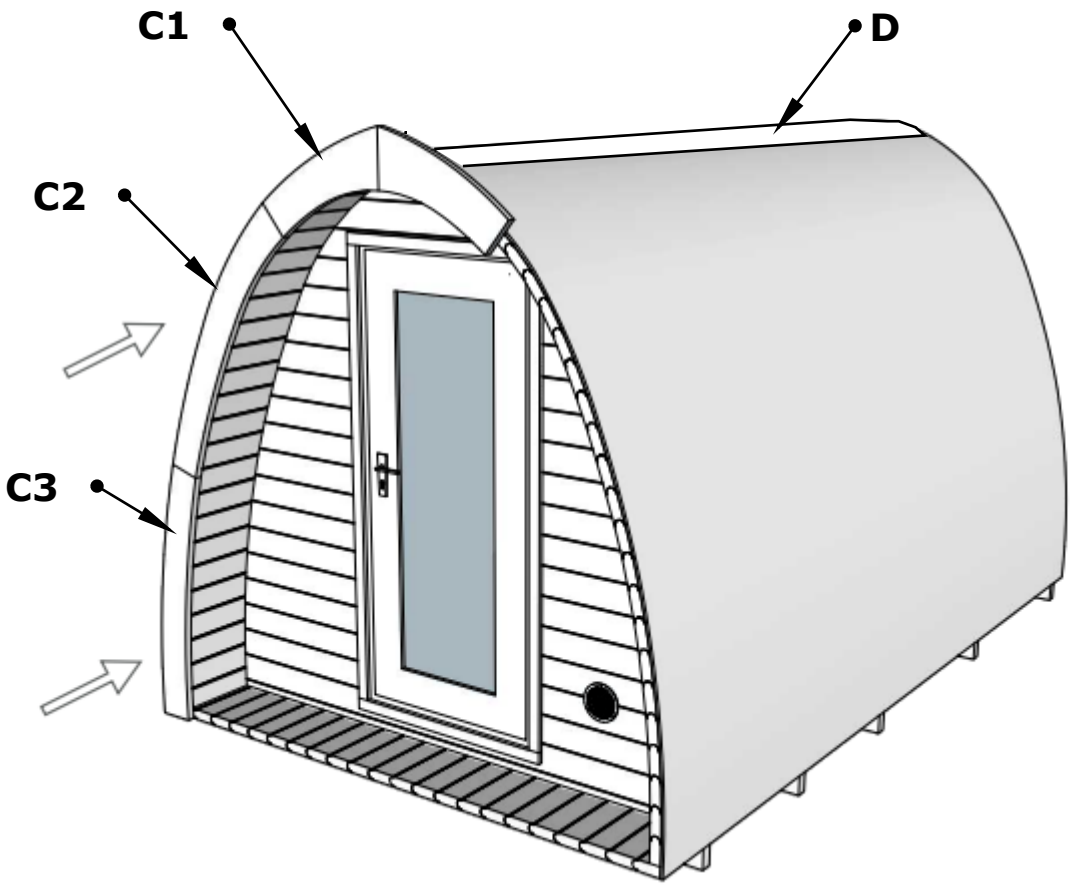

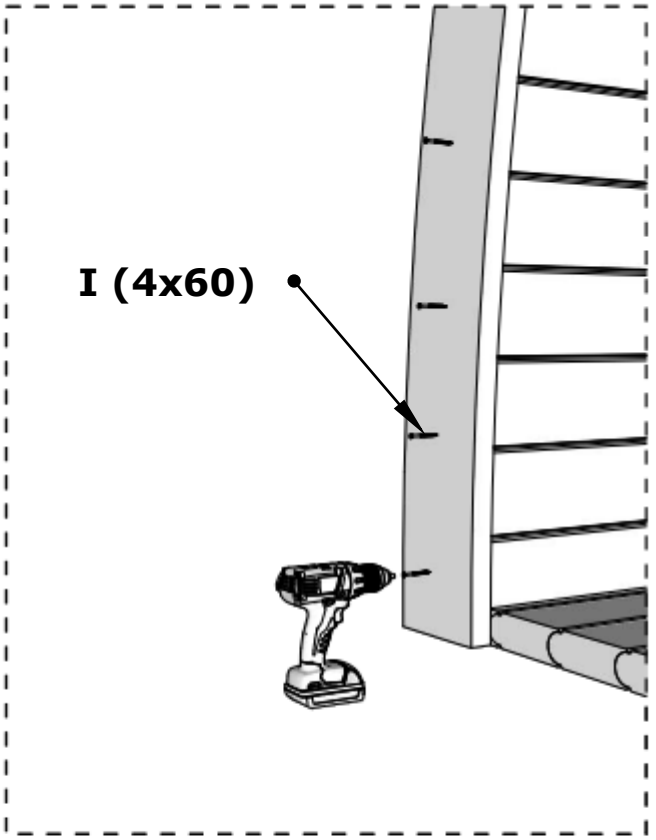

NB! Add cornice on both sides